

**PC-12/47E GENERAL - AIRCRAFT MAINTENANCE MANUAL DOCUMENT NO. 02300**

***LIST OF APPLICABLE DATA MODULES - REVISION 20***

<b>Table of Contents</b>	Page
PC-12/47E GENERAL - AIRCRAFT MAINTENANCE MANUAL DOCUMENT NO. 02300 - LIST OF APPLICABLE DATA MODULES - REVISION 20.....	1

<b>Index of Tables</b>	Page
1      References.....	1

***References***

*Table 1 References*

Data module/Technical publication	Title
None	

***Description***

C = Changed data module

N = New data module

Document title	Data module code	Issue date	Effectivity
PC-12/47E GENERAL - AIRCRAFT MAINTENANCE MANUAL DOCUMENT NO. 02300 - LIST OF APPLICABLE DATA MODULES - REVISION 20	<u>12-B-00-00-00-00A-002A-A</u>	C 2018-11-29	ALL
PC-12/47E GENERAL - AIRCRAFT MAINTENANCE MANUAL - CHANGE HIGHLIGHTS - REVISION 20	<u>12-B-00-00-00-00A-003A-A</u>	C 2018-11-29	ALL
PC-12/47E - AMM LIST OF REVISIONS	<u>12-B-00-00-00-00A-004A-A</u>	C 2018-11-29	ALL
PC-12/47E - AMM LIST OF TEMPORARY REVISIONS	<u>12-B-00-00-00-00A-006A-A</u>	C 2018-11-29	ALL
GENERAL - LIST OF ABBREVIATIONS	<u>12-B-00-00-00-00A-005A-A</u>	C 2018-11-29	All
GENERAL - INTRODUCTION	<u>12-B-00-00-00-00A-018A-A</u>	C 2018-11-29	ALL
GENERAL - LIST OF SOFTWARE	<u>12-B-00-00-00-00A-106A-A</u>	N 2018-11-29	All
SAFETY AND PROTECTIVE DEVICES - GENERAL WARNINGS AND CAUTIONS AND RELATED SAFETY DATA	<u>12-B-00-00-30-00A-012A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
PC-12/47E STRUCTURAL, COMPONENT AND MISCELLANEOUS LIMITATIONS - AMM DOCUMENT NO. 2300 - AIRWORTHINESS LIMITATIONS	<u>12-B-04-00-00-00A-000A-A</u>	2018-05-24	ALL
SCHEDULED / UNSCHEDULED MAINTENANCE - INTRODUCTION	<u>12-B-05-00-00-00A-018A-A</u>	2018-05-24	ALL
TIME LIMITS - INTRODUCTION	<u>12-B-05-10-00-00A-018A-A</u>	2018-05-24	ALL
OVERHAUL AND REPLACEMENT SCHEDULE - SCHEDULED INSPECTIONS	<u>12-B-05-10-10-00A-281A-A</u>	2017-07-19	ALL
TIME LIMITED INSPECTION REQUIREMENTS - SCHEDULED INSPECTIONS	<u>12-B-05-10-20-00A-281A-A</u>	C 2018-11-29	ALL
LEP I AND II AFFECTED STRUCTURAL COMPONENTS - GENERAL	<u>12-B-05-10-30-00A-010A-A</u>	2017-07-19	All
SUPPLEMENTAL STRUCTURAL INSPECTION DOCUMENT - INSPECTIONS	<u>12-B-05-10-30-00A-280A-A</u>	C 2018-11-29	All
SCHEDULED MAINTENANCE CHECKLISTS - INTRODUCTION	<u>12-B-05-20-00-00A-018A-A</u>	2018-05-24	ALL
JOB SET UP / CLOSE UP - GENERAL MAINTENANCE PROCEDURE	<u>12-B-05-20-00-00A-913A-A</u>	C 2018-11-29	ALL
MASTER MAINTENANCE PLAN - FUNCTION, DATA FOR PLANS AND DESCRIPTION	<u>12-B-05-40-00-00A-000B-A</u>	C 2018-11-29	ALL
ENGINE GROUND RUN TESTS - FUNCTION, DATA FOR PLANS AND DESCRIPTION	<u>12-B-05-40-00-00A-000C-A</u>	2018-05-24	ALL
300 FH INSPECTION - FUNCTION, DATA FOR PLANS AND DESCRIPTION	<u>12-B-05-40-01-01A-000B-A</u>	2018-05-24	ALL
300 FH OR 12 MONTHS INSPECTION - FUNCTION, DATA FOR PLANS AND DESCRIPTION	<u>12-B-05-40-01-02A-000B-A</u>	C 2018-11-29	ALL
600 FH INSPECTION - FUNCTION, DATA FOR PLANS AND DESCRIPTION	<u>12-B-05-40-01-03A-000B-A</u>	C 2018-11-29	ALL
600 FH OR 12 MONTHS INSPECTION - FUNCTION, DATA FOR PLANS AND DESCRIPTION	<u>12-B-05-40-01-04A-000B-A</u>	C 2018-11-29	ALL
1200 FH OR 12 MONTHS INSPECTION - FUNCTION, DATA FOR PLANS AND DESCRIPTION	<u>12-B-05-40-01-05A-000B-A</u>	C 2018-11-29	ALL
2400 FH OR 24 MONTHS INSPECTION - FUNCTION, DATA FOR PLANS AND DESCRIPTION	<u>12-B-05-40-01-06A-000B-A</u>	C 2018-11-29	ALL
UNSCHEDULED MAINTENANCE CHECKS - INTRODUCTION	<u>12-B-05-50-00-00A-018A-A</u>	2018-02-13	ALL
HARD LANDING - UNSCHEDULED INSPECTIONS	<u>12-B-05-50-01-00A-282A-A</u>	C 2018-11-29	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
HARD LANDING – ELECTRO MECHANICAL LANDING GEAR - UNSCHEDULED INSPECTION	<u>12-B-05-50-01-00A-282B-A</u>	C 2018-11-29	ELECTRO MECHANICAL LANDING GEAR
FLIGHT IN SEVERE TURBULENCE OR SEVERE MANEUUVRES - UNSCHEDULED INSPECTIONS	<u>12-B-05-50-02-00A-282A-A</u>	2017-07-19	ALL
OVERSPEED WITH FLAPS EXTENDED - UNSCHEDULED INSPECTIONS	<u>12-B-05-50-03-00A-282A-A</u>	C 2018-11-29	ALL
PROPELLER SUDDEN STOPAGE OR IMPACT - UNSCHEDULED INSPECTIONS	<u>12-B-05-50-04-00A-282A-A</u>	2017-07-19	ALL
LIGHTNING STRIKE - UNSCHEDULED INSPECTIONS	<u>12-B-05-50-05-00A-282A-A</u>	C 2018-11-29	ALL
ALIGNMENT AND SYMMETRY - UNSCHEDULED INSPECTIONS	<u>12-B-05-50-06-00A-282A-A</u>	2017-07-19	ALL
FUSELAGE CARRY THROUGH FRAMES - GEOMETRY INSPECTION	<u>12-B-05-50-07-00A-282A-A</u>	2017-07-19	ALL
MAXIMUM OPERATING SPEED (VMO/MMO) EXCEEDANCE - UNSCHEDULED INSPECTION	<u>12-B-05-50-08-00A-282A-A</u>	2017-07-19	All
MAXIMUM LANDING GEAR OPERATING SPEED (VLO) EXCEEDANCE - UNSCHEDULED INSPECTION	<u>12-B-05-50-09-00A-282A-A</u>	2017-07-19	ALL
MAXIMUM LANDING GEAR EXTENDED SPEED (VLE) EXCEEDANCE - UNSCHEDULED INSPECTION	<u>12-B-05-50-10-00A-282A-A</u>	2017-07-19	ALL
TAIL-DOWN DAMAGE INSPECTION - UNSCHEDULED INSPECTION	<u>12-B-05-50-11-00A-282A-A</u>	2017-07-19	ALL
AFTER A FLIGHT THROUGH VOLCANIC ASH OR SMOKE - UNSCHEDULED INSPECTION	<u>12-B-05-50-15-00A-282A-A</u>	2017-07-19	ALL
DIMENSIONS AND ZONES – GENERAL - DESCRIPTION	<u>12-B-06-00-00-00A-040A-A</u>	2017-07-19	ALL
DIMENSIONS AND ZONES - DESCRIPTION	<u>12-B-06-10-00-00A-040A-A</u>	2017-07-19	ALL
ACCESS PROVISION - DESCRIPTION	<u>12-B-06-20-00-00A-040A-A</u>	2018-02-13	All
LIFTING AND SHORING – GENERAL - DESCRIPTION AND OPERATION	<u>12-B-07-00-00-00A-040A-A</u>	2017-07-19	ALL
JACKING - MAINTENANCE PRACTICES	<u>12-B-07-10-00-00A-901A-A</u>	2017-07-19	ALL
SHORING - MAINTENANCE PRACTICES	<u>12-B-07-20-00-00A-901A-A</u>	2017-07-19	ALL
LEVELING AND WEIGHING – GENERAL - DESCRIPTION AND OPERATION	<u>12-B-08-00-00-00A-040A-A</u>	2017-07-19	ALL
WEIGHING - MAINTENANCE PRACTICES	<u>12-B-08-10-00-00A-901A-A</u>	2017-07-19	ALL
LEVELING - MAINTENANCE PRACTICES	<u>12-B-08-20-00-00A-901A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
HANDLING AND TAXIING – GENERAL - DESCRIPTION AND OPERATION	<u>12-B-09-00-00-00A-040A-A</u>	2017-07-19	ALL
TOWING - MAINTENANCE PRACTICES	<u>12-B-09-10-00-00A-901A-A</u>	C 2018-11-29	ALL
TAXIING - MAINTENANCE PRACTICES	<u>12-B-09-20-00-00A-901A-A</u>	2017-07-19	ALL
PARKING, MOORING AND STORING – GENERAL - DESCRIPTION AND OPERATION	<u>12-B-10-00-00-00A-040A-A</u>	2017-07-19	ALL
PARKING - AIRCRAFT WITH FOUR-BLADED PROPELLER - MAINTENANCE PRACTICES	<u>12-B-10-10-00-00A-901A-A</u>	2017-07-19	FOUR-BLADED PROPELLER
PARKING - AIRCRAFT WITH FIVE-BLADED PROPELLER - MAINTENANCE PRACTICES	<u>12-B-10-10-00-00A-901B-A</u>	2017-07-19	FIVE-BLADED PROPELLER
STORING - MAINTENANCE PRACTICES	<u>12-B-10-10-01-00A-901A-A</u>	2018-02-13	ALL
MOORING - MAINTENANCE PRACTICES	<u>12-B-10-20-00-00A-901A-A</u>	2017-07-19	ALL
RETURN TO SERVICE - MAINTENANCE PRACTICES	<u>12-B-10-30-00-00A-901A-A</u>	2018-02-13	ALL
PLACARDS AND MARKINGS – GENERAL - DESCRIPTION AND OPERATION	<u>12-B-11-00-00-00A-040A-A</u>	2017-07-19	ALL
PLACARDS AND MARKINGS - MAINTENANCE PRACTICES	<u>12-B-11-00-00-00A-901A-A</u>	2017-07-19	ALL
EXTERIOR PLACARDS AND MARKINGS - DESCRIPTION AND OPERATION	<u>12-B-11-20-00-00A-040A-A</u>	2017-07-19	ALL
EXTERIOR PLACARDS AND MARKINGS - MAINTENANCE PRACTICES	<u>12-B-11-20-00-00A-901A-A</u>	2017-07-19	ALL
INSTALLATION OF FLAP MARKINGS - MAINTENANCE PRACTICES	<u>12-B-11-20-01-00A-901A-A</u>	2017-07-19	ALL
INSTALLATION OF HORIZONTAL STABILIZER TRIM MARKINGS - MAINTENANCE PRACTICES	<u>12-B-11-20-02-00A-901A-A</u>	2018-05-24	ALL
INTERIOR PLACARDS - DESCRIPTION AND OPERATION	<u>12-B-11-30-00-00A-040A-A</u>	2017-07-19	ALL
FLIGHT COMPARTMENT PLACARDS - DESCRIPTION AND OPERATION	<u>12-B-11-30-10-00A-040A-A</u>	2017-07-19	ALL
PASSENGER COMPARTMENT PLACARDS - DESCRIPTION AND OPERATION	<u>12-B-11-30-20-00A-040A-A</u>	2017-07-19	ALL
SERVICING – GENERAL - DESCRIPTION AND OPERATION	<u>12-B-12-00-00-00A-040A-A</u>	2017-07-19	ALL
REPLENISHMENT - DESCRIPTION AND OPERATION	<u>12-B-12-10-00-00A-040A-A</u>	2017-07-19	ALL
FUEL - SERVICING	<u>12-B-12-10-01-00A-902A-A</u>	2018-02-13	ALL
BRAKES - SERVICING	<u>12-B-12-10-02-00A-902A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
ENGINE OIL - SERVICING	<u>12-B-12-10-03-00A-902A-A</u>	2017-07-19	ALL
TIRES - SERVICING	<u>12-B-12-10-04-00A-902A-A</u>	2017-07-19	ALL
OXYGEN - SERVICING	<u>12-B-12-10-05-00A-902A-A</u>	2017-07-19	ALL
SCHEDULED SERVICING - DESCRIPTION AND OPERATION	<u>12-B-12-20-00-00A-040A-A</u>	2017-07-19	ALL
AIRCRAFT EXTERIOR - POLISH AND APPLY SEALING	<u>12-B-12-20-01-00A-256A-A</u>	2017-07-19	ALL
AIRCRAFT EXTERIOR - APPLY SURFACE SEALER	<u>12-B-12-20-01-00A-259A-A</u>	2017-07-19	ALL
AIRCRAFT EXTERIOR WASHING - SERVICING	<u>12-B-12-20-01-00A-902A-A</u>	2017-07-19	ALL
AIRCRAFT WINDOWS CLEANING - SERVICING	<u>12-B-12-20-02-00A-902A-A</u>	2017-07-19	ALL
AIRCRAFT INTERIOR CLEANING - SERVICING	<u>12-B-12-20-03-00A-902A-A</u>	2017-07-19	ALL
LANDING GEAR - SERVICING	<u>12-B-12-20-04-00A-902A-A</u>	2017-07-19	ALL
FOUR-BLADED PROPELLER - SERVICING	<u>12-B-12-20-05-00A-902A-A</u>	2017-07-19	FOUR-BLADED PROPELLER
FIVE-BLADED PROPELLER - SERVICING	<u>12-B-12-20-05-00A-902B-A</u>	2017-07-19	FIVE-BLADED PROPELLER
WHEEL BEARING - SERVICING	<u>12-B-12-20-06-00A-902A-A</u>	2017-07-19	ALL
FLAP UP AND DOWN LIMIT SWITCHES - SERVICING	<u>12-B-12-20-07-00A-902A-A</u>	2017-07-19	ALL
EQUIPMENT HANDLING - MAINTENANCE PRACTICES	<u>12-B-20-00-00-00A-901A-A</u>	2017-07-19	ALL
LOCKING AND RETAINING DEVICES - DESCRIPTION AND OPERATION	<u>12-B-20-20-00-00A-040A-A</u>	2017-07-19	ALL
TORQUE WRENCHES AND PROCEDURES - DESCRIPTION AND OPERATION	<u>12-B-20-20-01-00A-040A-A</u>	C 2018-11-29	ALL
CRIMPING - DESCRIPTION AND OPERATION	<u>12-B-20-20-10-00A-040A-A</u>	C 2018-11-29	All
STANDARD PRACTICES - CONSUMABLE MATERIALS LIST	<u>12-B-20-31-00-00A-070A-A</u>	C 2018-11-29	ALL
CORROSION - DESCRIPTION	<u>12-B-20-40-00-00A-040A-A</u>	2017-07-19	ALL
CORROSION CONTROL - MAINTENANCE PRACTICES	<u>12-B-20-40-00-00A-901A-A</u>	2018-05-24	ALL
CORROSION - REPAIR	<u>12-B-20-40-00-00A-904A-A</u>	2017-07-19	ALL
CHEMICAL CONVERSION COATING - MAINTENANCE PRACTICES	<u>12-B-20-40-10-00A-901A-A</u>	2017-07-19	ALL
STANDARD PRACTICES - DESCRIPTION AND OPERATION	<u>12-B-20-50-00-00A-040A-A</u>	2017-07-19	ALL
STANDARD PRACTICES - NON-DESTRUCTIVE INSPECTION - STRUCTURE TEST	<u>12-B-20-50-00-00A-350A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
STANDARD PRACTICES - DRILLING, CUTTING AND ABRADING MATERIAL	<u>12-B-20-50-00-00A-901A-A</u>	2017-07-19	ALL
COMPOSITE PANELS ANTI-CHAFE STRIP - REPAIR	<u>12-B-20-50-01-00A-904A-A</u>	2017-07-19	ALL
PLASTIC TUBING - MAINTENANCE PRACTICES	<u>12-B-20-50-02-00A-901A-A</u>	2017-07-19	ALL
SEALANT APPLICATION - MAINTENANCE PRACTICES	<u>12-B-20-50-03-00A-901A-A</u>	2017-07-19	ALL
BUSHES AND BEARINGS - MAINTENANCE PRACTICES	<u>12-B-20-50-04-00A-901A-A</u>	C 2018-11-29	ALL
GLASS FIBRE TAPE - REMOVAL/INSTALLATION	<u>12-B-20-50-06-00A-920A-A</u>	2017-07-19	All
METALLIC PIPES - MAINTENANCE PRACTICES	<u>12-B-20-50-07-00A-901A-A</u>	2018-02-13	ALL
HEXASHIELD CONNECTOR - REMOVAL/INSTALLATION	<u>12-B-20-50-10-00A-920A-A</u>	2017-07-19	ALL
AIR CONDITIONING - DESCRIPTION AND OPERATION	<u>12-B-21-00-00-00A-040A-A</u>	2017-07-19	ALL
DISTRIBUTION SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-21-20-00-00A-040A-A</u>	2018-02-13	ALL
FIREWALL SHUT-OFF VALVE - REMOVAL/INSTALLATION	<u>12-B-21-20-01-00A-920A-A</u>	2017-07-19	ALL
MICROSWITCH - REMOVAL/INSTALLATION	<u>12-B-21-20-01-01A-920A-A</u>	2017-07-19	ALL
BLOWER UNIT - REMOVAL/INSTALLATION	<u>12-B-21-20-02-00A-920A-A</u>	2017-07-19	ALL
PRESSURIZATION CONTROL (MSN 1001 - 1719) - DESCRIPTION AND OPERATION	<u>12-B-21-30-00-00A-040A-A</u>	2017-07-19	MSN 1001 - 1719
PRESSURIZATION CONTROL (MSN 545, 1720 AND UP) - DESCRIPTION AND OPERATION	<u>12-B-21-30-00-00A-040B-A</u>	2017-07-19	MSN 545, 1720 AND UP
PRESSURIZATION CONTROL - MAINTENANCE PRACTICES	<u>12-B-21-30-00-00A-901A-A</u>	2017-07-19	ALL
PRESSURIZATION CONTROL (MSN 1001 - 1719) - ADJUSTMENT/TEST	<u>12-B-21-30-00-00A-903A-A</u>	2017-07-19	MSN 1001 - 1719
PRESSURIZATION CONTROL (MSN 545, 1720 AND UP) - ADJUSTMENT/TEST	<u>12-B-21-30-00-00A-903B-A</u>	2017-07-19	MSN 545, 1720 AND UP
CABIN PRESSURIZATION CONTROL UNIT (MSN 1001 - 1719) - ADJUSTMENT/TEST	<u>12-B-21-30-01-00A-903A-A</u>	2017-07-19	MSN 1001 - 1719
CABIN PRESSURIZATION ELECTRONIC CONTROL AND MONITORING UNIT (MSN 545, 1720 AND UP) - ADJUSTMENT/TEST	<u>12-B-21-30-01-00A-903B-A</u>	2017-07-19	MSN 545, 1720 AND UP
CABIN PRESSURIZATION CONTROL UNIT (MSN 1001 - 1719) - REMOVAL/INSTALLATION	<u>12-B-21-30-01-00A-920A-A</u>	2017-07-19	MSN 1001 - 1719

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
CABIN PRESSURIZATION ELECTRONIC CONTROL AND MONITORING UNIT (MSN 545, 1720 AND UP) - REMOVAL INSTALLATION	<u>12-B-21-30-01-00A-920B-A</u>	2017-07-19	MSN 545, 1720 AND UP
SAFETY VALVE - CLEAN	<u>12-B-21-30-02-00A-250A-A</u>	2017-07-19	ALL
SAFETY VALVE - REMOVAL/INSTALLATION	<u>12-B-21-30-02-00A-920A-A</u>	2018-02-13	ALL
OUTFLOW VALVE (MSN 1001 - 1719) - REMOVAL/INSTALLATION	<u>12-B-21-30-03-00A-920A-A</u>	2017-07-19	MSN 1001 - 1719
OUTFLOW VALVE (MSN 545, 1720 AND UP) - REMOVAL INSTALLATION	<u>12-B-21-30-03-00A-920B-A</u>	2017-07-19	MSN 545, 1720 AND UP
NEGATIVE PRESSURE RELIEF VALVE - EXAMINE	<u>12-B-21-30-05-00A-310A-A</u>	2017-07-19	ALL
NEGATIVE PRESSURE RELIEF VALVE - REMOVAL/INSTALLATION	<u>12-B-21-30-05-00A-920A-A</u>	2017-07-19	ALL
HEATING AND COOLING - DESCRIPTION AND OPERATION	<u>12-B-21-40-00-00A-040A-A</u>	2017-07-19	ALL
UNDERFLOOR HEATER (MSN 1001 - 1080) - ADJUSTMENT/TEST	<u>12-B-21-40-01-00A-903A-A</u>	2017-07-19	MSN 1001 - 1080
UNDERFLOOR HEATER (MSN 1081 AND UP) - ADJUSTMENT/TEST	<u>12-B-21-40-01-00A-903B-A</u>	2018-05-24	MSN 1081 AND UP
UNDERFLOOR HEATER - REMOVAL/INSTALLATION	<u>12-B-21-40-01-00A-920A-A</u>	2017-07-19	ALL
REFRIGERATION PACK - INSPECTION/CHECK	<u>12-B-21-40-02-00A-313A-A</u>	2017-07-19	ALL
REFRIGERATION PACK - SERVICING	<u>12-B-21-40-02-00A-902A-A</u>	2017-07-19	ALL
REFRIGERATION PACK - REMOVAL/INSTALLATION	<u>12-B-21-40-02-00A-920A-A</u>	2017-07-19	ALL
WATER SEPARATOR - CLEAN	<u>12-B-21-40-03-00A-250A-A</u>	2017-07-19	ALL
WATER SEPARATOR - REPAIR	<u>12-B-21-40-03-00A-904A-A</u>	2017-07-19	ALL
WATER SEPARATOR - REMOVAL/INSTALLATION	<u>12-B-21-40-03-00A-920A-A</u>	2017-07-19	ALL
HP SHUT-OFF VALVE - REMOVAL/INSTALLATION	<u>12-B-21-40-04-00A-920A-A</u>	2017-07-19	ALL
PRIMARY SHUT-OFF VALVE - REMOVAL/INSTALLATION	<u>12-B-21-40-05-00A-920A-A</u>	2017-07-19	ALL
OVERTEMPERATURE SWITCH - ADJUSTMENT/TEST	<u>12-B-21-40-06-00A-903A-A</u>	2017-07-19	ALL
OVER TEMPERATURE SWITCH - REMOVAL/INSTALLATION	<u>12-B-21-40-06-00A-920A-A</u>	2017-07-19	ALL
OVERPRESSURE SWITCH - REMOVAL/INSTALLATION	<u>12-B-21-40-07-00A-920A-A</u>	2017-07-19	ALL
HIGH PRESSURE SWITCH - REMOVAL/INSTALLATION	<u>12-B-21-40-08-00A-920A-A</u>	2017-07-19	ALL
FLOW CONTROL VENTURI - REMOVAL/INSTALLATION	<u>12-B-21-40-09-00A-920A-A</u>	2017-07-19	ALL
COLD AIR UNIT - REMOVAL/INSTALLATION	<u>12-B-21-40-10-00A-920A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
CABIN HEATER - REMOVAL/INSTALLATION	<u>12-B-21-40-15-00A-920A-A</u>	2017-07-19	CABIN HEATER
ENGINE BAY DUCTS - REPAIR	<u>12-B-21-41-00-00A-904A-A</u>	C 2018-11-29	ALL
ENGINE BAY DUCTS - REMOVAL/INSTALLATION	<u>12-B-21-41-00-00A-920A-A</u>	2017-07-19	ALL
FOOTWARMER - DESCRIPTION AND OPERATION	<u>12-B-21-43-00-00A-040A-A</u>	2017-07-19	FOOT WARMER SYSTEM
FOOTWARMER - ADJUSTMENT/TEST	<u>12-B-21-43-00-00A-903A-A</u>	2017-07-19	ALL
FOOTWARMER - REMOVAL/INSTALLATION	<u>12-B-21-43-00-00A-920A-A</u>	2017-07-19	FOOT WARMER SYSTEM
ADDITIONAL COOLING - DESCRIPTION AND OPERATION	<u>12-B-21-50-00-00A-040A-A</u>	2017-07-19	ALL
VAPOUR CYCLE COOLING SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-21-50-01-00A-040A-A</u>	C 2018-11-29	VAPOUR CYCLE COOLING SYSTEM
VAPOUR CYCLE COOLING SYSTEM - SERVICING	<u>12-B-21-50-01-00A-902A-A</u>	C 2018-11-29	VAPOUR CYCLE COOLING SYSTEM
VAPOUR CYCLE COOLING SYSTEM - ADJUSTMENT/TEST	<u>12-B-21-50-01-00A-903A-A</u>	C 2018-11-29	ALL
COMPRESSOR CONDENSER UNIT - REMOVAL/INSTALLATION	<u>12-B-21-50-01-00A-920A-A</u>	C 2018-11-29	VAPOUR CYCLE COOLING SYSTEM
EVAPORATOR UNIT (REFRIGERANT R134A) - REMOVAL/INSTALLATION	<u>12-B-21-50-02-00A-920A-A</u>	2018-05-24	REFRIGERANT R134A
COMPRESSOR DRIVE MOTOR - INSPECTION/CHECK	<u>12-B-21-50-03-00A-313A-A</u>	C 2018-11-29	VAPOUR CYCLE COOLING SYSTEM
TEMPERATURE CONTROL SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-21-60-00-00A-040A-A</u>	2017-07-19	ALL
INTEGRATED ECS CONTROLLER - ADJUSTMENT/TEST	<u>12-B-21-60-01-00A-903A-A</u>	2017-07-19	ALL
INTEGRATED ECS CONTROLLER - REMOVAL/INSTALLATION	<u>12-B-21-60-01-00A-920A-A</u>	2017-07-19	ALL
TEMPERATURE CONTROL VALVE - REMOVAL/INSTALLATION	<u>12-B-21-60-02-00A-920A-A</u>	2017-07-19	ALL
FLOW CONTROL VALVE - REMOVAL/INSTALLATION	<u>12-B-21-60-03-00A-920A-A</u>	2017-07-19	ALL
ACTUATOR - REMOVAL/INSTALLATION	<u>12-B-21-60-03-01A-920A-A</u>	2017-07-19	ALL
DUCT TEMPERATURE SENSOR - REMOVAL/INSTALLATION	<u>12-B-21-60-04-00A-920A-A</u>	2017-07-19	ALL
DUCT OVERTEMPERATURE SWITCH - ADJUSTMENT/TEST	<u>12-B-21-60-05-00A-903A-A</u>	2017-07-19	ALL
DUCT OVER TEMPERATURE SWITCH - REMOVAL/INSTALLATION	<u>12-B-21-60-05-00A-920A-A</u>	2017-07-19	ALL
FLIGHT COMPARTMENT TEMPERATURE SENSOR - REMOVAL/INSTALLATION	<u>12-B-21-60-06-00A-920A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A



## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
FLIGHT COMPARTMENT TEMPERATURE SENSOR FAN - REMOVAL/INSTALLATION	<u>12-B-21-60-07-00A-920A-A</u>	2017-07-19	ALL
UNDERFLOOR TEMPERATURE SENSOR - REMOVAL/INSTALLATION	<u>12-B-21-60-08-00A-920A-A</u>	2017-07-19	ALL
UNDERFLOOR TEMPERATURE SENSOR FAN - REMOVAL/INSTALLATION	<u>12-B-21-60-09-00A-920A-A</u>	2017-07-19	ALL
PASSENGER COMPARTMENT TEMPERATURE SENSOR - REMOVAL/INSTALLATION	<u>12-B-21-60-10-00A-920A-A</u>	2017-07-19	ALL
PASSENGER COMPARTMENT TEMPERATURE SENSOR FAN - REMOVAL/INSTALLATION	<u>12-B-21-60-11-00A-920A-A</u>	2017-07-19	ALL
AUTOMATIC FLIGHT CONTROL – GENERAL - DESCRIPTION AND OPERATION	<u>12-B-22-00-00-00A-040A-A</u>	2017-07-19	ALL
AUTOPILOT - DESCRIPTION AND OPERATION	<u>12-B-22-10-00-00A-040A-A</u>	2017-07-19	ALL
AUTOPILOT - INSPECTION/CHECK	<u>12-B-22-10-00-00A-313A-A</u>	2017-07-19	ALL
AUTOPILOT - ADJUSTMENT/TEST	<u>12-B-22-10-00-00A-903A-A</u>	2017-07-19	ALL
PITCH ACTUATOR - REMOVAL/INSTALLATION	<u>12-B-22-10-02-00A-920A-A</u>	2017-07-19	ALL
ROLL ACTUATOR - REMOVAL/INSTALLATION	<u>12-B-22-10-03-00A-920A-A</u>	2017-07-19	ALL
YAW ACTUATOR - REMOVAL/INSTALLATION	<u>12-B-22-10-04-00A-920A-A</u>	2017-07-19	ALL
FLIGHT CONTROL PANEL - REMOVAL/INSTALLATION	<u>12-B-22-10-05-00A-920A-A</u>	2017-07-19	ALL
TRIM ADAPTOR - REMOVAL/INSTALLATION	<u>12-B-22-10-07-00A-920A-A</u>	2017-07-19	ALL
SPEED AND ATTITUDE CORRECTION - DESCRIPTION AND OPERATION	<u>12-B-22-20-00-00A-040A-A</u>	2017-07-19	ALL
SPEED AND ATTITUDE CORRECTION - ADJUSTMENT/TEST	<u>12-B-22-20-00-00A-903A-A</u>	2017-07-19	ALL
STICK PUSHER COMPUTER - REMOVAL/INSTALLATION	<u>12-B-22-20-01-00A-920A-A</u>	2017-07-19	ALL
AOA TRANSMITTER - INSPECTION/CHECK	<u>12-B-22-20-02-00A-313A-A</u>	2017-07-19	ALL
AOA TRANSMITTER - REMOVAL/INSTALLATION	<u>12-B-22-20-02-00A-920A-A</u>	2017-07-19	ALL
STICK–SHAKER ACTUATOR - REMOVAL/INSTALLATION	<u>12-B-22-20-03-00A-920A-A</u>	2017-07-19	ALL
STICK PUSHER SERVO - REMOVAL/INSTALLATION	<u>12-B-22-20-04-00A-920A-A</u>	2017-07-19	ALL
TORQUE TRANSDUCER - REMOVAL/INSTALLATION	<u>12-B-22-20-05-00A-920A-A</u>	2017-07-19	ALL
STICK PUSHER CAPSTAN - REMOVAL/INSTALLATION	<u>12-B-22-20-06-00A-920A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
COMMUNICATIONS - GENERAL WARNINGS AND CAUTIONS AND RELATED SAFETY DATA	<u>12-B-23-00-00-00A-012A-A</u>	2017-07-19	ALL
COMMUNICATIONS - DESCRIPTION AND OPERATION	<u>12-B-23-00-00-00A-040A-A</u>	2017-07-19	ALL
SPEECH COMMUNICATION - DESCRIPTION AND OPERATION	<u>12-B-23-10-00-00A-040A-A</u>	2017-07-19	ALL
HF COMMUNICATION - DESCRIPTION AND OPERATION	<u>12-B-23-11-00-00A-040A-A</u>	2017-07-19	HF COMMUNICATION SYSTEM
HF COMMUNICATION - ADJUSTMENT/TEST	<u>12-B-23-11-00-00A-903A-A</u>	2017-07-19	HF COMMUNICATION SYSTEM
CONTROL UNIT - REMOVAL/INSTALLATION	<u>12-B-23-11-01-00A-920A-A</u>	2017-07-19	HF COMMUNICATIONS SYSTEM
RECEIVER UNIT - REMOVAL/INSTALLATION	<u>12-B-23-11-02-00A-920A-A</u>	2017-07-19	HF COMMUNICATIONS SYSTEM
COUPLER UNIT - REMOVAL/INSTALLATION	<u>12-B-23-11-03-00A-920A-A</u>	2017-07-19	HF COMMUNICATIONS SYSTEM
COUPLER UNIT - SERVICING	<u>12-B-23-11-03-00A-902A-A</u>	2017-07-19	HF COUPLER UNIT
ANTENNA - REMOVAL INSTALLATION	<u>12-B-23-11-04-00A-920A-A</u>	2017-07-19	HF COMMUNICATIONS SYSTEM
OPTIONAL SHORT ANTENNA - REMOVAL INSTALLATION	<u>12-B-23-11-04-00A-920B-A</u>	2017-07-19	SHORT HF ANTENNA
HF POWER AMPLIFIER - REMOVAL/INSTALLATION	<u>12-B-23-11-06-00A-920A-A</u>	2017-07-19	ALL
VHF COMMUNICATION - DESCRIPTION AND OPERATION	<u>12-B-23-12-00-00A-040A-A</u>	2017-07-19	ALL
VHF COMMUNICATION - ADJUSTMENT/TEST	<u>12-B-23-12-00-00A-903A-A</u>	2017-07-19	SINGLE VHF COMMUNICATION SYSTEM
MULTI MODE DIGITAL RADIO - REMOVAL/INSTALLATION	<u>12-B-23-12-01-00A-920A-A</u>	2017-07-19	ALL
VHF 1 ANTENNA - REMOVAL/INSTALLATION	<u>12-B-23-12-02-00A-920A-A</u>	2017-07-19	ALL
VHF 2 ANTENNA - REMOVAL/INSTALLATION	<u>12-B-23-12-03-00A-920A-A</u>	2017-07-19	ALL
IRIDIUM SATCOM - DESCRIPTION AND OPERATION	<u>12-B-23-16-00-00A-040A-A</u>	2017-07-19	IRIDIUM SATCOM
AEROWAVE 100 SATCOM SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-23-16-00-00A-040B-A</u>	2017-07-19	ALL
AEROWAVE 100 SATCOM SYSTEM - ADJUSTMENT/TEST	<u>12-B-23-16-00-00A-903A-A</u>	2018-05-24	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
IRIDIUM SATCOM ANTENNA - REMOVAL/INSTALLATION	<u>12-B-23-16-01-00A-920A-A</u>	2017-07-19	IRIDIUM SATCOM
AEROWAVE 100 SATCOM ANTENNA - REMOVAL INSTALLATION	<u>12-B-23-16-01-00A-920B-A</u>	2018-02-13	ALL
HIGH-SPEED DATA UNIT - REMOVAL/INSTALLATION	<u>12-B-23-16-02-00A-920A-A</u>	2017-07-19	ALL
EXTERNAL SATCOM CONFIGURATION MODULE - REMOVAL/INSTALLATION	<u>12-B-23-16-03-00A-920A-A</u>	2017-07-19	ALL
BIAS-T - REMOVAL/INSTALLATION	<u>12-B-23-16-04-00A-920A-A</u>	2017-07-19	ALL
WI-FI ROUTER - REMOVAL/INSTALLATION	<u>12-B-23-16-05-00A-920A-A</u>	2017-07-19	ALL
PASSENGER ADVISORY SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-23-40-00-00A-040A-A</u>	2017-07-19	ALL
PASSENGER ENTERTAINMENT - DESCRIPTION AND OPERATION	<u>12-B-23-40-10-00A-040A-A</u>	2017-07-19	PASSENGER ENTERTAINMENT SYSTEM
AUDIO INTEGRATING SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-23-50-00-00A-040A-A</u>	2017-07-19	SINGLE AUDIO CONTROL PANEL
AUDIO INTEGRATING SYSTEM - ADJUSTMENT/TEST	<u>12-B-23-50-00-00A-903A-A</u>	2017-07-19	SINGLE AUDIO CONTROL PANEL
AUDIO CONTROL PANEL - REMOVAL/INSTALLATION	<u>12-B-23-50-01-00A-920A-A</u>	2017-07-19	SINGLE AUDIO CONTROL PANEL
DUAL AUDIO INTEGRATING SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-23-50-10-00A-040A-A</u>	2017-07-19	DUAL AUDIO CONTROL PANELS
DUAL AUDIO INTEGRATING SYSTEM - ADJUSTMENT/TEST	<u>12-B-23-50-10-00A-903A-A</u>	2017-07-19	DUAL AUDIO CONTROL PANELS
DUAL AUDIO CONTROL PANEL - REMOVAL/INSTALLATION	<u>12-B-23-50-11-00A-920A-A</u>	2017-07-19	DUAL AUDIO CONTROL PANEL
NOISE CANCELLING HEADSETS - DESCRIPTION AND OPERATION	<u>12-B-23-51-00-00A-040A-A</u>	2017-07-19	NOISE CANCELLING HEADSETS
STATIC DISCHARGING - DESCRIPTION AND OPERATION	<u>12-B-23-60-00-00A-040A-A</u>	2017-07-19	ALL
STATIC DISCHARGING - REMOVAL/INSTALLATION	<u>12-B-23-60-00-00A-920A-A</u>	2017-07-19	ALL
ELECTRICAL POWER - DESCRIPTION AND OPERATION	<u>12-B-24-00-00-00A-040A-A</u>	2017-07-19	ALL
ELECTRICAL POWER - MAINTENANCE PRACTICES	<u>12-B-24-00-00-00A-901A-A</u>	2017-07-19	ALL
DC GENERATION - DESCRIPTION AND OPERATION	<u>12-B-24-30-00-00A-040A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
DC GENERATION - ADJUSTMENT/ TEST	<u>12-B-24-30-00-00A-903A-A</u>	2017-07-19	ALL
STARTER/GENERATOR - INSPEC- TION/CHECK	<u>12-B-24-30-01-00A-313A-A</u>	2017-07-19	ALL
STARTER/GENERATOR - REMOVAL/ INSTALLATION	<u>12-B-24-30-01-00A-920A-A</u>	2017-07-19	ALL
VOLTAGE REGULATOR 1 - REMOVAL/ INSTALLATION	<u>12-B-24-30-05-00A-920A-A</u>	2017-07-19	ALL
VOLTAGE REGULATOR 2 - REMOVAL/ INSTALLATION	<u>12-B-24-30-06-00A-920A-A</u>	2017-07-19	ALL
BATTERY AND OVERTEMPERATURE SYSTEM - ADJUSTMENT/TEST	<u>12-B-24-30-07-00A-903A-A</u>	2017-07-19	ALL
LEAD ACID BATTERY - REMOVAL/ INSTALLATION	<u>12-B-24-30-07-00A-920A-A</u>	C 2018-11-29	LEAD ACID BATTERY
NI-CAD BATTERY - REMOVAL/ INSTALLATION	<u>12-B-24-30-07-00A-920B-A</u>	C 2018-11-29	NI-CAD BAT- TERY
HEATED NI-CAD BATTERY - REMOV- AL/INSTALLATION	<u>12-B-24-30-07-00A-920C-A</u>	2017-07-19	HEATED NI- CAD BAT- TERY
GENERATOR CURRENT SENSOR - REMOVAL/INSTALLATION	<u>12-B-24-30-08-00A-920A-A</u>	2017-07-19	ALL
EXTERNAL POWER - DESCRIPTION AND OPERATION	<u>12-B-24-40-00-00A-040A-A</u>	2017-07-19	ALL
EXTERNAL POWER VOLTAGE DIS- CONNECTION - ADJUSTMENT/TEST	<u>12-B-24-40-00-00A-903A-A</u>	2017-07-19	ALL
EXTERNAL POWER GENERATOR-ON DISCONNECTION - ADJUSTMENT/ TEST	<u>12-B-24-40-00-00A-903B-A</u>	2017-07-19	ALL
BATTERY AND EXTERNAL POWER JUNCTION BOX - ADJUSTMENT/ TEST	<u>12-B-24-40-01-00A-903A-A</u>	2017-07-19	ALL
BATTERY AND EXTERNAL POWER JUNCTION BOX - REMOVAL/INSTAL- LATION	<u>12-B-24-40-01-00A-920A-A</u>	2017-07-19	ALL
DC ELECTRICAL LOAD DISTRIBU- TION - DESCRIPTION AND OPERA- TION	<u>12-B-24-50-00-00A-040A-A</u>	2017-07-19	ALL
DC LOAD DISTRIBUTION – HY- DRAULIC LANDING GEAR - DE- SCRIPTION AND OPERATION	<u>12-B-24-52-00-00A-040A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
DC LOAD DISTRIBUTION – ELECTRO MECHANICAL LANDING GEAR - DE- SCRIPTION AND OPERATION	<u>12-B-24-52-00-00A-040B-A</u>	2017-07-19	ELECTRO MECHANI- CAL LAND- ING GEAR
LEFT POWER JUNCTION BOX - AD- JUSTMENT/TEST	<u>12-B-24-52-10-00A-903A-A</u>	2017-07-19	ALL
LEFT POWER JUNCTION BOX - RE- MOVAL/INSTALLATION	<u>12-B-24-52-10-00A-920A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

Document title	Data module code	Issue date	Effectivity
RIGHT POWER JUNCTION BOX – HYDRAULIC LANDING GEAR - ADJUSTMENT/TEST	<u>12-B-24-52-20-00A-903A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
ELECTRO MECHANICAL LANDING GEAR – RIGHT POWER JUNCTION BOX - ADJUSTMENT/TEST	<u>12-B-24-52-20-00A-903B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
RIGHT POWER JUNCTION BOX - REMOVAL/INSTALLATION	<u>12-B-24-52-20-00A-920A-A</u>	2017-07-19	ALL
EMERGENCY POWER SUPPLY (EPS) SYSTEM (MSN 1001-1719) - DESCRIPTION AND OPERATION	<u>12-B-24-52-51-00A-040A-A</u>	2018-02-13	MSN 1001-1719
EMERGENCY POWER SUPPLY (EPS) SYSTEM (MSN 545, 1720 AND UP) - DESCRIPTION AND OPERATION	<u>12-B-24-52-51-00A-040B-A</u>	2018-02-13	MSN 545, 1720 and Up
EMERGENCY POWER SUPPLY (EPS) SYSTEM - ADJUSTMENT/TEST	<u>12-B-24-52-51-00A-903A-A</u>	2017-07-19	ALL
EMERGENCY POWER SUPPLY (EPS) SYSTEM - REMOVAL/INSTALLATION	<u>12-B-24-52-51-00A-920A-A</u>	C 2018-11-29	ALL
110 VAC AUXILIARY POWER - DESCRIPTION AND OPERATION	<u>12-B-24-60-00-00A-040A-A</u>	2017-07-19	110 VAC AUXILIARY POWER
110 VAC AUXILIARY POWER – STATIC INVERTER - REMOVAL/INSTALLATION	<u>12-B-24-60-01-00A-920A-A</u>	2017-07-19	110 VAC AUXILIARY POWER
EQUIPMENT AND FURNISHINGS - GENERAL WARNINGS AND CAUTIONS AND RELATED SAFETY DATA	<u>12-B-25-00-00-00A-012A-A</u>	2017-07-19	ALL
EQUIPMENT AND FURNISHINGS - DESCRIPTION AND OPERATION	<u>12-B-25-00-00-00A-040A-A</u>	2017-07-19	ALL
FLIGHT COMPARTMENT - DESCRIPTION AND OPERATION	<u>12-B-25-10-00-00A-040A-A</u>	2017-07-19	ALL
FLIGHT COMPARTMENT CREW SEATS - REMOVAL/INSTALLATION	<u>12-B-25-10-01-00A-920A-A</u>	2017-07-19	ALL
CREW SEAT SAFETY HARNESS - REMOVAL/INSTALLATION	<u>12-B-25-10-02-00A-920A-A</u>	2017-07-19	ALL
FLIGHT COMPARTMENT TRIM - REMOVAL/INSTALLATION	<u>12-B-25-10-03-00A-920A-A</u>	2017-07-19	ALL
FLIGHT COMPARTMENT CARPET - REMOVAL/INSTALLATION	<u>12-B-25-10-04-00A-920A-A</u>	2017-07-19	ALL
FLIGHT COMPARTMENT – LEFT STORAGE BOX - REMOVAL/INSTALLATION	<u>12-B-25-10-05-00A-920A-A</u>	2017-07-19	ALL
FLIGHT COMPARTMENT – RIGHT STORAGE BOX - REMOVAL/INSTALLATION	<u>12-B-25-10-06-00A-920A-A</u>	2017-07-19	ALL
EQUIPMENT AND FURNISHINGS – PASSENGER COMPARTMENT - DESCRIPTION AND OPERATION	<u>12-B-25-20-00-00A-040A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
EQUIPMENT AND FURNISHINGS – EXECUTIVE INTERIOR - DESCRIPTION AND OPERATION	<u>12-B-25-21-00-00A-040A-A</u>	C 2018-11-29	EXECUTIVE INTERIOR
EXECUTIVE SEATS - ADJUSTMENT/ TEST	<u>12-B-25-21-01-00A-903A-A</u>	2017-07-19	EXECUTIVE INTERIOR
EXECUTIVE SEATS - REMOVAL INSTALLATION	<u>12-B-25-21-01-00A-920A-A</u>	2017-07-19	EXECUTIVE INTERIOR
EXECUTIVE SEAT SAFETY HARNESS - REMOVAL/INSTALLATION	<u>12-B-25-21-02-00A-920A-A</u>	2017-07-19	EXECUTIVE INTERIOR
EXECUTIVE TRIM - REMOVAL INSTALLATION	<u>12-B-25-21-03-00A-920A-A</u>	2017-07-19	EXECUTIVE INTERIOR
EXECUTIVE CARPETS - REMOVAL/ INSTALLATION	<u>12-B-25-21-04-00A-920A-A</u>	2017-07-19	EXECUTIVE INTERIOR
LEFT STORAGE CABINET - REMOVAL/INSTALLATION	<u>12-B-25-21-05-00A-920A-A</u>	2017-07-19	EXECUTIVE INTERIOR
RIGHT STORAGE CABINET - REMOVAL/INSTALLATION	<u>12-B-25-21-06-00A-920A-A</u>	2017-07-19	EXECUTIVE INTERIOR
TOILET COMPARTMENT - REMOVAL / INSTALLATION	<u>12-B-25-21-07-00A-920A-A</u>	2017-07-19	TOILET COMPARTMENT
BENCH SEAT - REMOVAL/INSTALLATION	<u>12-B-25-21-08-00A-920A-A</u>	2017-07-19	BENCH SEAT
EQUIPMENT AND FURNISHINGS – STANDARD INTERIOR - DESCRIPTION AND OPERATION	<u>12-B-25-22-00-00A-040A-A</u>	C 2018-11-29	STANDARD INTERIOR
STANDARD SEATS - REMOVAL/ INSTALLATION	<u>12-B-25-22-01-00A-920A-A</u>	2018-07-05	STANDARD INTERIOR
STANDARD SEAT SAFETY HARNESS - REMOVAL/INSTALLATION	<u>12-B-25-22-02-00A-920A-A</u>	2017-07-19	STANDARD INTERIOR
STANDARD TRIM - REMOVAL INSTALLATION	<u>12-B-25-22-03-00A-920A-A</u>	2017-07-19	STANDARD INTERIOR
STANDARD CARPETS - REMOVAL/ INSTALLATION	<u>12-B-25-22-04-00A-920A-A</u>	2017-07-19	STANDARD INTERIOR
BAGGAGE AREA AND TRIM - DESCRIPTION AND OPERATION	<u>12-B-25-23-00-00A-040A-A</u>	2017-07-19	ALL
BAGGAGE AREA EQUIPMENT - REMOVAL INSTALLATION	<u>12-B-25-23-01-00A-920A-A</u>	2017-07-19	ALL
LARGE BAGGAGE NET - REMOVAL INSTALLATION	<u>12-B-25-23-02-00A-920A-A</u>	2017-07-19	ALL
CARGO COMPARTMENT - DESCRIPTION AND OPERATION	<u>12-B-25-50-00-00A-040A-A</u>	2017-07-19	ALL
EMERGENCY EQUIPMENT - DESCRIPTION AND OPERATION	<u>12-B-25-60-00-00A-040A-A</u>	2017-07-19	ALL
EMERGENCY LOCATOR TRANSMITTER - DESCRIPTION AND OPERATION	<u>12-B-25-63-00-00A-040A-A</u>	2017-07-19	ALL
EMERGENCY LOCATOR TRANSMITTER - KANNAD INTEGRA ELT - DESCRIPTION AND OPERATION	<u>12-B-25-63-00-00A-040B-A</u>	2017-07-19	KANNAD INTEGRA ELT

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
EMERGENCY LOCATOR TRANSMITTER - ADJUSTMENT/TEST	<u>12-B-25-63-00-00A-903A-A</u>	C 2018-11-29	ALL
KANNAD INTEGRA ELT - ADJUSTMENT/TEST	<u>12-B-25-63-00-00A-903B-A</u>	C 2018-11-29	KANNAD INTEGRA ELT
EMERGENCY LOCATOR TRANSMITTER - REMOVAL/ INSTALLATION	<u>12-B-25-63-00-00A-920A-A</u>	2017-07-19	ALL
KANNAD INTEGRA ELT - REMOVAL / INSTALLATION	<u>12-B-25-63-00-00A-920B-A</u>	2017-07-19	KANNAD INTEGRA ELT
EMERGENCY LOCATOR TRANSMITTER ANTENNA - REMOVAL INSTALLATION	<u>12-B-25-63-02-00A-920A-A</u>	2017-07-19	ALL
ELT – NAVIGATION INTERFACE - REMOVAL INSTALLATION	<u>12-B-25-63-03-00A-920A-A</u>	2017-07-19	ALL
KANNAD INTEGRA ENAV UNIT - REMOVAL INSTALLATION	<u>12-B-25-63-03-00A-920B-A</u>	2017-07-19	KANNAD INTEGRA ELT
UNDERWATER LOCATOR BEACON - DESCRIPTION AND OPERATION	<u>12-B-25-63-04-00A-040A-A</u>	2018-05-24	UNDERWATER LOCATOR BEACON
UNDERWATER LOCATOR BEACON - ADJUSTMENT/TEST	<u>12-B-25-63-04-00A-903A-A</u>	2018-05-24	UNDERWATER LOCATOR BEACON
UNDERWATER LOCATOR BEACON - REMOVAL/INSTALLATION	<u>12-B-25-63-04-00A-920A-A</u>	2018-05-24	UNDERWATER LOCATOR BEACON
INSULATION - DESCRIPTION AND OPERATION	<u>12-B-25-80-00-00A-040A-A</u>	2017-07-19	ALL
COLD WEATHER PREHEATER SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-25-90-00-00A-040A-A</u>	2017-07-19	COLD WEATHER PREHEATER SYSTEM
COLD WEATHER PREHEATER SYSTEM (110 VAC AND 115 VAC) - ADJUSTMENT/TEST	<u>12-B-25-90-00-00A-903A-A</u>	2017-07-19	COLD WEATHER PREHEATER SYSTEM 110 VAC AND 115 VAC
COLD WEATHER PREHEATER SYSTEM (230 VAC) - ADJUSTMENT/TEST	<u>12-B-25-90-00-00A-903B-A</u>	2017-07-19	COLD WEATHER PREHEATER SYSTEM 230 VAC
COLD WEATHER PREHEATER SYSTEM (110 VAC) - REMOVAL/INSTALLATION	<u>12-B-25-90-00-00A-920A-A</u>	2017-07-19	110 VAC PREHEATER SYSTEM
COLD WEATHER PREHEATER SYSTEM (230 VAC) - REMOVAL/INSTALLATION	<u>12-B-25-90-00-00A-920B-A</u>	2017-07-19	230 VAC PREHEATER SYSTEM

Effectivity: ALL

12-B-00-00-00-00A-002A-A

UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
COLD WEATHER PREHEATER SYSTEM (115 VAC) - REMOVAL/INSTALLATION	<u>12-B-25-90-00-00A-920C-A</u>	N 2018-11-29	115 VAC PRE-HEATER SYSTEM
FIRE PROTECTION - DESCRIPTION AND OPERATION	<u>12-B-26-00-00-00A-040A-A</u>	2017-07-19	ALL
FIRE/OVERHEAT DETECTION - DESCRIPTION AND OPERATION	<u>12-B-26-10-00-00A-040A-A</u>	2017-07-19	ALL
FIRE/OVERHEAT DETECTION - ADJUSTMENT/TEST	<u>12-B-26-10-00-00A-903A-A</u>	2017-07-19	ALL
EXTINGUISHING - DESCRIPTION AND OPERATION	<u>12-B-26-20-00-00A-040A-A</u>	2017-07-19	ALL
FLIGHT CONTROLS - DESCRIPTION AND OPERATION	<u>12-B-27-00-00-00A-040A-A</u>	2017-07-19	ALL
FLIGHT CONTROLS - INSPECTION/CHECK	<u>12-B-27-00-00-00A-313A-A</u>	2017-07-19	ALL
FLIGHT CONTROLS – CONTROL RODS - MAGNETIC PARTICLE INSPECTION	<u>12-B-27-00-01-00A-352A-A</u>	C 2018-11-29	ALL
FLIGHT CONTROLS – CONTROL RODS - EDDY CURRENT INSPECTION	<u>12-B-27-00-01-00A-353A-A</u>	2017-07-19	ALL
FLIGHT CONTROLS – CONTROL WHEEL SWITCHES - REMOVAL/INSTALLATION	<u>12-B-27-00-10-00A-920A-A</u>	2017-07-19	ALL
AILERON CONTROL SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-27-10-00-00A-040A-A</u>	2017-07-19	ALL
AILERON CONTROL SYSTEM - PARTS LIST– COCKPIT – KIT P/N 500.50.12.314	<u>12-B-27-10-00-00A-307A-A</u>	2017-07-19	ALL
AILERON CONTROL SYSTEM - PARTS LIST – FLOOR – KIT P/N 500.60.12.035	<u>12-B-27-10-00-00A-307B-A</u>	2017-07-19	ALL
AILERON CONTROL SYSTEM - PARTS LIST – WING – KIT P/N 500.60.12.016	<u>12-B-27-10-00-00A-307C-A</u>	2017-07-19	ALL
AILERON CONTROL SYSTEM - EXAMINE	<u>12-B-27-10-00-00A-310A-A</u>	2017-07-19	ALL
AILERON CONTROL SYSTEM - MAINTENANCE PRACTICES	<u>12-B-27-10-00-00A-901A-A</u>	2018-02-13	ALL
AILERON CONTROL SYSTEM - ADJUSTMENT/TEST	<u>12-B-27-10-00-00A-903A-A</u>	2018-05-24	ALL
AILERON CABLES - REMOVAL/INSTALLATION	<u>12-B-27-10-01-00A-920A-A</u>	2017-07-19	ALL
AILERON AUTOPILOT CABLE - REMOVAL/INSTALLATION	<u>12-B-27-10-02-00A-920A-A</u>	2017-07-19	ALL
AILERON CONTROL ROD – INNER WING - REMOVAL/INSTALLATION	<u>12-B-27-10-05-00A-920A-A</u>	2017-07-19	ALL
AILERON CONTROL ROD – CENTER WING - REMOVAL/INSTALLATION	<u>12-B-27-10-06-00A-920A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A



## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
AILERON CONTROL ROD – OUTER WING - REMOVAL/INSTALLATION	<u>12-B-27-10-07-00A-920A-A</u>	2017-07-19	ALL
AILERON CONTROL SYSTEM – FUSELAGE BELLCRANK - MAGNETIC PARTICLE INSPECTION	<u>12-B-27-10-08-00A-352B-A</u>	2017-07-19	ALL
AILERON CONTROL SYSTEM – OUTER WING BELLCRANK - EDDY CURRENT INSPECTION	<u>12-B-27-10-08-00A-353A-A</u>	2017-07-19	ALL
AILERON CONTROL SYSTEM – FUSELAGE BELLCRANK - EDDY CURRENT INSPECTION	<u>12-B-27-10-08-00A-353B-A</u>	2017-07-19	ALL
AILERON CONTROL SYSTEM – OUTER WING BELLCRANK - REMOVAL/INSTALLATION	<u>12-B-27-10-08-00A-920A-A</u>	2017-07-19	ALL
AILERON CONTROL SYSTEM – FUSELAGE BELLCRANK - REMOVAL/INSTALLATION	<u>12-B-27-10-08-00A-920B-A</u>	2017-07-19	ALL
AILERON CONTROL SYSTEM – FUSELAGE CABLE QUADRANT - EDDY CURRENT INSPECTION	<u>12-B-27-10-09-00A-353A-A</u>	2017-07-19	ALL
AILERON CONTROL SYSTEM – FUSELAGE CABLE QUADRANT - REMOVAL/INSTALLATION	<u>12-B-27-10-09-00A-920A-A</u>	2017-07-19	ALL
AILERON TRIM - DESCRIPTION AND OPERATION	<u>12-B-27-15-00-00A-040A-A</u>	2017-07-19	ALL
AILERON TRIM - ADJUSTMENT/TEST	<u>12-B-27-15-00-00A-903A-A</u>	2017-07-19	ALL
AILERON TRIM ACTUATOR - REMOVAL/INSTALLATION	<u>12-B-27-15-01-00A-920A-A</u>	2017-07-19	ALL
RUDDER CONTROL SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-27-20-00-00A-040A-A</u>	2017-07-19	ALL
RUDDER CONTROL SYSTEM - PARTS LIST – KIT P/N 500.60.12.018	<u>12-B-27-20-00-00A-307A-A</u>	2017-07-19	ALL
RUDDER CONTROL SYSTEM - EXAMINE	<u>12-B-27-20-00-00A-310A-A</u>	2017-07-19	ALL
RUDDER CONTROL SYSTEM - ADJUSTMENT/TEST	<u>12-B-27-20-00-00A-903A-A</u>	2017-07-19	ALL
RUDDER CABLES - REMOVAL/INSTALLATION	<u>12-B-27-20-01-00A-920A-A</u>	2017-07-19	ALL
RUDDER AUTOPILOT CABLES - REMOVAL/INSTALLATION	<u>12-B-27-20-02-00A-920A-A</u>	2017-07-19	ALL
RUDDER CONTROL SYSTEM – BELLCRANK - EDDY CURRENT INSPECTION	<u>12-B-27-20-04-00A-353A-A</u>	2017-07-19	ALL
RUDDER CONTROL SYSTEM – CABLE QUADRANT - EXAMINE	<u>12-B-27-20-05-00A-310A-A</u>	2017-07-19	ALL
RUDDER TRIM - DESCRIPTION AND OPERATION	<u>12-B-27-25-00-00A-040A-A</u>	2017-07-19	ALL
RUDDER TRIM - ADJUSTMENT/TEST	<u>12-B-27-25-00-00A-903A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
RUDDER TRIM ACTUATOR - REMOVAL/INSTALLATION	<u>12-B-27-25-01-00A-920A-A</u>	2017-07-19	ALL
ELEVATOR CONTROL SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-27-30-00-00A-040A-A</u>	2017-07-19	ALL
ELEVATOR CONTROL SYSTEM - PARTS LIST – KIT P/N 500.60.12.019	<u>12-B-27-30-00-00A-307A-A</u>	2017-07-19	ALL
ELEVATOR CONTROL SYSTEM - EXAMINE	<u>12-B-27-30-00-00A-310A-A</u>	2017-07-19	ALL
ELEVATOR CONTROL SYSTEM - ADJUSTMENT/TEST	<u>12-B-27-30-00-00A-903A-A</u>	2018-02-13	ALL
ELEVATOR CABLES - REMOVAL/INSTALLATION	<u>12-B-27-30-01-00A-920A-A</u>	2017-07-19	ALL
ELEVATOR AUTOPILOT CABLES - REMOVAL/INSTALLATION	<u>12-B-27-30-02-00A-920A-A</u>	2017-07-19	ALL
ELEVATOR CONTROL SYSTEM – CONTROL LEVER - EDDY CURRENT INSPECTION	<u>12-B-27-30-05-00A-353A-A</u>	2017-07-19	ALL
ELEVATOR CONTROL LEVER - REMOVAL/INSTALLATION	<u>12-B-27-30-05-00A-920A-A</u>	2017-07-19	ALL
ELEVATOR CONTROL SYSTEM – BELLCRANK - SPECIAL REPAIR RM 12-008	<u>12-B-27-30-06-00A-664A-A</u>	2017-07-19	ALL
HORIZONTAL STABILIZER TRIM - DESCRIPTION AND OPERATION	<u>12-B-27-40-00-00A-040A-A</u>	2017-07-19	ALL
HORIZONTAL STABILIZER TRIM - ADJUSTMENT/TEST	<u>12-B-27-40-00-00A-903A-A</u>	2017-07-19	ALL
PITCH TRIM ACTUATOR AND ATTACHMENTS - INSPECTION/CHECK	<u>12-B-27-40-01-00A-313A-A</u>	2017-07-19	ALL
PITCH TRIM ACTUATOR - REMOVAL/INSTALLATION	<u>12-B-27-40-01-00A-920A-A</u>	2017-07-19	ALL
HORIZONTAL STABILIZER TRIM – TRIM ACTUATOR FAILSAFE PLATES - REMOVAL/INSTALLATION	<u>12-B-27-40-02-00A-920A-A</u>	2017-07-19	ALL
FLAPS - DESCRIPTION AND OPERATION	<u>12-B-27-50-00-00A-040A-A</u>	C 2018-11-29	ALL
FLAPS - FAULT ISOLATION PROCEDURE	<u>12-B-27-50-00-00A-420A-A</u>	2018-05-24	ALL
FLAPS - MAINTENANCE PRACTICES	<u>12-B-27-50-00-00A-901A-A</u>	2017-07-19	ALL
FLAPS - SERVICING	<u>12-B-27-50-00-00A-902A-A</u>	2017-07-19	ALL
FLAPS - ADJUSTMENT/TEST	<u>12-B-27-50-00-00A-903A-A</u>	2017-07-19	ALL
POWER DRIVE UNIT - REMOVAL/INSTALLATION	<u>12-B-27-50-01-00A-920A-A</u>	2017-07-19	ALL
FLAP DRIVE SHAFTS - REMOVAL/INSTALLATION	<u>12-B-27-50-02-00A-920A-A</u>	2018-02-13	ALL
FLAP ACTUATOR - INSPECTION/CHECK	<u>12-B-27-50-03-00A-313A-A</u>	2017-07-19	ALL
FLAP ACTUATOR - ADJUSTMENT/TEST	<u>12-B-27-50-03-00A-903A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
FLAP ACTUATOR - REMOVAL/ INSTALLATION	<u>12-B-27-50-03-00A-920A-A</u>	2017-07-19	ALL
FLAP CONTROL AND WARNING UNIT - REMOVAL/INSTALLATION	<u>12-B-27-50-05-00A-920A-A</u>	2017-07-19	ALL
FLAP POSITION TRANSMITTERS - REMOVAL/INSTALLATION	<u>12-B-27-50-06-00A-920A-A</u>	2017-07-19	ALL
UP AND DOWN LIMIT SWITCHES - ADJUSTMENT/TEST	<u>12-B-27-50-07-00A-903A-A</u>	2017-07-19	ALL
UP AND DOWN LIMIT SWITCHES - REMOVAL/INSTALLATION	<u>12-B-27-50-07-00A-920A-A</u>	2017-07-19	ALL
FLAP POSITION SELECTOR - AD- JUSTMENT/TEST	<u>12-B-27-50-08-00A-903A-A</u>	2017-07-19	ALL
FLAP POSITION SELECTOR - RE- MOVAL/INSTALLATION	<u>12-B-27-50-08-00A-920A-A</u>	2017-07-19	ALL
FLAP DRIVE SYSTEM - EXAMINE	<u>12-B-27-51-00-00A-310A-A</u>	2017-07-19	ALL
FLAP DRIVE SYSTEM - IN SITU IN- SPECTION/CHECK	<u>12-B-27-51-00-00A-313A-A</u>	2017-07-19	ALL
FLAP DRIVE SYSTEM - IN SITU EDDY CURRENT INSPECTION	<u>12-B-27-51-00-00A-353A-A</u>	2017-07-19	ALL
FLAP DRIVE SYSTEM – WING – LH INBOARD MECHANISM - PARTS LIST – KIT P/N 500.60.12.021	<u>12-B-27-51-01-00A-307A-A</u>	2017-07-19	ALL
FLAP DRIVE SYSTEM – WING – RH INBOARD MECHANISM - PARTS LIST – KIT P/N 500.60.12.022	<u>12-B-27-51-01-00A-307B-A</u>	2017-07-19	ALL
FLAP DRIVE SYSTEM – WING – IN- BOARD MECHANISM - EDDY CUR- RENT INSPECTION	<u>12-B-27-51-01-00A-353A-A</u>	2017-07-19	ALL
FLAP DRIVE SYSTEM – WING – IN- BOARD MECHANISM - REMOVAL/ INSTALLATION	<u>12-B-27-51-01-00A-920A-A</u>	2017-07-19	ALL
FLAP DRIVE SYSTEM – WING – LH CENTER MECHANISM - PARTS LIST – KIT P/N 500.60.12.023	<u>12-B-27-51-02-00A-307A-A</u>	2017-07-19	All
FLAP DRIVE SYSTEM – WING – RH CENTER MECHANISM - PARTS LIST – KIT P/N 500.60.12.024	<u>12-B-27-51-02-00A-307B-A</u>	2017-07-19	ALL
FLAP DRIVE SYSTEM – WING – CEN- TER MECHANISM - EDDY CURRENT INSPECTION	<u>12-B-27-51-02-00A-353A-A</u>	2017-07-19	ALL
FLAP DRIVE SYSTEM – WING – CEN- TER MECHANISM - REMOVAL/ INSTALLATION	<u>12-B-27-51-02-00A-920A-A</u>	2017-07-19	ALL
FLAP DRIVE SYSTEM – WING – OUT- BOARD MECHANISM - PARTS LIST – KIT P/N 500.60.12.025	<u>12-B-27-51-03-00A-307A-A</u>	2017-07-19	ALL
FLAP DRIVE SYSTEM – WING – OUT- BOARD MECHANISM - EDDY CUR- RENT INSPECTION	<u>12-B-27-51-03-00A-353A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
FLAP DRIVE SYSTEM – WING – OUT-BOARD MECHANISM - REMOVAL/INSTALLATION	<u>12-B-27-51-03-00A-920A-A</u>	2017-07-19	ALL
GUST LOCK - DESCRIPTION AND OPERATION	<u>12-B-27-70-00-00A-040A-A</u>	2017-07-19	ALL
FUEL - DESCRIPTION AND OPERATION	<u>12-B-28-00-00-00A-040A-A</u>	2017-07-19	ALL
FUEL - MAINTENANCE PRACTICES	<u>12-B-28-00-00-00A-901A-A</u>	2017-07-19	ALL
FUEL TANK - DESCRIPTION	<u>12-B-28-10-00-00A-040A-A</u>	2018-02-13	ALL
FUEL TANK - INSPECTION/CHECK	<u>12-B-28-10-00-00A-313A-A</u>	2018-02-13	ALL
FUEL TANK - REPAIR	<u>12-B-28-10-00-00A-904A-A</u>	2018-02-13	ALL
TANK CROSS VENT PIPE AND OUTWARD CHECK VALVE - ADJUSTMENT/TEST	<u>12-B-28-10-01-00A-903A-A</u>	2017-07-19	ALL
DRAIN VALVE - REMOVAL/INSTALLATION	<u>12-B-28-10-02-00A-920A-A</u>	2017-07-19	ALL
DISTRIBUTION - DESCRIPTION AND OPERATION	<u>12-B-28-20-00-00A-040A-A</u>	2017-07-19	ALL
FUEL FILTER ELEMENT - CLEAN	<u>12-B-28-20-01-00A-250A-A</u>	2017-07-19	ALL
FUEL FILTER DIFFERENTIAL PRESSURE INDICATOR - REPAIR	<u>12-B-28-20-01-00A-904A-A</u>	2017-07-19	ALL
FUEL FILTER ELEMENT - REMOVAL/INSTALLATION	<u>12-B-28-20-01-00A-920A-A</u>	2017-07-19	ALL
LOW PRESSURE SWITCH - REMOVAL/INSTALLATION	<u>12-B-28-20-02-00A-920A-A</u>	2017-07-19	ALL
ENGINE DRIVEN PUMP - REMOVAL/INSTALLATION	<u>12-B-28-20-03-00A-920A-A</u>	2017-07-19	ALL
BOOSTER PUMP - REMOVAL/INSTALLATION	<u>12-B-28-20-04-00A-920A-A</u>	2017-07-19	ALL
TRANSFER JET PUMP - REMOVAL/INSTALLATION	<u>12-B-28-20-05-00A-920A-A</u>	2017-07-19	ALL
DELIVERY AND TRANSFER JET PUMP - CLEAN	<u>12-B-28-20-06-00A-250A-A</u>	2017-07-19	ALL
DELIVERY AND TRANSFER JET PUMP - REMOVAL/INSTALLATION	<u>12-B-28-20-06-00A-920A-A</u>	2017-07-19	ALL
FLOAT VALVE - ADJUSTMENT/TEST	<u>12-B-28-20-07-00A-903A-A</u>	2018-02-13	ALL
FLOAT VALVE - REMOVAL/INSTALLATION	<u>12-B-28-20-07-00A-920A-A</u>	2017-07-19	ALL
FIREWALL SHUTOFF VALVE - REMOVAL/INSTALLATION	<u>12-B-28-20-08-00A-920A-A</u>	2017-07-19	ALL
BALANCING SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-28-21-00-00A-040A-A</u>	2017-07-19	ALL
BALANCING SYSTEM - ADJUSTMENT/TEST	<u>12-B-28-21-00-00A-903A-A</u>	2017-07-19	ALL
FUEL INDICATION - DESCRIPTION AND OPERATION	<u>12-B-28-40-00-00A-040A-A</u>	2017-07-19	ALL
FUEL INDICATION - FAULT ISOLATION PROCEDURES	<u>12-B-28-40-00-00A-420A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

Document title	Data module code	Issue date	Effectivity
SIMPLIFIED SCI READER SOFTWARE (P/N 513.28.12.001) - LOAD SOFTWARE	<u>12-B-28-40-00-00A-750A-A</u>	2017-07-19	ALL
SIMPLIFIED SCI READER SOFTWARE (P/N 513.28.12.002) - LOAD SOFTWARE	<u>12-B-28-40-00-00A-750B-A</u>	2017-07-19	ALL
FUEL INDICATION - ADJUSTMENT/TEST	<u>12-B-28-40-00-00A-903A-A</u>	2017-07-19	ALL
FUEL QUANTITY SENSOR AND LOW LEVEL SENSOR - REMOVAL/INSTALLATION	<u>12-B-28-40-01-00A-920A-A</u>	2017-07-19	ALL
FUEL CONTROL MONITOR UNIT - REMOVAL/INSTALLATION	<u>12-B-28-40-04-00A-920A-A</u>	2017-07-19	ALL
HYDRAULIC POWER - DESCRIPTION AND OPERATION	<u>12-B-29-00-00-00A-040A-A</u>	2017-07-19	HYDRAULIC SYSTEM
HYDRAULIC POWER - FAULT ISOLATION PROCEDURE	<u>12-B-29-00-00-00A-420A-A</u>	2017-07-19	HYDRAULIC SYSTEM
HYDRAULIC POWER - MAINTENANCE PRACTICES	<u>12-B-29-00-00-00A-901A-A</u>	2017-07-19	HYDRAULIC SYSTEM
HYDRAULIC SYSTEM - SERVICING	<u>12-B-29-00-00-00A-902A-A</u>	2017-07-19	HYDRAULIC SYSTEM
HYDRAULIC POWER - ADJUSTMENT/TEST	<u>12-B-29-00-00-00A-903A-A</u>	2017-07-19	HYDRAULIC SYSTEM
MAIN HYDRAULIC SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-29-10-00-00A-040A-A</u>	2017-07-19	HYDRAULIC SYSTEM
HYDRAULIC POWER PACK - MAINTENANCE PRACTICES	<u>12-B-29-10-01-00A-901A-A</u>	2017-07-19	HYDRAULIC SYSTEM
HYDRAULIC POWER PACK - REMOVAL/INSTALLATION	<u>12-B-29-10-01-00A-920A-A</u>	2017-07-19	HYDRAULIC SYSTEM
ACCUMULATOR - MAINTENANCE PRACTICES	<u>12-B-29-10-02-00A-901A-A</u>	2017-07-19	HYDRAULIC SYSTEM
ACCUMULATOR - REMOVAL/INSTALLATION	<u>12-B-29-10-02-00A-920A-A</u>	2017-07-19	HYDRAULIC SYSTEM
LOW PRESSURE SWITCH - REMOVAL/INSTALLATION	<u>12-B-29-10-03-00A-920A-A</u>	2017-07-19	HYDRAULIC SYSTEM
RETURN LINE FILTER DIFFERENTIAL PRESSURE INDICATOR - INSPECTION/CHECK	<u>12-B-29-10-04-00A-313A-A</u>	2017-07-19	HYDRAULIC SYSTEM
RETURN LINE FILTER - REMOVAL/INSTALLATION	<u>12-B-29-10-04-00A-920A-A</u>	2017-07-19	HYDRAULIC SYSTEM
SERVICE SELECTOR VALVE - REMOVAL/INSTALLATION	<u>12-B-29-10-05-00A-920A-A</u>	2017-07-19	HYDRAULIC SYSTEM
POWER PACK MOTOR - REMOVAL/INSTALLATION	<u>12-B-29-10-06-00A-920A-A</u>	2017-07-19	HYDRAULIC SYSTEM
SYSTEM PRESSURE SWITCH - REMOVAL/INSTALLATION	<u>12-B-29-10-07-00A-920A-A</u>	2017-07-19	HYDRAULIC SYSTEM
EMERGENCY HYDRAULIC SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-29-20-00-00A-040A-A</u>	2017-07-19	HYDRAULIC SYSTEM

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
HAND PUMP - REMOVAL/INSTALLATION	<u>12-B-29-20-01-00A-920A-A</u>	2017-07-19	HYDRAULIC SYSTEM
ICE AND RAIN PROTECTION - DESCRIPTION AND OPERATION	<u>12-B-30-00-00-00A-040A-A</u>	2017-07-19	ALL
AIRFOIL DE-ICE SYSTEM (TIMER WITHOUT INHIBIT FUNCTION) - DESCRIPTION AND OPERATION	<u>12-B-30-10-00-00A-040A-A</u>	2018-02-13	MSN 1001 - 1751 PRE SB 30-013 or PRE SB 30-015 or POST SB 30-015
AIRFOIL DE-ICE SYSTEM (TIMER WITH INHIBIT FUNCTION) - DESCRIPTION AND OPERATION	<u>12-B-30-10-00-00A-040B-A</u>	2018-02-13	MSN 1001 - 1751 POST SB 30-013 OR MSN 1752 AND UP
AIRFOIL DE-ICE BOOTS - INSPECTION/CHECK	<u>12-B-30-10-00-00A-313A-A</u>	2017-07-19	ALL
AIRFOIL DE-ICE SYSTEM (TIMER WITHOUT INHIBIT FUNCTION) - ADJUSTMENT/TEST	<u>12-B-30-10-00-00A-903A-A</u>	2018-02-13	MSN 1001 - 1751 PRE SB 30-013 or PRE SB 30-015 or POST SB 30-015
AIRFOIL DE-ICE SYSTEM (TIMER WITH INHIBIT FUNCTION) - ADJUSTMENT/TEST	<u>12-B-30-10-00-00A-903B-A</u>	2018-02-13	MSN 1001 - 1751 POST SB 30-013 OR MSN 1752 AND UP
PRESSURE REGULATOR - REMOVAL/INSTALLATION	<u>12-B-30-10-01-00A-920A-A</u>	2018-02-13	ALL
EJECTOR FLOW CONTROL VALVE - MAINTENANCE PRACTICES	<u>12-B-30-10-02-00A-901A-A</u>	2017-07-19	ALL
EJECTOR FLOW-CONTROL VALVE - REMOVAL/INSTALLATION	<u>12-B-30-10-02-00A-920A-A</u>	2018-02-13	ALL
AIRFOIL DE-ICE SYSTEM TIMER - REMOVAL/INSTALLATION	<u>12-B-30-10-03-00A-920A-A</u>	2018-02-13	ALL
AIRFOIL DE-ICE SYSTEM - PRESSURE SWITCH - REMOVAL/INSTALLATION	<u>12-B-30-10-04-00A-920A-A</u>	2018-02-13	ALL
WING DE-ICING BOOTS - REMOVAL/INSTALLATION	<u>12-B-30-14-01-00A-920A-A</u>	2018-02-13	ALL
HORIZONTAL STABILIZER DE-ICING BOOTS - REMOVAL/INSTALLATION	<u>12-B-30-16-01-00A-920A-A</u>	2018-02-13	ALL
AIR INTAKE DE-ICE SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-30-20-00-00A-040A-A</u>	2018-02-13	ALL
AIR INTAKE DE-ICE SYSTEM - ADJUSTMENT/TEST	<u>12-B-30-20-00-00A-903A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
INERTIAL SEPARATOR ACTUATOR - REMOVAL/INSTALLATION	<u>12-B-30-20-01-00A-920A-A</u>	2017-07-19	ALL
AIR INTAKE DE-ICE LIP - REMOVAL/INSTALLATION	<u>12-B-30-20-02-00A-920A-A</u>	2017-07-19	ALL
PROBES DE-ICE SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-30-30-00-00A-040A-A</u>	2017-07-19	ALL
DUAL PROBES DE-ICE SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-30-30-20-00A-040A-A</u>	2017-07-19	ALL
PROBES DE-ICE SYSTEM - ADJUSTMENT/TEST	<u>12-B-30-30-20-00A-903A-A</u>	2017-07-19	ALL
AOA PLATE CONTROLLER - REMOVAL/INSTALLATION	<u>12-B-30-30-21-00A-920A-A</u>	2017-07-19	ALL
WINDSHIELD DE-ICE SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-30-40-00-00A-040A-A</u>	2017-07-19	ALL
WINDSHIELD DE-ICE SYSTEM - MAINTENANCE PRACTICES	<u>12-B-30-40-00-00A-901A-A</u>	2017-07-19	ALL
WINDSHIELD DE-ICE SYSTEM - ADJUSTMENT/TEST	<u>12-B-30-40-00-00A-903A-A</u>	2017-07-19	ALL
WINDSHIELD DE-ICE CONTROLLER - REMOVAL/INSTALLATION	<u>12-B-30-40-01-00A-920A-A</u>	2017-07-19	ALL
FOUR-BLADED PROPELLER DE-ICE SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-30-60-00-00A-040A-A</u>	2017-07-19	FOUR-BLADED PROPELLER
FIVE-BLADED PROPELLER DE-ICE SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-30-60-00-00A-040B-A</u>	2017-07-19	FIVE-BLADED PROPELLER
FOUR-BLADED PROPELLER DE-ICE SYSTEM - INSPECTION/CHECK	<u>12-B-30-60-00-00A-313A-A</u>	2018-05-24	FOUR-BLADED PROPELLER
FIVE-BLADED PROPELLER DE-ICE SYSTEM - INSPECTION/CHECK	<u>12-B-30-60-00-00A-313B-A</u>	2018-05-24	FIVE-BLADED PROPELLER
FIVE-BLADED PROPELLER DE-ICE SYSTEM - FAULT ISOLATION PROCEDURE	<u>12-B-30-60-00-00A-420B-A</u>	2017-07-19	ALL
FOUR-BLADED PROPELLER DE-ICE SYSTEM (WITHOUT PROPELLER DE-ICE TEST SET) - ADJUSTMENT/TEST	<u>12-B-30-60-00-00A-903A-A</u>	C 2018-11-29	WITHOUT PROPELLER DE-ICE TEST SET
FOUR-BLADED PROPELLER DE-ICE SYSTEM (WITH PROPELLER DE-ICE TEST SET) - ADJUSTMENT/TEST	<u>12-B-30-60-00-00A-903C-A</u>	C 2018-11-29	WITH PROPELLER DE-ICE TEST SET
FIVE-BLADED PROPELLER DE-ICE SYSTEM (WITHOUT PROPELLER DE-ICE TEST SET) - ADJUSTMENT/TEST	<u>12-B-30-60-00-00A-903B-A</u>	C 2018-11-29	WITHOUT PROPELLER DE-ICE TEST SET

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
FIVE-BLADED PROPELLER DE-ICE SYSTEM (WITH PROPELLER DE-ICE TEST SET) - ADJUSTMENT/TEST	<u>12-B-30-60-00-00A-903D-A</u>	C 2018-11-29	WITH PROPELLER DE-ICE TEST SET
TIMER - REMOVAL/INSTALLATION	<u>12-B-30-60-01-00A-920A-A</u>	2018-05-24	ALL
FOUR-BLADED PROPELLER BRUSH PACK AND MOV - REMOVAL/INSTALLATION	<u>12-B-30-60-02-00A-920A-A</u>	2018-05-24	ALL
FIVE-BLADED PROPELLER BRUSH PACK AND MOV - REMOVAL INSTALLATION	<u>12-B-30-60-02-00A-920B-A</u>	2018-05-24	ALL
INDICATING AND RECORDING SYSTEMS - DESCRIPTION AND OPERATION	<u>12-B-31-00-00-00A-040A-A</u>	2017-07-19	ALL
OVERHEAD CONTROL PANEL - DESCRIPTION AND OPERATION	<u>12-B-31-10-00-00A-040A-A</u>	2017-07-19	ALL
OVERHEAD CONTROL PANEL - ADJUSTMENT/TEST	<u>12-B-31-10-00-00A-903A-A</u>	2017-07-19	ALL
OVERHEAD CONTROL PANEL - REMOVAL/INSTALLATION	<u>12-B-31-10-00-00A-920A-A</u>	2017-07-19	ALL
INDEPENDENT INSTRUMENTS - DESCRIPTION AND OPERATION	<u>12-B-31-20-00-00A-040A-A</u>	2017-07-19	ALL
CLOCKS - DESCRIPTION AND OPERATION	<u>12-B-31-20-10-00A-040A-A</u>	2017-07-19	ALL
DIGITAL CLOCK DC20 - DESCRIPTION AND OPERATION	<u>12-B-31-20-12-00A-040A-A</u>	2017-07-19	DIGITAL CLOCK DC20
DIGITAL CLOCK M877 - DESCRIPTION AND OPERATION	<u>12-B-31-20-12-00A-040B-A</u>	2017-07-19	DAVTRON
DIGITAL CLOCK DC20 - ADJUSTMENT/TEST	<u>12-B-31-20-12-00A-903A-A</u>	2017-07-19	DIGITAL CLOCK DC20
DIGITAL CLOCK M877 - ADJUSTMENT/TEST	<u>12-B-31-20-12-00A-903B-A</u>	2017-07-19	DAVTRON M877
DIGITAL CLOCK DC20 - REMOVAL/INSTALLATION	<u>12-B-31-20-12-00A-920A-A</u>	2017-07-19	DIGITAL CLOCK DC20
DIGITAL CLOCK M877 - REMOVAL/INSTALLATION	<u>12-B-31-20-12-00A-920B-A</u>	2017-07-19	DAVTRON M877
TIME COUNTERS - DESCRIPTION AND OPERATION	<u>12-B-31-20-20-00A-040A-A</u>	2017-07-19	ALL
FLIGHT TIME COUNTER - DESCRIPTION AND OPERATION	<u>12-B-31-20-21-00A-040A-A</u>	2017-07-19	ALL
FLIGHT TIME COUNTER - REMOVAL/INSTALLATION	<u>12-B-31-20-21-00A-920A-A</u>	2017-07-19	ALL
RECORDERS - LDR - DESCRIPTION AND OPERATION	<u>12-B-31-30-01-00A-040A-A</u>	2017-07-19	LDR
ACMS AND LDR DATA PROCESSING GUIDE - SOFTWARE DOCUMENTATION	<u>12-B-31-30-01-00A-090A-A</u>	N 2018-11-29	ALL
RECORDERS - LDR - STORAGE READOUT (DOWNLOADING)	<u>12-B-31-30-01-00A-551A-A</u>	C 2018-11-29	LDR

Effectivity: ALL

12-B-00-00-00-00A-002A-A



Document title	Data module code	Issue date	Effectivity
RECORDERS - LDR - DATA ERASING	<u>12-B-31-30-01-00A-552A-A</u>	2017-07-19	LDR
RECORDERS - LDR - ADJUSTMENT/ TEST	<u>12-B-31-30-01-00A-903A-A</u>	2018-02-13	LDR
RECORDERS - LDR - REMOVAL/ INSTALLATION	<u>12-B-31-30-01-00A-920A-A</u>	2017-07-19	LDR
RECORDERS – AREA MICROPHONE - REMOVAL/INSTALLATION	<u>12-B-31-30-02-00A-920A-A</u>	2017-07-19	LDR
RECORDERS – TEST INSTRUMENTA- TION UNIT – LUNCHBOX UNIT - RE- MOVAL/INSTALLATION	<u>12-B-31-30-05-00A-920A-A</u>	2017-07-19	ALL
RECORDERS – TEST INSTRUMENTA- TION UNIT – DATATAP UNIT - RE- MOVAL/INSTALLATION	<u>12-B-31-30-05-00A-920B-A</u>	2017-07-19	ALL
CENTRAL COMPUTERS - DESCRIP- TION AND OPERATION	<u>12-B-31-40-00-00A-040A-A</u>	2018-05-24	ALL
MODULAR AVIONICS UNIT - DE- SCRIPTION AND OPERATION	<u>12-B-31-41-00-00A-040A-A</u>	2018-02-13	ALL
MODULAR AVIONICS UNIT - ADJUST- MENT/TEST	<u>12-B-31-41-00-00A-903A-A</u>	2017-07-19	ALL
MODULAR AVIONICS UNIT - REMOV- AL/INSTALLATION	<u>12-B-31-41-00-00A-920A-A</u>	2017-07-19	ALL
MODULAR AVIONICS UNIT – SWING BOLTS - REMOVAL/INSTALLATION	<u>12-B-31-41-01-00A-920A-A</u>	2017-07-19	ALL
MODULAR AVIONICS UNIT MODULES - REMOVAL/INSTALLATION	<u>12-B-31-42-00-00A-920A-A</u>	C 2018-11-29	ALL
MODULAR AVIONICS UNIT COOLING FANS - REMOVAL/INSTALLATION	<u>12-B-31-43-00-00A-920A-A</u>	2017-07-19	ALL
CENTRAL WARNING SYSTEM - DE- SCRIPTION AND OPERATION	<u>12-B-31-50-00-00A-040A-A</u>	C 2018-11-29	ALL
LIGHTED PUSHBUTTON FILAMENT - REMOVAL/INSTALLATION	<u>12-B-31-50-01-00A-920A-A</u>	2017-07-19	ALL
AURAL WARNING SYSTEM - DE- SCRIPTION AND OPERATION	<u>12-B-31-51-00-00A-040A-A</u>	2017-07-19	ALL
CREW ALERTING SYSTEM - DE- SCRIPTION AND OPERATION	<u>12-B-31-52-00-00A-040A-A</u>	2017-07-19	ALL
FLIGHT ALERTING SYSTEM - DE- SCRIPTION AND OPERATION	<u>12-B-31-53-00-00A-040A-A</u>	2017-07-19	ALL
VIDEO INTERFACE - DESCRIPTION AND OPERATION	<u>12-B-31-60-10-00A-040A-A</u>	2017-07-19	VIDEO INPUT
VIDEO INTERFACE - REMOVAL/ INSTALLATION	<u>12-B-31-60-10-00A-920A-A</u>	2017-07-19	VIDEO IN- TERFACE
LANDING GEAR – HYDRAULIC - DE- SCRIPTION AND OPERATION	<u>12-B-32-00-00-00A-040A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
LANDING GEAR – ELECTRO ME- CHANICAL - DESCRIPTION AND OP- ERATION	<u>12-B-32-00-00-00A-040B-A</u>	2017-07-19	ELECTRO- MECHANI- CAL LAND- ING GEAR

Effectivity: ALL

12-B-00-00-00-00A-002A-A

UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
LANDING GEAR – HYDRAULIC - MAINTENANCE PRACTICES	<u>12-B-32-00-00-00A-901A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
LANDING GEAR – ELECTRO MECHANICAL - MAINTENANCE PRACTICES	<u>12-B-32-00-00-00A-901B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
MAIN LANDING GEAR AND DOORS – HYDRAULIC LANDING GEAR - DESCRIPTION AND OPERATION	<u>12-B-32-10-00-00A-040A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
MAIN LANDING GEAR AND DOORS – ELECTRO MECHANICAL LANDING GEAR - DESCRIPTION AND OPERATION	<u>12-B-32-10-00-00A-040B-A</u>	2017-07-19	ELECTRO-MECHANICAL LANDING GEAR
MAIN LANDING GEAR ASSEMBLY - HYDRAULIC LANDING GEAR - ATTACHMENT BOLTS AND NUTS - EXAMINE	<u>12-B-32-10-00-00A-310A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
MAIN LANDING GEAR ASSEMBLY - ELECTRO MECHANICAL LANDING GEAR - ATTACHMENT BOLTS AND NUTS - EXAMINE	<u>12-B-32-10-00-00A-310B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
MAIN LANDING GEAR HINGE PIN AND BUSHES – HYDRAULIC LANDING GEAR - INSPECTION/CHECK	<u>12-B-32-10-00-00A-313A-A</u>	C 2018-11-29	HYDRAULIC LANDING GEAR
MAIN LANDING GEAR HINGE PIN AND BUSHES – ELECTRO MECHANICAL LANDING GEAR - INSPECTION/CHECK	<u>12-B-32-10-00-00A-313B-A</u>	C 2018-11-29	ELECTRO MECHANICAL LANDING GEAR
MAIN LANDING GEAR SHOCK ABSORBER - SERVICING	<u>12-B-32-10-00-00A-902A-A</u>	2017-07-19	ALL
MAIN LANDING GEAR AND DOORS – HYDRAULIC LANDING GEAR - ADJUSTMENT/TEST	<u>12-B-32-10-00-00A-903A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
MAIN LANDING GEAR AND DOORS – ELECTRO MECHANICAL LANDING GEAR - ADJUSTMENT/TEST	<u>12-B-32-10-00-00A-903B-A</u>	2017-07-19	ALL
MAIN GEAR AND DOORS - REPAIR TO REMOVE THE MLG BAY SEAL	<u>12-B-32-10-00-00A-904B-A</u>	2017-07-19	ALL
MAIN LANDING GEAR LEG – HYDRAULIC LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-10-01-00A-920A-A</u>	2017-07-19	ALL
MAIN LANDING GEAR LEG – ELECTRO MECHANICAL LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-10-01-00A-920B-A</u>	2017-07-19	ELECTRO-MECHANICAL LANDING GEAR
MAIN LANDING GEAR DOOR – HYDRAULIC LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-10-02-00A-920A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR

Effectivity: ALL

12-B-00-00-00-00A-002A-A

UNCLASSIFIED

2018-11-29 Page 26

Document title	Data module code	Issue date	Effectivity
MAIN LANDING GEAR DOOR – ELECTRO MECHANICAL LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-10-02-00A-920B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
SHOCK ABSORBER – HYDRAULIC LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-10-03-00A-920A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
SHOCK ABSORBER – ELECTRO MECHANICAL LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-10-03-00A-920B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
MAIN GEAR AND DOORS – FOLDING STRUT - REMOVAL/INSTALLATION	<u>12-B-32-10-05-00A-920A-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
MAIN GEAR AND DOORS – SPRING STRUT - INSPECTION/CHECK	<u>12-B-32-10-06-00A-313A-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
MAIN GEAR AND DOORS - SPRING STRUT - REPAIR	<u>12-B-32-10-06-00A-904A-C</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
MAIN GEAR AND DOORS – SPRING STRUT - REMOVAL/INSTALLATION	<u>12-B-32-10-06-00A-920A-A</u>	2018-02-13	ELECTRO MECHANICAL LANDING GEAR
MAIN GEAR AND DOORS – DRAG LINK - REMOVAL/INSTALLATION	<u>12-B-32-10-07-00A-920A-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
NOSE LANDING GEAR AND DOORS – HYDRAULIC LANDING GEAR - DESCRIPTION AND OPERATION	<u>12-B-32-20-00-00A-040A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
NOSE LANDING GEAR AND DOORS – ELECTRO MECHANICAL LANDING GEAR - DESCRIPTION AND OPERATION	<u>12-B-32-20-00-00A-040B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
NLG AND DRAG LINK ATTACHMENT BEARINGS - INSPECTION/CHECK	<u>12-B-32-20-00-00A-313A-A</u>	2017-07-19	ALL
NOSE LANDING GEAR SHOCK ABSORBER - SERVICING	<u>12-B-32-20-00-00A-902A-A</u>	2017-07-19	ALL
NOSE LANDING GEAR AND DOORS – HYDRAULIC LANDING GEAR - ADJUSTMENT/TEST	<u>12-B-32-20-00-00A-903A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
NOSE LANDING GEAR AND DOORS – ELECTRO MECHANICAL LANDING GEAR - ADJUSTMENT/TEST	<u>12-B-32-20-00-00A-903B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
NOSE LANDING GEAR LEG – HYDRAULIC LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-20-01-00A-920A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
NOSE LANDING GEAR LEG – ELECTRO MECHANICAL LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-20-01-00A-920B-A</u>	2017-07-19	ELECTRO-MECHANICAL LANDING GEAR
NOSE LANDING GEAR DOOR – HYDRAULIC LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-20-02-00A-920A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
NOSE LANDING GEAR DOOR – ELECTRO MECHANICAL LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-20-02-00A-920B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
SPRING STRUT – HYDRAULIC LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-20-03-00A-920A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
SPRING STRUT – ELECTRO MECHANICAL LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-20-03-00A-920B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
TOWING INDICATOR - REMOVAL/INSTALLATION	<u>12-B-32-20-04-00A-920A-A</u>	2017-07-19	ALL
DRAG LINK ASSEMBLY – HYDRAULIC LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-20-05-00A-920A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
DRAG LINK ASSEMBLY – ELECTRO MECHANICAL LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-20-05-00A-920B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
DRAG LINK RIGHT PART - INSPECTION/CHECK	<u>12-B-32-20-06-00A-313A-A</u>	2017-07-19	ALL
DRAG LINK RIGHT PART – HYDRAULIC LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-20-06-00A-920A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
DRAG LINK RIGHT PART – ELECTRO MECHANICAL LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-20-06-00A-920B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
EXTENSION AND RETRACTION – HYDRAULIC LANDING GEAR - DESCRIPTION AND OPERATION	<u>12-B-32-30-00-00A-040A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
EXTENSION AND RETRACTION – ELECTRO MECHANICAL LANDING GEAR - DESCRIPTION AND OPERATION	<u>12-B-32-30-00-00A-040B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
EXTENSION AND RETRACTION – HYDRAULIC LANDING GEAR - ADJUSTMENT/TEST	<u>12-B-32-30-00-00A-903A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR

Effectivity: ALL

12-B-00-00-00-00A-002A-A

UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
EXTENSION AND RETRACTION – ELECTRO MECHANICAL LANDING GEAR - ADJUSTMENT/TEST	<u>12-B-32-30-00-00A-903B-A</u>	2017-07-19	ELECTRO-MECHANICAL LANDING GEAR
MAIN LANDING GEAR ACTUATOR – SPHERICAL BEARINGS - ALLOWABLE WEAR	<u>12-B-32-30-01-00A-361A-A</u>	2017-07-19	ALL
MAIN LANDING GEAR ACTUATOR – HYDRAULIC LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-30-01-00A-920A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
MAIN LANDING GEAR ACTUATOR – ELECTRO MECHANICAL LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-30-01-00A-920B-A</u>	2017-07-19	ELECTRO-MECHANICAL LANDING GEAR
MLG ACTUATOR ANTI ROTATION PAD - REMOVAL/INSTALLATION	<u>12-B-32-30-01-01A-920B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
NOSE LANDING GEAR ACTUATOR – SPHERICAL BEARINGS - ALLOWABLE WEAR	<u>12-B-32-30-02-00A-361A-A</u>	2017-07-19	ALL
NOSE LANDING GEAR ACTUATOR – HYDRAULIC LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-30-02-00A-920A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
NOSE LANDING GEAR ACTUATOR – ELECTRO MECHANICAL LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-30-02-00A-920B-A</u>	2017-07-19	ALL
NLG ACTUATOR ANTI ROTATION PAD - REMOVAL/INSTALLATION	<u>12-B-32-30-02-01A-920B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
SELECTOR VALVE – HYDRAULIC LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-30-03-00A-920A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
LANDING GEAR SELECTOR – HYDRAULIC LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-30-04-00A-920A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
LANDING GEAR SELECTOR – ELECTRO MECHANICAL LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-30-04-00A-920B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
LANDING GEAR SELECTOR SOLENOID – HYDRAULIC LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-30-05-00A-920A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
LANDING GEAR SELECTOR SOLENOID - ELECTRO MECHANICAL LANDING GEAR - REMOVAL INSTALLATION	<u>12-B-32-30-05-00A-920B-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

UNCLASSIFIED

2018-11-29 Page 29

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
LANDING GEAR SELECTOR MICRO-SWITCH - ELECTRO MECHANICAL LANDING GEAR - REMOVAL INSTALLATION	<u>12-B-32-30-06-00A-920B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
LANDING GEAR RELAY UNIT – ELECTRO MECHANICAL LANDING GEAR - ADJUSTMENT/TEST	<u>12-B-32-30-08-00A-903A-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
LANDING GEAR RELAY UNIT – ELECTRO MECHANICAL LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-30-08-00A-920A-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
EMERGENCY GEAR EXTENSION SYSTEM – ELECTRO MECHANICAL LANDING GEAR - DESCRIPTION AND OPERATION	<u>12-B-32-30-10-00A-040A-A</u>	2017-07-19	ALL
EMERGENCY GEAR EXTENSION SYSTEM – ELECTRO MECHANICAL LANDING GEAR - INSPECTION/CHECK	<u>12-B-32-30-10-00A-313A-A</u>	2017-07-19	ALL
EMERGENCY GEAR EXTENSION SYSTEM – ELECTRO MECHANICAL LANDING GEAR - ADJUSTMENT/TEST	<u>12-B-32-30-10-00A-903A-A</u>	2017-07-19	ALL
EMERGENCY GEAR EXTENSION SYSTEM – ELECTRO MECHANICAL LANDING GEAR – HANDLE - REMOVAL/INSTALLATION	<u>12-B-32-30-10-01A-920A-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
EMERGENCY GEAR EXTENSION SYSTEM – ELECTRO MECHANICAL LANDING GEAR – NLG CABLE - REMOVAL/INSTALLATION	<u>12-B-32-30-10-02A-920A-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
EMERGENCY GEAR EXTENSION SYSTEM – ELECTRO MECHANICAL LANDING GEAR – INTERMEDIATE CABLE - REMOVAL/INSTALLATION	<u>12-B-32-30-10-03A-920A-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
EMERGENCY GEAR EXTENSION SYSTEM – ELECTRO MECHANICAL LANDING GEAR – MLG CABLE ASSEMBLY - REMOVAL/INSTALLATION	<u>12-B-32-30-10-04A-920A-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
WHEELS AND BRAKES - DESCRIPTION AND OPERATION	<u>12-B-32-40-00-00A-040A-A</u>	2017-07-19	ALL
WHEELS AND BRAKES - SERVICING	<u>12-B-32-40-00-00A-902A-A</u>	2017-07-19	ALL
MAIN WHEEL - REMOVAL/INSTALLATION	<u>12-B-32-40-01-00A-920A-A</u>	2017-07-19	ALL
NOSE WHEEL - REMOVAL/INSTALLATION	<u>12-B-32-40-02-00A-920A-A</u>	C 2018-11-29	ALL
BRAKE ASSEMBLY (MSN 1001 – 1230) - REMOVAL/INSTALLATION	<u>12-B-32-40-03-00A-920A-A</u>	2017-07-19	MSN 545, 1001-1230

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
BRAKE ASSEMBLY (MSN 1231 – 9999) - REMOVAL/INSTALLATION	<u>12-B-32-40-03-00A-920B-A</u>	2017-07-19	MSN 1231-9999
MASTER CYLINDER - REMOVAL/INSTALLATION	<u>12-B-32-40-04-00A-920A-A</u>	2017-07-19	ALL
PARK BRAKE VALVE - REMOVAL/INSTALLATION	<u>12-B-32-40-05-00A-920A-A</u>	2017-07-19	ALL
BRAKE SWIVEL ASSEMBLY (PRE SB 32-022) - REPAIR	<u>12-B-32-40-06-00A-904A-A</u>	2017-07-19	PRE SB 32-022
BRAKE SWIVEL ASSEMBLY (PRE SB 32-022) - REMOVAL/INSTALLATION	<u>12-B-32-40-06-00A-920A-A</u>	2017-07-19	PRE SB 32-022
PARK BRAKE CABLE - REMOVAL/INSTALLATION	<u>12-B-32-40-07-00A-920A-A</u>	2018-05-24	ALL
NOSE WHEEL STEERING - DESCRIPTION AND OPERATION	<u>12-B-32-50-00-00A-040A-A</u>	2017-07-19	ALL
NOSE WHEEL STEERING - EXAMINE	<u>12-B-32-50-00-00A-310A-A</u>	2017-07-19	ALL
NOSE WHEEL STEERING - ADJUSTMENT/TEST	<u>12-B-32-50-00-00A-903A-A</u>	2017-07-19	ALL
SHIMMY DAMPER - REMOVAL/INSTALLATION	<u>12-B-32-50-01-00A-920A-A</u>	2017-07-19	ALL
SPRING STRUT - CLEAN	<u>12-B-32-50-02-00A-250A-A</u>	2017-07-19	ALL
SPRING STRUT - REMOVAL/INSTALLATION	<u>12-B-32-50-02-00A-920A-A</u>	2017-07-19	ALL
TORQUE TUBE - REMOVAL/INSTALLATION	<u>12-B-32-50-03-00A-920A-A</u>	2017-07-19	ALL
POSITION AND WARNING – HYDRAULIC LANDING GEAR - DESCRIPTION AND OPERATION	<u>12-B-32-60-00-00A-040A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
POSITION AND WARNING – ELECTRO MECHANICAL LANDING GEAR - DESCRIPTION AND OPERATION	<u>12-B-32-60-00-00A-040B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
POSITION AND WARNING – ELECTRO MECHANICAL LANDING GEAR - ADJUSTMENT/TEST	<u>12-B-32-60-00-00A-903B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
POSITION AND WARNING – MLG MICROSCHWITCH - REMOVAL/INSTALLATION	<u>12-B-32-60-01-00A-920B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
WEIGHT ON WHEELS SWITCH - HYDRAULIC LANDING GEAR - REMOVAL/INSTALLATION	<u>12-B-32-60-12-00A-920A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
WEIGHT ON WHEELS SWITCH - ELECTRO MECHANICAL LANDING GEAR - REMOVAL INSTALLATION	<u>12-B-32-60-12-00A-920B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
LIGHTS - DESCRIPTION AND OPERATION	<u>12-B-33-00-00-00A-040A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
LIGHTS - LED LIGHTS - INSPECTION/ CHECK	<u>12-B-33-00-00-00A-313A-A</u>	2017-07-19	All
INTERIOR LIGHTS - ADJUSTMENT/ TEST	<u>12-B-33-00-00-00A-903A-A</u>	2017-07-19	ALL
FLIGHT COMPARTMENT LIGHTS - DESCRIPTION AND OPERATION	<u>12-B-33-10-00-00A-040A-A</u>	2017-07-19	ALL
REAR CENTER CONSOLE PANEL (PRE SB 46-003 AND MSN 1001 - 1175) - REMOVAL/INSTALLATION	<u>12-B-33-10-02-00A-920A-A</u>	2017-07-19	MSN 1001-1175
REAR CENTER CONSOLE PANEL (POST SB 46-003 AND MSN 1176 - 9999) - REMOVAL/INSTALLATION	<u>12-B-33-10-02-00A-920B-A</u>	2017-07-19	MSN 1176-9999
COCKPIT LIGHT DIM UNIT - REMOV- AL/INSTALLATION	<u>12-B-33-10-04-00A-920A-A</u>	2017-07-19	ALL
DOME LIGHT SWITCH - REMOVAL/ INSTALLATION	<u>12-B-33-10-05-00A-920A-A</u>	2017-07-19	ALL
PASSENGER COMPARTMENT LIGHTS - DESCRIPTION AND OPER- ATION	<u>12-B-33-20-00-00A-040A-A</u>	2017-07-19	ALL
PASSENGER DOOR STAIR LIGHTS - REMOVAL/INSTALLATION	<u>12-B-33-20-01-00A-920A-A</u>	2017-07-19	PASSENGER DOOR STAIR LIGHTS
LED FLOOD LIGHTS - EXECUTIVE IN- TERIOR - REMOVAL/INSTALLATION	<u>12-B-33-20-06-00A-920A-A</u>	2017-07-19	EXECUTIVE INTERIOR
FLOOD LIGHTS - STANDARD INTERI- OR - REMOVAL INSTALLATION	<u>12-B-33-20-06-00A-920B-A</u>	2017-07-19	STANDARD INTERIOR
LED READING LIGHTS - EXECUTIVE INTERIOR - REMOVAL/INSTALLATION	<u>12-B-33-20-07-00A-920A-A</u>	2017-07-19	EXECUTIVE INTERIOR
READING LIGHTS - STANDARD INTE- RIOR - REMOVAL INSTALLATION	<u>12-B-33-20-07-00A-920B-A</u>	2017-07-19	STANDARD INTERIOR
CARGO AND SERVICE COMPART- MENT LIGHTS - DESCRIPTION AND OPERATION	<u>12-B-33-30-00-00A-040A-A</u>	2017-07-19	ALL
EXTERNAL LIGHTS - DESCRIPTION AND OPERATION	<u>12-B-33-40-00-00A-040A-A</u>	2017-07-19	ALL
EXTERNAL LIGHTS - ADJUSTMENT/ TEST	<u>12-B-33-40-00-00A-903A-A</u>	2017-07-19	ALL
WING INSPECTION LIGHT - DE- SCRIPTION AND OPERATION	<u>12-B-33-40-12-00A-040A-A</u>	2017-07-19	ALL
WING INSPECTION LIGHT - REMOV- AL/INSTALLATION	<u>12-B-33-40-12-00A-920A-A</u>	2017-07-19	ALL
LANDING LIGHTS - HYDRAULIC LANDING GEAR - DESCRIPTION AND OPERATION	<u>12-B-33-41-00-00A-040A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
LED LANDING LIGHTS - ELECTRO MECHANICAL LANDING GEAR - DE- SCRIPTION AND OPERATION	<u>12-B-33-41-00-00A-040B-A</u>	2017-07-19	ELECTRO MECHANI- CAL LAND- ING GEAR / LED LIGHTS

Effectivity: ALL

12-B-00-00-00-00A-002A-A



## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
LED LANDING LIGHT - SERVICING	<u>12-B-33-41-01-00A-200B-A</u>	2017-07-19	LED LANDING LIGHT
LANDING LIGHT FILAMENT - REMOVAL/INSTALLATION	<u>12-B-33-41-01-00A-920A-A</u>	2017-07-19	ALL
LED LANDING LIGHT - REMOVAL/INSTALLATION	<u>12-B-33-41-01-00A-920B-A</u>	2017-07-19	LED LANDING LIGHT
TAXI LIGHT - DESCRIPTION AND OPERATION	<u>12-B-33-42-00-00A-040A-A</u>	2017-07-19	ALL
LED TAXI LIGHT - DESCRIPTION AND OPERATION	<u>12-B-33-42-00-00A-040B-A</u>	2017-07-19	1451-9999
LED TAXI LIGHT - SERVICING	<u>12-B-33-42-01-00A-200B-A</u>	2017-07-19	LED TAXI LIGHT
TAXI LIGHT FILAMENT - REMOVAL/INSTALLATION	<u>12-B-33-42-01-00A-920A-A</u>	2017-07-19	ALL
LED TAXI LIGHT - REMOVAL INSTALLATION	<u>12-B-33-42-01-00A-920B-A</u>	2017-07-19	LED TAXI LIGHT
NAVIGATION AND STROBE LIGHTS - DESCRIPTION AND OPERATION	<u>12-B-33-43-00-00A-040A-A</u>	2017-07-19	MSN 1001 - 1450
COMBINED LED NAVIGATION/ANTI COLLISION/POSITION LIGHTS - DESCRIPTION AND OPERATION	<u>12-B-33-43-00-00A-040B-A</u>	2017-07-19	ALL
NAVIGATION LIGHTS - REMOVAL/INSTALLATION	<u>12-B-33-43-01-00A-920A-A</u>	2017-07-19	ALL
COMBINED LED NAVIGATION/ANTI COLLISION/POSITION LIGHTS - REMOVAL/INSTALLATION	<u>12-B-33-43-01-00A-920B-A</u>	2017-07-19	COMBINED LED NAVIGATION/ANTI COLLISION/POSITION LIGHTS
STROBE LIGHTS - REMOVAL/INSTALLATION	<u>12-B-33-43-02-00A-920A-A</u>	2017-07-19	MSN 1001 - 1450
STROBE LIGHT POWER SUPPLY - REMOVAL/INSTALLATION	<u>12-B-33-43-03-00A-920A-A</u>	2017-07-19	MSN 1001 - 1450
LED ANTI COLLISION LIGHT POWER SUPPLY - REMOVAL/INSTALLATION	<u>12-B-33-43-03-00A-920B-A</u>	2017-07-19	COMBINED LED NAVIGATION/ANTI COLLISION/POSITION LIGHTS
RECOGNITION LIGHTS - DESCRIPTION AND OPERATION	<u>12-B-33-44-00-00A-040A-A</u>	2017-07-19	ALL
PULSE RECOGNITION LIGHTS - DESCRIPTION AND OPERATION	<u>12-B-33-44-00-00A-040B-A</u>	2017-07-19	PULSE RECOGNITION LIGHTS
LED PULSE RECOGNITION LIGHTS - DESCRIPTION AND OPERATION	<u>12-B-33-44-00-00A-040C-A</u>	2017-07-19	LED PULSE RECOGNITION LIGHTS
RECOGNITION LIGHTS - ADJUSTMENT	<u>12-B-33-44-00-00A-903A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
PULSE RECOGNITION LIGHTS - ADJUSTMENT	<u>12-B-33-44-00-00A-903B-A</u>	2017-07-19	PULSE RECOGNITION LIGHTS
LED PULSE RECOGNITION LIGHTS - ADJUSTMENT/TEST	<u>12-B-33-44-00-00A-903C-A</u>	2017-07-19	LED PULSE RECOGNITION LIGHTS
RECOGNITION LIGHTS - REMOVAL/INSTALLATION	<u>12-B-33-44-00-00A-920A-A</u>	2017-07-19	ALL
PULSE RECOGNITION LIGHTS - REMOVAL/INSTALLATION	<u>12-B-33-44-00-00A-920B-A</u>	2017-07-19	PULSE RECOGNITION LIGHTS
LED PULSE RECOGNITION LIGHTS - REMOVAL/INSTALLATION	<u>12-B-33-44-00-00A-920C-A</u>	2017-07-19	LED RECOGNITION LIGHTS
LOGO LIGHTS - DESCRIPTION AND OPERATION	<u>12-B-33-45-00-00A-040A-A</u>	2017-07-19	LOGO LIGHTS
LOGO LIGHTS - ADJUSTMENT/TEST	<u>12-B-33-45-00-00A-903A-A</u>	2017-07-19	LOGO LIGHTS
LOGO LIGHT FILAMENT - REMOVAL/INSTALLATION	<u>12-B-33-45-01-00A-920A-A</u>	2017-07-19	LOGO LIGHTS
RED FLASHING BEACONS - DESCRIPTION AND OPERATION	<u>12-B-33-46-00-00A-040A-A</u>	2017-07-19	ALL
RED LED FLASHING BEACONS - DESCRIPTION AND OPERATION	<u>12-B-33-46-00-00A-040B-A</u>	2017-07-19	RED LED FLASHING BEACONS
RED FLASHING BEACONS - REMOVAL/INSTALLATION	<u>12-B-33-46-00-00A-920A-A</u>	2017-07-19	ALL
LED RED FLASHING BEACONS - REMOVAL/INSTALLATION	<u>12-B-33-46-00-00A-920B-A</u>	2017-07-19	All
NAVIGATION - GENERAL WARNINGS AND CAUTIONS AND RELATED SAFETY DATA	<u>12-B-34-00-00-00A-012A-A</u>	2017-07-19	ALL
NAVIGATION - DESCRIPTION AND OPERATION	<u>12-B-34-00-00-00A-040A-A</u>	2017-07-19	ALL
FLIGHT ENVIRONMENT DATA - DESCRIPTION AND OPERATION	<u>12-B-34-10-00-00A-040A-A</u>	2017-07-19	ALL
PITOT STATIC SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-34-11-00-00A-040A-A</u>	2017-07-19	ALL
PITOT STATIC SYSTEM - MAINTENANCE PRACTICES	<u>12-B-34-11-00-00A-901A-A</u>	2017-07-19	ALL
PITOT STATIC SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-11-00-00A-903A-A</u>	2017-07-19	ALL
PITOT HEAD - REMOVAL/INSTALLATION	<u>12-B-34-11-11-00A-920A-A</u>	2017-07-19	ALL
STATIC PORT (RVSM) - INSPECTION/CHECK	<u>12-B-34-11-12-00A-313A-A</u>	2017-07-19	REDUCED VERTICAL SEPARATION MINIMA (RVSM)

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
STATIC PORT - REMOVAL/INSTALLATION	<u>12-B-34-11-12-00A-920A-A</u>	2017-07-19	ALL
OUTSIDE AIR TEMPERATURE - DESCRIPTION AND OPERATION	<u>12-B-34-12-00-00A-040A-A</u>	2017-07-19	ALL
OUTSIDE AIR TEMPERATURE SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-12-00-00A-903A-A</u>	2017-07-19	ALL
ALTITUDE AND VERTICAL SPEED INDICATION - ADJUSTMENT/TEST	<u>12-B-34-14-00-00A-903A-A</u>	2017-07-19	ALL
ALTITUDE AND VERTICAL SPEED INDICATION (RVSM) - ADJUSTMENT/TEST	<u>12-B-34-14-00-00A-903B-A</u>	2017-07-19	REDUCED VERTICAL SEPARATION MINIMA (RVSM)
ANGLE OF ATTACK - DESCRIPTION AND OPERATION	<u>12-B-34-15-00-00A-040A-A</u>	2017-07-19	ALL
AIRSPEED INDICATION - ADJUSTMENT/TEST	<u>12-B-34-16-00-00A-903A-A</u>	2017-07-19	ALL
ATTITUDE AND DIRECTION - DESCRIPTION AND OPERATION	<u>12-B-34-20-00-00A-040A-A</u>	2017-07-19	ALL
STANDBY MAGNETIC COMPASS - DESCRIPTION AND OPERATION	<u>12-B-34-21-00-00A-040A-A</u>	2017-07-19	STANDBY MAGNETIC COMPASS
STANDBY MAGNETIC COMPASS - ADJUSTMENT/TEST	<u>12-B-34-21-00-00A-903A-A</u>	N 2018-11-29	NG
STANDBY MAGNETIC COMPASS - REMOVAL/INSTALLATION	<u>12-B-34-21-00-00A-920A-A</u>	C 2018-11-29	STANDBY MAGNETIC COMPASS
AIR DATA, ATTITUDE AND HEADING REFERENCE SYSTEM KSG 7200 - DESCRIPTION AND OPERATION	<u>12-B-34-25-00-00A-040A-A</u>	2017-07-19	ALL
AIR DATA, ATTITUDE AND HEADING REFERENCE SYSTEM KSG 7200 - ADJUSTMENT/TEST	<u>12-B-34-25-00-00A-903A-A</u>	C 2018-11-29	ALL
AIR DATA, ATTITUDE AND HEADING REFERENCE UNIT - REMOVAL/INSTALLATION	<u>12-B-34-25-01-00A-920A-A</u>	2017-07-19	ALL
MAGNETOMETER (MSN 1001, 1002) - REMOVAL/INSTALLATION	<u>12-B-34-25-02-00A-920A-A</u>	C 2018-11-29	ALL
MAGNETOMETER (MSN 1003 – 9999) - REMOVAL/INSTALLATION	<u>12-B-34-25-02-00A-920B-A</u>	C 2018-11-29	ALL
ADAHRS CONFIGURATION MODULE - REMOVAL/INSTALLATION	<u>12-B-34-25-03-00A-920A-A</u>	2017-07-19	ALL
ADAHRS – HEADING/TRACK OVERRIDE SWITCH - DESCRIPTION AND OPERATION	<u>12-B-34-25-04-00A-040A-A</u>	2017-07-19	HEADING/TRACK OVERRIDE SWITCH
ADAHRS – HEADING/TRACK OVERRIDE SWITCH - ADJUSTMENT/TEST	<u>12-B-34-25-04-00A-903A-A</u>	2017-07-19	HEADING/TRACK OVERRIDE SWITCH

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
ADAHRS – HEADING/TRACK OVERRIDE SWITCH - REMOVAL/INSTALLATION	<u>12-B-34-25-04-00A-920A-A</u>	2017-07-19	HEADING/TRACK OVERRIDE SWITCH
ELECTRONIC STANDBY INSTRUMENT SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-34-26-40-00A-040A-A</u>	2017-07-19	MSN 1001 - 1270 PRE SB 34-042
ELECTRONIC STANDBY INSTRUMENT SYSTEM (MSN 1271 – 9999 OR POST SB 34-042 AIRCRAFT) - DESCRIPTION AND OPERATION	<u>12-B-34-26-40-00A-040B-A</u>	2017-07-19	L3 ESIS SYSTEM
ELECTRONIC STANDBY INSTRUMENT SYSTEM - MAINTENANCE PRACTICES	<u>12-B-34-26-40-00A-901A-A</u>	2017-07-19	MSN 1001 - 1270 PRE SB 34-042
ELECTRONIC STANDBY INSTRUMENT SYSTEM (MSN 1271 – 9999 OR POST SB 34-042) - MAINTENANCE PRACTICES	<u>12-B-34-26-40-00A-901B-A</u>	2017-07-19	L3 ESIS SYSTEM
ELECTRONIC STANDBY INSTRUMENT SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-26-40-00A-903A-A</u>	2017-07-19	MSN 1001 - 1270 PRE SB 34-042
ELECTRONIC STANDBY INSTRUMENT SYSTEM (MSN 1271 – 9999 OR POST SB 34-042) - ADJUSTMENT/TEST	<u>12-B-34-26-40-00A-903B-A</u>	C 2018-11-29	MSN 1271-9999
ELECTRONIC STANDBY INSTRUMENT - REMOVAL/INSTALLATION	<u>12-B-34-26-40-00A-920A-A</u>	2017-07-19	MSN 1001 - 1270 PRE SB 34-042
ELECTRONIC STANDBY INSTRUMENT (MSN 1271 – 9999 OR POST SB 34-042) - REMOVAL/INSTALLATION	<u>12-B-34-26-40-00A-920B-A</u>	2017-07-19	MSN 1271-9999
ELECTRONIC STANDBY INSTRUMENT SYSTEM (MSN 1271 – 9999 OR POST SB 34-042) – MAGNETOMETER - REMOVAL/INSTALLATION	<u>12-B-34-26-45-00A-920B-A</u>	C 2018-11-29	MSN 1271-9999 or POST SB 34-042
LANDING AND TAXI AIDS - DESCRIPTION AND OPERATION	<u>12-B-34-30-00-00A-040A-A</u>	2017-07-19	ALL
MARKER SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-34-32-00-00A-040A-A</u>	2017-07-19	ALL
MARKER SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-32-00-00A-903A-A</u>	2017-07-19	ALL
MARKER ANTENNA - REMOVAL/INSTALLATION	<u>12-B-34-32-01-00A-920A-A</u>	2017-07-19	ALL
INDEPENDENT POSITION DETERMINING - DESCRIPTION AND OPERATION	<u>12-B-34-40-00-00A-040A-A</u>	2017-07-19	ALL
WEATHER RADAR - DESCRIPTION AND OPERATION	<u>12-B-34-41-00-00A-040A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
WEATHER RADAR - ADJUSTMENT/TEST	<u>12-B-34-41-00-00A-903A-A</u>	C 2018-11-29	ALL
WEATHER RADAR TRANSCEIVER - REMOVAL/INSTALLATION	<u>12-B-34-41-02-00A-920A-A</u>	2017-07-19	ALL
WEATHER RADAR – CONFIGURATION MODULE - ADJUSTMENT/TEST	<u>12-B-34-41-04-00A-903A-A</u>	2017-07-19	WEATHER RADAR
WEATHER RADAR – CONFIGURATION MODULE - REMOVAL/INSTALLATION	<u>12-B-34-41-04-00A-920A-A</u>	2017-07-19	WEATHER RADAR
XM SATELLITE WEATHER SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-34-41-10-00A-040A-A</u>	2017-07-19	XM SATELLITE WEATHER SYSTEM
XM SATELLITE WEATHER SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-41-10-00A-903A-A</u>	2017-07-19	XM SATELLITE WEATHER SYSTEM
XM SATELLITE WEATHER PROCESSOR - REMOVAL/INSTALLATION	<u>12-B-34-41-11-00A-920A-A</u>	2017-07-19	XM SATELLITE WEATHER SYSTEM
XM SATELLITE WEATHER ANTENNA - REMOVAL/INSTALLATION	<u>12-B-34-41-12-00A-920A-A</u>	2018-05-24	XM SATELLITE WEATHER SYSTEM
STORMSCOPE SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-34-41-30-00A-040A-A</u>	2017-07-19	WX 500 STORMSCOPE
STORMSCOPE SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-41-30-00A-903A-A</u>	2017-07-19	WX500 STORMSCOPE
STORMSCOPE PROCESSOR - REMOVAL/INSTALLATION	<u>12-B-34-41-31-00A-920A-A</u>	2017-07-19	WX500 STORMSCOPE
STORMSCOPE ANTENNA - REMOVAL/INSTALLATION	<u>12-B-34-41-32-00A-920A-A</u>	2017-07-19	WX500 STORMSCOPE
RADAR ALTIMETER SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-34-42-00-00A-040A-A</u>	2017-07-19	ALL
RADAR ALTIMETER SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-42-00-00A-903A-A</u>	2017-07-19	ALL
RADAR ALTIMETER TRANSCEIVER - REMOVAL/INSTALLATION	<u>12-B-34-42-01-00A-920A-A</u>	2017-07-19	ALL
RADAR ALTIMETER ANTENNAS - REMOVAL/INSTALLATION	<u>12-B-34-42-02-00A-920A-A</u>	2017-07-19	ALL
TRAFFIC ALERT AND COLLISION AVOIDANCE SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-34-44-00-00A-040A-A</u>	2017-07-19	TCAS
TRAFFIC ALERT AND COLLISION AVOIDANCE SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-44-00-00A-903A-A</u>	2017-07-19	TCAS
TCAS PROCESSOR - REMOVAL/INSTALLATION	<u>12-B-34-44-01-00A-920A-A</u>	2017-07-19	TCAS

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
TAS/TCAS – UPPER ANTENNA - REMOVAL/INSTALLATION	<u>12-B-34-44-02-00A-920A-A</u>	2017-07-19	ALL
TAS/TCAS – LOWER ANTENNA - REMOVAL/INSTALLATION	<u>12-B-34-44-03-00A-920A-A</u>	2017-07-19	ALL
ENHANCED GROUND PROXIMITY WARNING SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-34-45-00-00A-040A-A</u>	2017-07-19	EGPWS
ENHANCED GROUND PROXIMITY WARNING SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-45-00-00A-903A-A</u>	2017-07-19	EGPWS
EGPWS COMPUTER - REMOVAL/INSTALLATION	<u>12-B-34-45-01-00A-920A-A</u>	2017-07-19	EGPWS
MULTI HAZARD AWARENESS SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-34-45-10-00A-040A-A</u>	2017-07-19	MULTI HAZARD AWARENESS SYSTEM
MULTI HAZARD AWARENESS SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-45-10-00A-903A-A</u>	2017-07-19	MULTI HAZARD AWARENESS SYSTEM
MULTI HAZARD AWARENESS SYSTEM COMPUTER - REMOVAL/INSTALLATION	<u>12-B-34-45-10-01A-920A-A</u>	2017-07-19	MULTI HAZARD AWARENESS SYSTEM
MULTI HAZARD AWARENESS SYSTEM CONFIGURATION MODULE - REMOVAL/INSTALLATION	<u>12-B-34-45-10-02A-920A-A</u>	2017-07-19	MULTI HAZARD AWARENESS SYSTEM
DEPENDENT POSITION DETERMINING - DESCRIPTION AND OPERATION	<u>12-B-34-50-00-00A-040A-A</u>	2017-07-19	ALL
VHF NAVIGATION SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-34-51-00-00A-040A-A</u>	C 2018-11-29	ALL
VHF NAVIGATION SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-51-00-00A-903A-A</u>	2017-07-19	ALL
VHF NAVIGATION ANTENNAS 1 AND 2 - REMOVAL/INSTALLATION	<u>12-B-34-51-03-00A-920A-A</u>	2017-07-19	ALL
DME SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-34-52-00-00A-040A-A</u>	2017-07-19	KN63 DME
DME SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-52-00-00A-903A-A</u>	2017-07-19	KN63 DME
DME TRANSCEIVER - REMOVAL/INSTALLATION	<u>12-B-34-52-01-00A-920A-A</u>	2017-07-19	KN63 DME
DME ANTENNA - REMOVAL/INSTALLATION	<u>12-B-34-52-02-00A-920A-A</u>	2017-07-19	KN63 DME
ADF SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-34-53-00-00A-040A-A</u>	2017-07-19	ALL
ADF SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-53-00-00A-903A-A</u>	2017-07-19	ALL
ADF ANTENNA - REMOVAL/INSTALLATION	<u>12-B-34-53-02-00A-920A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

Document title	Data module code	Issue date	Effectivity
DUAL DIVERSITY ATC TRANSPONDER SYSTEM WITHOUT ADS-B OUT - DESCRIPTION AND OPERATION	<u>12-B-34-54-00-00A-040A-A</u>	2017-07-19	DUAL DIVERSITY ATC TRANSPONDER SYSTEM WITHOUT ADS-B OUT
DUAL NON-DIVERSITY ATC TRANSPONDER SYSTEM WITHOUT ADS-B OUT - DESCRIPTION AND OPERATION	<u>12-B-34-54-00-00A-040B-A</u>	2017-07-19	DUAL NON DIVERSITY ATC TRANSPONDER SYSTEM WITHOUT ADS-B OUT
DUAL DIVERSITY ATC TRANSPONDER SYSTEM WITH ADS-B OUT - DESCRIPTION AND OPERATION	<u>12-B-34-54-00-00A-040C-A</u>	2017-07-19	DUAL DIVERSITY ATC TRANSPONDER SYSTEM WITH ADS-B OUT
DUAL NON DIVERSITY ATC TRANSPONDER SYSTEM WITH ADS-B OUT - DESCRIPTION AND OPERATION	<u>12-B-34-54-00-00A-040D-A</u>	2017-07-19	DUAL NON DIVERSITY ATC TRANSPONDER SYSTEM WITH ADS-B OUT
DUAL DIVERSITY ATC TRANSPONDER SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-54-00-00A-903A-A</u>	2017-07-19	DUAL DIVERSITY ATC TRANSPONDERS
DUAL NON-DIVERSITY ATC TRANSPONDER SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-54-00-00A-903B-A</u>	2017-07-19	DUAL NON-DIVERSITY ATC TRANSPONDERS
ATC TRANSPONDER - REMOVAL/INSTALLATION	<u>12-B-34-54-01-00A-920A-A</u>	C 2018-11-29	ALL
ATC 1 (BOTTOM) ANTENNA - REMOVAL/INSTALLATION	<u>12-B-34-54-02-00A-920A-A</u>	2017-07-19	ALL
ATC DIVERSITY (TOP) ANTENNA - REMOVAL/INSTALLATION	<u>12-B-34-54-03-00A-920A-A</u>	2017-07-19	DIVERSITY ATC SYSTEM
ATC 2 SECOND (BOTTOM) ANTENNA - REMOVAL/INSTALLATION	<u>12-B-34-54-04-00A-920A-A</u>	2017-07-19	DUAL ATC TRANSPONDER SYSTEM

Effectivity: ALL

12-B-00-00-00-00A-002A-A

UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
SINGLE DIVERSITY AIR TRAFFIC CONTROL TRANSPONDER SYSTEM WITHOUT ADS-B OUT - DESCRIPTION AND OPERATION	<u>12-B-34-54-10-00A-040A-A</u>	2017-07-19	SINGLE DIVERSITY ATC TRANSPONDER WITHOUT ADS-B OUT
SINGLE NON-DIVERSITY AIR TRAFFIC CONTROL TRANSPONDER SYSTEM WITHOUT ADS-B OUT - DESCRIPTION AND OPERATION	<u>12-B-34-54-10-00A-040B-A</u>	2017-07-19	SINGLE NON-DIVERSITY ATC TRANSPONDER WITHOUT ADS-B OUT
SINGLE DIVERSITY ATC TRANSPONDER SYSTEM WITH ADS-B OUT - DESCRIPTION AND OPERATION	<u>12-B-34-54-10-00A-040C-A</u>	2017-07-19	SINGLE DIVERSITY ATC TRANSPONDER WITH ADS-B OUT
SINGLE NON-DIVERSITY ATC TRANSPONDER SYSTEM WITH ADS-B OUT - DESCRIPTION AND OPERATION	<u>12-B-34-54-10-00A-040D-A</u>	2017-07-19	SINGLE NON-DIVERSITY ATC TRANSPONDER SYSTEM WITH ADS-B OUT
SINGLE DIVERSITY AIR TRAFFIC CONTROL TRANSPONDER SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-54-10-00A-903A-A</u>	2017-07-19	SINGLE DIVERSITY ATC TRANSPONDER
SINGLE NON-DIVERSITY AIR TRAFFIC CONTROL TRANSPONDER SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-54-10-00A-903B-A</u>	2017-07-19	SINGLE NON-DIVERSITY ATC TRANSPONDER
GLOBAL POSITIONING SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-34-57-00-00A-040A-A</u>	2017-07-19	KGS 200 GPS
GLOBAL POSITIONING SYSTEM - ADJUSTMENT/TEST	<u>12-B-34-57-00-00A-903A-A</u>	2017-07-19	ALL
GLOBAL NAVIGATION SYSTEM SENSOR UNIT - REMOVAL/INSTALLATION	<u>12-B-34-57-01-00A-920A-A</u>	2017-07-19	ALL
WAAS CAPABLE GPS RECEIVER - REMOVAL/INSTALLATION	<u>12-B-34-57-01-00A-920B-A</u>	2017-07-19	WAAS GPS RECEIVER (CMC)
GLOBAL POSITIONING SYSTEM 2 RECEIVER (POST SB 34-020) - REMOVAL/INSTALLATION	<u>12-B-34-57-01-00A-920C-A</u>	2017-07-19	OPTIONAL SECOND GPS
GLOBAL POSITIONING SYSTEM ANTENNA - REMOVAL/INSTALLATION	<u>12-B-34-57-02-00A-920A-A</u>	2017-07-19	ALL
OXYGEN SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-35-00-00-00A-040A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

UNCLASSIFIED

2018-11-29 Page 40



UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
OXYGEN SYSTEM - MAINTENANCE PRACTICES	<u>12-B-35-00-00-00A-901A-A</u>	2017-07-19	ALL
OXYGEN SYSTEM - SERVICING	<u>12-B-35-00-00-00A-902A-A</u>	2017-07-19	ALL
OXYGEN (PLUG-IN MASK) SYSTEM - ADJUSTMENT/TEST	<u>12-B-35-00-00-00A-903A-A</u>	2017-07-19	PLUG-IN MASK SYSTEM
OXYGEN (DROP-DOWN MASK) SYSTEM - ADJUSTMENT/TEST	<u>12-B-35-00-00-00A-903B-A</u>	2017-07-19	ALL
CREW OXYGEN SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-35-10-00-00A-040A-A</u>	C 2018-11-29	ALL
STANDARD OXYGEN CYLINDER - REMOVAL/INSTALLATION	<u>12-B-35-10-01-00A-920A-A</u>	2017-07-19	STANDARD OXYGEN CYLINDER
LARGE CAPACITY OXYGEN CYLINDER - REMOVAL/INSTALLATION	<u>12-B-35-10-01-00A-920B-A</u>	2017-07-19	LARGE OXYGEN CYLINDER
CREW OXYGEN CONNECTORS - REMOVAL/INSTALLATION	<u>12-B-35-10-02-00A-920A-A</u>	2017-07-19	ALL
OXYGEN PRESSURE GAGE (STANDARD SYSTEM) - REMOVAL/INSTALLATION	<u>12-B-35-10-03-00A-920A-A</u>	2018-05-24	ALL
OXYGEN PRESSURE GAGE (LARGE CAPACITY SYSTEM) - REMOVAL/INSTALLATION	<u>12-B-35-10-03-00A-920B-A</u>	2018-05-24	ALL
PASSENGER OXYGEN (PLUG-IN MASK) SYSTEM (MSN 1001-1719) - DESCRIPTION AND OPERATION	<u>12-B-35-20-00-00A-040A-A</u>	2017-07-19	PLUG-IN MASK SYSTEM (MSN 1001-1719)
PASSENGER OXYGEN (DROP-DOWN MASK) SYSTEM (MSN 1001-1719) - DESCRIPTION AND OPERATION	<u>12-B-35-20-00-00A-040B-A</u>	2017-07-19	DROP-DOWN MASK SYSTEM (MSN 1001-1719)
PASSENGER OXYGEN (PLUG-IN MASK) SYSTEM (MSN 545, 1720 AND UP) - DESCRIPTION AND OPERATION	<u>12-B-35-20-00-00A-040C-A</u>	2017-07-19	MSN 545, 1720 AND UP
PASSENGER OXYGEN (DROP-DOWN MASKS) SYSTEM (MSN 545, 1720 AND UP) - DESCRIPTION AND OPERATION	<u>12-B-35-20-00-00A-040D-A</u>	2017-07-19	DROP-DOWN MASK SYSTEM (MSN 545, 1720 AND UP)
PASSENGER OXYGEN PLUG-IN MASKS - INSPECTION/CHECK	<u>12-B-35-20-00-00A-313A-A</u>	2017-07-19	ALL
PASSENGER OXYGEN PLUG-IN MASK CONNECTORS - REMOVAL/INSTALLATION	<u>12-B-35-20-01-00A-920A-A</u>	2017-07-19	ALL
PASSENGER OXYGEN PLUG-IN MASKS (EXECUTIVE INTERIOR) - REMOVAL/INSTALLATION	<u>12-B-35-20-03-00A-920A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

UNCLASSIFIED

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
THREE POSITION CONTROL VALVE - REMOVAL/INSTALLATION	<u>12-B-35-20-04-00A-920A-A</u>	2017-07-19	ALL
OXYGEN PRESSURE GAGE - REMOVAL/INSTALLATION	<u>12-B-35-20-05-00A-920A-A</u>	2018-05-24	ALL
PASSENGER OXYGEN SYSTEM – SHUT-OFF VALVE - REMOVAL/INSTALLATION	<u>12-B-35-20-06-00A-920A-A</u>	2017-07-19	LARGE CAPACITY OXYGEN SYSTEM
CENTRAL MAINTENANCE SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-45-00-00-00A-040A-A</u>	2017-07-19	ALL
CENTRAL MAINTENANCE SYSTEM INTERFACE – REMOTE TERMINAL - DESCRIPTION AND OPERATION	<u>12-B-45-45-00-00A-040A-A</u>	2017-07-19	ALL
CENTRAL MAINTENANCE SYSTEM INTERFACE - PREPARE TEST EQUIPMENT	<u>12-B-45-45-00-00A-330A-A</u>	C 2018-11-29	ALL
CENTRAL MAINTENANCE SYSTEM INTERFACE - CONNECT THE COMPUTER	<u>12-B-45-45-00-00A-331A-A</u>	C 2018-11-29	ALL
CENTRAL MAINTENANCE SYSTEM INTERFACE - LOAD SOFTWARE	<u>12-B-45-45-00-00A-550A-A</u>	C 2018-11-29	ALL
CENTRAL MAINTENANCE SYSTEM INTERFACE - FAULT MONITORING STORAGE READOUT (DOWNLOAD DATA)	<u>12-B-45-45-00-00A-551A-A</u>	C 2018-11-29	ALL
CENTRAL MAINTENANCE SYSTEM INTERFACE - ERASE DATA	<u>12-B-45-45-00-00A-552A-A</u>	2017-07-19	ALL
CENTRAL MAINTENANCE SYSTEM INTERFACE - CHANGE THE SETTINGS FILE	<u>12-B-45-45-00-00A-553A-A</u>	C 2018-11-29	ALL
SYSTEMS INTEGRATION AND DISPLAY - DESCRIPTION AND OPERATION	<u>12-B-46-00-00-00A-040A-A</u>	2017-07-19	ALL
WIRELESS DATA LOADING SYSTEM (CONNECTED FLIGHT DECK) - DESCRIPTION AND OPERATION	<u>12-B-46-21-00-00A-040A-A</u>	2017-07-19	POST SB 46-004 OR CONNECTED FLIGHT DECK OPTION
WIRELESS DATA LOADING SYSTEM (CONNECTED FLIGHT DECK) - PREPARE TEST EQUIPMENT	<u>12-B-46-21-00-00A-330A-A</u>	2017-07-19	POST SB 46-004 OR CONNECTED FLIGHT DECK OPTION
WIRELESS DATA LOADING SYSTEM (CONNECTED FLIGHT DECK) - LOAD SOFTWARE	<u>12-B-46-21-00-00A-750A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
WIRELESS DATA LOADING SYSTEM (CONNECTED FLIGHT DECK) - RESET PASSWORD	<u>12-B-46-21-00-00A-754A-A</u>	2017-07-19	All
WIRELESS DATA LOADING SYSTEM (CONNECTED FLIGHT DECK) - ADJUSTMENT/TEST	<u>12-B-46-21-00-00A-903A-A</u>	2017-07-19	POST SB 46-004 OR CONNECTED FLIGHT DECK OPTION
ASPEN CONNECTED GATEWAY CG100P - REMOVAL/INSTALLATION	<u>12-B-46-21-12-00A-920A-A</u>	2017-07-19	POST SB 46-004 OR CONNECTED FLIGHT DECK OPTION
DISPLAY AND CONTROL - DESCRIPTION AND OPERATION	<u>12-B-46-30-00-00A-040A-A</u>	2017-07-19	ALL
DISPLAY AND CONTROL - MAINTENANCE PRACTICES	<u>12-B-46-30-00-00A-901A-A</u>	2017-07-19	ALL
DISPLAY AND CONTROL - ADJUSTMENT/TEST	<u>12-B-46-30-00-00A-903A-A</u>	2017-07-19	ALL
PRIMARY FLIGHT DISPLAY - DESCRIPTION AND OPERATION	<u>12-B-46-30-01-00A-040A-A</u>	2017-07-19	ALL
PRIMARY FLIGHT DISPLAY - REMOVAL/INSTALLATION	<u>12-B-46-30-01-00A-920A-A</u>	2017-07-19	ALL
PRIMARY FLIGHT DISPLAY CONTROLLER - DESCRIPTION AND OPERATION	<u>12-B-46-30-02-00A-040A-A</u>	2017-07-19	ALL
PRIMARY FLIGHT DISPLAY CONTROLLER - ADJUSTMENT/TEST	<u>12-B-46-30-02-00A-903A-A</u>	2017-07-19	ALL
PRIMARY FLIGHT DISPLAY CONTROLLER - REMOVAL/INSTALLATION	<u>12-B-46-30-02-00A-920A-A</u>	2017-07-19	ALL
MULTI FUNCTION DISPLAY - DESCRIPTION AND OPERATION	<u>12-B-46-30-03-00A-040A-A</u>	2017-07-19	ALL
MULTI FUNCTION DISPLAY - REMOVAL/INSTALLATION	<u>12-B-46-30-03-00A-920A-A</u>	2017-07-19	ALL
MULTI FUNCTION CONTROLLER - DESCRIPTION AND OPERATION	<u>12-B-46-30-04-00A-040A-A</u>	2017-07-19	ALL
MULTI FUNCTION CONTROLLER - LOAD DATA	<u>12-B-46-30-04-00A-550A-A</u>	2017-07-19	POST SB 45-001 AND 46-001
MULTI FUNCTION CONTROLLER - FAULT MONITORING STORAGE READOUT (DOWNLOAD DATA)	<u>12-B-46-30-04-00A-551A-A</u>	C 2018-11-29	POST SB 45-001 AND 46-001
MULTI FUNCTION CONTROLLER - ADJUSTMENT/TEST	<u>12-B-46-30-04-00A-903A-A</u>	2017-07-19	ALL
MULTI FUNCTION CONTROLLER - REMOVAL/INSTALLATION	<u>12-B-46-30-04-00A-920A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
REVERSION CONTROL PANEL (4 SWITCH) - DESCRIPTION AND OPERATION	<u>12-B-46-30-05-00A-040A-A</u>	2017-07-19	FOUR SWITCH REVERSION PANEL
REVERSION CONTROL PANEL (4 SWITCH) - ADJUSTMENT/TEST	<u>12-B-46-30-05-00A-903A-A</u>	2017-07-19	ALL
REVERSION CONTROL PANEL (4 SWITCH) - REMOVAL/INSTALLATION	<u>12-B-46-30-05-00A-920A-A</u>	2017-07-19	4 SWITCH REVERSION CONTROLLER
REVERSION CONTROL PANEL (3 SWITCH) - DESCRIPTION AND OPERATION	<u>12-B-46-30-06-00A-040A-A</u>	2017-07-19	THREE SWITCH REVERSION CONTROL PANEL
REVERSION CONTROL PANEL (3 SWITCH) - ADJUSTMENT/TEST	<u>12-B-46-30-06-00A-903A-A</u>	2017-07-19	3 SWITCH REVERSION CONTROL PANEL
REVERSION CONTROL PANEL (3 SWITCH) - REMOVAL/INSTALLATION	<u>12-B-46-30-06-00A-920A-A</u>	2017-07-19	3 SWITCH REVERSION CONTROL PANEL
CURSOR CONTROL DEVICE - DESCRIPTION AND OPERATION	<u>12-B-46-30-07-00A-040A-A</u>	2017-07-19	CURSOR CONTROL DEVICE
CURSOR CONTROL DEVICE - ADJUSTMENT/TEST	<u>12-B-46-30-07-00A-903A-A</u>	2017-07-19	CURSOR CONTROL DEVICE
CURSOR CONTROL DEVICE - REMOVAL/INSTALLATION	<u>12-B-46-30-07-00A-920A-A</u>	2017-07-19	CURSOR CONTROL DEVICE
CURSOR CONTROL DEVICE TRACKBALL - REMOVAL/INSTALLATION	<u>12-B-46-30-07-01A-920A-A</u>	2018-02-13	CURSOR CONTROL DEVICE
CURSOR CONTROL DEVICE SCROLLWHEEL - REMOVAL/INSTALLATION	<u>12-B-46-30-07-02A-920A-A</u>	2018-02-13	CURSOR CONTROL DEVICE
CURSOR CONTROL DEVICE PUSHBUTTON - REMOVAL/INSTALLATION	<u>12-B-46-30-07-03A-920A-A</u>	2018-02-13	CURSOR CONTROL DEVICE
CURSOR CONTROL DEVICE WIRING HARNESS - REMOVAL/INSTALLATION	<u>12-B-46-30-07-04A-920A-A</u>	2017-07-19	CURSOR CONTROL DEVICE
CURSOR CONTROL DEVICE CONTROL UNIT - REMOVAL/INSTALLATION	<u>12-B-46-30-08-00A-920A-A</u>	2017-07-19	CURSOR CONTROL DEVICE
DOORS – GENERAL - DESCRIPTION AND OPERATION	<u>12-B-52-00-00-00A-040A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
PASSENGER/CREW DOOR HINGE - EDDY CURRENT INSPECTION	<u>12-B-52-00-01-00A-353A-A</u>	2017-07-19	ALL
PASSENGER/CREW DOOR - DESCRIPTION AND OPERATION	<u>12-B-52-10-00-00A-040A-A</u>	2017-07-19	ALL
PASSENGER/CREW DOOR - EXAMINE	<u>12-B-52-10-00-00A-310A-A</u>	2017-07-19	ALL
PASSENGER/CREW DOOR - INSPECTION/CHECK	<u>12-B-52-10-00-00A-313A-A</u>	C 2018-11-29	ALL
MSN 1001 - 1575 PASSENGER/CREW DOOR - ADJUSTMENT/TEST	<u>12-B-52-10-00-00A-903A-A</u>	C 2018-11-29	MSN 1001 - 1575
MSN 1576 AND UP PASSENGER/CREW DOOR - ADJUSTMENT/TEST	<u>12-B-52-10-00-00A-903B-A</u>	C 2018-11-29	MSN 1576 - 9999
PASSENGER/CREW DOOR SKINS - EDDY CURRENT INSPECTION	<u>12-B-52-10-01-00A-353A-A</u>	2017-07-19	ALL
PASSENGER/CREW DOOR (WITHOUT STAIR LIGHTS) - REMOVAL/INSTALLATION	<u>12-B-52-10-01-00A-920A-A</u>	C 2018-11-29	WITHOUT STAIR LIGHTS
MSN 1001 - 1575 PASSENGER/CREW DOOR LOCK - REMOVAL/INSTALLATION	<u>12-B-52-10-02-00A-920A-A</u>	2017-07-19	MSN 1001 - 1575
MSN 1576 - 9999 PASSENGER/CREW DOOR LOCK - REMOVAL INSTALLATION	<u>12-B-52-10-02-00A-920B-A</u>	2017-07-19	MSN 1576 - 9999
PASSENGER/CREW DOOR SEAL - REMOVAL/INSTALLATION	<u>12-B-52-10-03-00A-920A-A</u>	2017-07-19	ALL
PASSENGER/CREW DOOR CABLE RETAINER - REMOVAL/INSTALLATION	<u>12-B-52-10-04-00A-920A-A</u>	2017-07-19	ALL
PASSENGER/CREW DOOR STEP - REMOVAL/INSTALLATION	<u>12-B-52-10-05-00A-920A-A</u>	2017-07-19	ALL
PASSENGER/CREW DOOR SHOOT BOLTS (POST SB 52-007) - EDDY CURRENT INSPECTION	<u>12-B-52-10-06-00A-353A-A</u>	2018-05-24	Post SB 52-007
EMERGENCY EXIT DOOR - DESCRIPTION AND OPERATION	<u>12-B-52-20-00-00A-040A-A</u>	2017-07-19	ALL
EMERGENCY EXIT - EXAMINE	<u>12-B-52-20-00-00A-310A-A</u>	2017-07-19	ALL
EMERGENCY EXIT - REMOVAL/INSTALLATION	<u>12-B-52-20-00-00A-920A-A</u>	2017-07-19	ALL
EMERGENCY EXIT DOOR SEAL - REMOVAL/INSTALLATION	<u>12-B-52-20-01-00A-920A-A</u>	2017-07-19	ALL
CARGO DOOR - DESCRIPTION AND OPERATION	<u>12-B-52-30-00-00A-040A-A</u>	2017-07-19	ALL
CARGO DOOR - EXAMINE	<u>12-B-52-30-00-00A-310A-A</u>	2017-07-19	ALL
CARGO DOOR - INSPECTION/CHECK	<u>12-B-52-30-00-00A-313A-A</u>	C 2018-11-29	ALL
CARGO DOOR - ADJUSTMENT/TEST	<u>12-B-52-30-00-00A-903A-A</u>	2017-07-19	ALL
CARGO DOOR HINGE - EDDY CURRENT INSPECTION	<u>12-B-52-30-00-01A-353A-A</u>	2017-07-19	ALL
CARGO DOOR SKINS - EDDY CURRENT INSPECTION	<u>12-B-52-30-01-00A-353A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
CARGO DOOR - REMOVAL/INSTALLATION	<u>12-B-52-30-01-00A-920A-A</u>	2017-07-19	ALL
DOOR LOCK - REMOVAL/INSTALLATION	<u>12-B-52-30-02-00A-920A-A</u>	2017-07-19	ALL
CARGO DOOR SEAL - REMOVAL/INSTALLATION	<u>12-B-52-30-03-00A-920A-A</u>	2017-07-19	ALL
CARGO DOOR DRIVE MECHANISM - ADJUSTMENT/TEST	<u>12-B-52-30-04-00A-903A-A</u>	2017-07-19	ALL
CARGO DOOR DRIVE MECHANISM - REMOVAL/INSTALLATION	<u>12-B-52-30-04-00A-920A-A</u>	2017-07-19	ALL
CARGO DOOR DRIVE MECHANISM CABLE - REMOVAL/INSTALLATION	<u>12-B-52-30-05-00A-920A-A</u>	2017-07-19	ALL
CARGO DOOR GAS STRUT - REMOVAL/INSTALLATION	<u>12-B-52-30-06-00A-920A-A</u>	2017-07-19	ALL
CARGO DOOR LUG FITTINGS - REMOVAL/INSTALLATION	<u>12-B-52-30-07-00A-920A-A</u>	2017-07-19	ALL
SERVICE DOOR - DESCRIPTION AND OPERATION	<u>12-B-52-40-00-00A-040A-A</u>	2017-07-19	ALL
SERVICE DOOR LOCK - REMOVAL/INSTALLATION	<u>12-B-52-40-01-00A-920A-A</u>	2017-07-19	ALL
DOOR WARNING - DESCRIPTION AND OPERATION	<u>12-B-52-70-00-00A-040A-A</u>	2017-07-19	ALL
DOOR WARNING - ADJUSTMENT/TEST	<u>12-B-52-70-00-00A-903A-A</u>	2017-07-19	ALL
PASSENGER/CREW-DOOR BOLTS SWITCH - REMOVAL/INSTALLATION	<u>12-B-52-70-01-00A-920A-A</u>	2017-07-19	ALL
PASSENGER/CREW-DOOR HANDLE SWITCH - REMOVAL/INSTALLATION	<u>12-B-52-70-02-00A-920A-A</u>	2017-07-19	ALL
CARGO-DOOR BOLTS SWITCH - REMOVAL/INSTALLATION	<u>12-B-52-70-03-00A-920A-A</u>	2017-07-19	ALL
CARGO-DOOR HANDLE SWITCH - REMOVAL/INSTALLATION	<u>12-B-52-70-04-00A-920A-A</u>	2017-07-19	ALL
FUSELAGE - DESCRIPTION AND OPERATION	<u>12-B-53-00-00-00A-040A-A</u>	2017-07-19	ALL
FUSELAGE - ANTENNA STRUCTURE - EXAMINE	<u>12-B-53-00-00-00A-310A-A</u>	2017-07-19	ALL
FUSELAGE - ANTENNA STRUCTURE - EDDY CURRENT INSPECTION	<u>12-B-53-00-00-00A-353A-A</u>	2017-07-19	ALL
FORWARD FUSELAGE - EXAMINE	<u>12-B-53-10-00-00A-310A-A</u>	2017-07-19	ALL
FORWARD FUSELAGE - FRAME 10 LONGERONS - EDDY CURRENT INSPECTION	<u>12-B-53-10-06-01A-353A-A</u>	2017-07-19	ALL
FORWARD FUSELAGE - WINDOW STRUCTURE - EXAMINE	<u>12-B-53-10-16-00A-310A-A</u>	2017-07-19	ALL
CENTER FUSELAGE - EXAMINE	<u>12-B-53-20-00-00A-310A-A</u>	2017-07-19	ALL
LOWER FUSELAGE SKIN ANTI-CHAFE TAPE - REMOVAL/INSTALLATION	<u>12-B-53-20-00-00A-920A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
CENTER FUSELAGE FAIRINGS - REMOVAL/INSTALLATION	<u>12-B-53-20-01-00A-920A-A</u>	2017-07-19	ALL
CENTER FUSELAGE FRAMES – CARRY THROUGH FRAMES - PARTS LIST – KIT P/N 500.50.12.327	<u>12-B-53-20-02-00A-307A-A</u>	2017-07-19	ALL
CENTER FUSELAGE FRAMES – CARRY THROUGH FRAMES - EXAMINE	<u>12-B-53-20-02-00A-310A-A</u>	2017-07-19	ALL
CENTER FUSELAGE – CARRY THROUGH FRAMES - INSPECTION/CHECK	<u>12-B-53-20-02-00A-313A-A</u>	2017-07-19	ALL
CENTER FUSELAGE FRAMES – CARRY THROUGH FRAMES - EDDY CURRENT INSPECTION	<u>12-B-53-20-02-00A-353A-A</u>	2017-07-19	ALL
CENTER FUSELAGE FRAMES - ANTI-CHAFE GASKET - REMOVAL/INSTALLATION	<u>12-B-53-20-02-00A-920A-A</u>	2017-07-19	ALL
REAR FUSELAGE - EXAMINE	<u>12-B-53-30-00-00A-310A-A</u>	2017-07-19	ALL
REAR FUSELAGE SKINS AND STRINGERS (RVSM) - INSPECTION/CHECK	<u>12-B-53-30-01-00A-313A-A</u>	2018-02-13	Reduced Vertical Separation Minima (RVSM)
REAR FUSELAGE FRAMES - EDDY CURRENT INSPECTION	<u>12-B-53-30-02-00A-353A-A</u>	2017-07-19	ALL
STABILIZERS - DESCRIPTION AND OPERATION	<u>12-B-55-00-00-00A-040A-A</u>	2017-07-19	ALL
VERTICAL STABILIZER ATTACHMENT FITTINGS - EDDY CURRENT INSPECTION	<u>12-B-55-00-00-00A-353A-A</u>	2017-07-19	ALL
STABILIZERS ATTACHMENT FITTINGS - INSPECTION/CHECK	<u>12-B-55-00-00-00A-313A-A</u>	N 2018-11-29	All
HORIZONTAL STABILIZER - REMOVAL/INSTALLATION	<u>12-B-55-10-01-00A-920A-A</u>	2018-02-13	ALL
ELEVATORS - EXAMINE	<u>12-B-55-20-00-00A-310A-A</u>	2017-07-19	ALL
ELEVATOR DRIVE LEVER AND HINGE - EDDY CURRENT INSPECTION	<u>12-B-55-20-01-00A-353A-A</u>	2017-07-19	ALL
ELEVATOR LEVER FITTING - REPAIR	<u>12-B-55-20-01-00A-904A-A</u>	2017-07-19	ALL
ELEVATOR - REMOVAL/INSTALLATION	<u>12-B-55-20-01-00A-920A-A</u>	2017-07-19	ALL
VERTICAL STABILIZER - PARTS LIST – KIT P/N 500.50.12.325	<u>12-B-55-30-00-00A-307A-A</u>	2017-07-19	ALL
VERTICAL STABILIZER - EXAMINE	<u>12-B-55-30-00-00A-310A-A</u>	C 2018-11-29	ALL
VERTICAL STABILIZER - REMOVAL/INSTALLATION	<u>12-B-55-30-01-00A-920A-A</u>	2018-02-13	ALL
VERTICAL STABILIZER – PITCH TRIM ACTUATOR ATTACHMENT - EDDY CURRENT INSPECTION	<u>12-B-55-30-02-00A-353A-A</u>	2017-07-19	ALL
VERTICAL STABILIZER SPARS - EDDY CURRENT INSPECTION	<u>12-B-55-30-03-00A-353A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
VERTICAL STABILIZER - DORSAL FIN - REMOVAL/INSTALLATION	<u>12-B-55-30-04-00A-920A-A</u>	2017-07-19	ALL
VERTICAL STABILIZER - FAIRING - REMOVAL/INSTALLATION	<u>12-B-55-30-05-00A-920A-A</u>	2017-07-19	ALL
RUDDER - EXAMINE	<u>12-B-55-40-00-00A-310A-A</u>	2017-07-19	ALL
RUDDER - INSPECTION/CHECK	<u>12-B-55-40-00-00A-313A-A</u>	N 2018-11-29	All
RUDDER - REMOVAL/INSTALLATION	<u>12-B-55-40-01-00A-920A-A</u>	2017-07-19	ALL
RUDDER TRIM TAB - EXAMINE	<u>12-B-55-40-04-00A-310A-A</u>	2017-07-19	ALL
RUDDER TRIM TAB - REMOVAL/INSTALLATION	<u>12-B-55-40-04-00A-920A-A</u>	2017-07-19	ALL
RUDDER HINGE - EDDY CURRENT INSPECTION	<u>12-B-55-40-05-00A-353A-A</u>	2017-07-19	ALL
WINDOWS - DESCRIPTION AND OPERATION	<u>12-B-56-00-00-00A-040A-A</u>	2017-07-19	ALL
WINDOWS - INSPECTION/CHECK	<u>12-B-56-00-00-00A-313A-A</u>	2018-05-24	ALL
WINDOWS - REPAIR	<u>12-B-56-00-00-00A-904A-A</u>	2017-07-19	ALL
WINDSHIELD - PARTS LIST – KIT P/N 500.50.12.326	<u>12-B-56-11-00-00A-307A-A</u>	2017-07-19	All
WINDSHIELD - EXAMINE	<u>12-B-56-11-01-00A-310A-A</u>	2017-07-19	ALL
WINDSHIELD - REMOVAL/INSTALLATION	<u>12-B-56-11-01-00A-920A-A</u>	2017-07-19	ALL
COCKPIT SIDE WINDOWS - EXAMINE	<u>12-B-56-11-02-00A-310A-A</u>	2017-07-19	ALL
COCKPIT SIDE WINDOWS - INSPECTION/CHECK	<u>12-B-56-11-02-00A-313A-A</u>	2017-07-19	ALL
INNER SIDE WINDOWS - REMOVAL/INSTALLATION	<u>12-B-56-11-02-00A-920A-A</u>	2017-07-19	ALL
DIRECT VISION WINDOW - REMOVAL/INSTALLATION	<u>12-B-56-14-01-00A-920A-A</u>	2017-07-19	ALL
DIRECT VISION WINDOW - ADJUSTMENT/TEST	<u>12-B-56-14-01-00A-903A-A</u>	2017-07-19	ALL
CABIN WINDOWS - REMOVAL/INSTALLATION	<u>12-B-56-20-01-00A-920A-A</u>	2017-07-19	ALL
WINGS - DESCRIPTION AND OPERATION	<u>12-B-57-00-00-00A-040A-A</u>	2017-07-19	ALL
WINGS - PARTS LIST – KIT P/N 500.60.12.007	<u>12-B-57-00-00-00A-307A-A</u>	2017-07-19	ALL
WINGS - EXAMINE	<u>12-B-57-00-00-00A-310A-A</u>	2017-07-19	ALL
WING AND FUSELAGE FITTINGS - INSPECTION/CHECK	<u>12-B-57-00-00-00A-313A-A</u>	C 2018-11-29	ALL
LEFT WING – HYDRAULIC LANDING GEAR - REMOVAL	<u>12-B-57-00-00-00A-520A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
LEFT WING – ELECTRO MECHANICAL LANDING GEAR - REMOVAL	<u>12-B-57-00-00-00A-520B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR

Effectivity: ALL

12-B-00-00-00-00A-002A-A



Document title	Data module code	Issue date	Effectivity
LEFT WING - HYDRAULIC LANDING GEAR - INSTALLATION	<u>12-B-57-00-00-00A-720A-A</u>	C 2018-11-29	HYDRAULIC LANDING GEAR
LEFT WING – ELECTRO MECHANICAL LANDING GEAR - INSTALLATION	<u>12-B-57-00-00-00A-720B-A</u>	C 2018-11-29	ELECTRO MECHANICAL LANDING GEAR
WINGS - MAINTENANCE PRACTICES	<u>12-B-57-00-00-00A-901A-A</u>	2017-07-19	ALL
RIGHT WING – HYDRAULIC LANDING GEAR - REMOVAL	<u>12-B-57-00-00-00B-520A-A</u>	2017-07-19	HYDRAULIC LANDING GEAR
RIGHT WING – ELECTRO MECHANICAL LANDING GEAR - REMOVAL	<u>12-B-57-00-00-00B-520B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
RIGHT WING – HYDRAULIC LANDING GEAR - INSTALLATION	<u>12-B-57-00-00-00B-720A-A</u>	C 2018-11-29	HYDRAULIC LANDING GEAR
RIGHT WING – ELECTRO MECHANICAL LANDING GEAR - INSTALLATION	<u>12-B-57-00-00-00B-720B-A</u>	C 2018-11-29	ELECTRO MECHANICAL LANDING GEAR
WING AND FUSELAGE ATTACHMENT FITTINGS - EDDY CURRENT INSPECTION	<u>12-B-57-00-03-00A-353A-A</u>	C 2018-11-29	ALL
WING AND FUSELAGE ATTACHMENT FITTINGS – HOLLOW BOLTS - EDDY CURRENT INSPECTION	<u>12-B-57-00-03-01A-353A-A</u>	2017-07-19	ALL
WING SKINS - EDDY CURRENT INSPECTION	<u>12-B-57-20-01-00A-353A-A</u>	2017-07-19	ALL
TRAILING EDGE - SEAL PLATE - REMOVAL/INSTALLATION	<u>12-B-57-20-01-00A-920A-A</u>	2017-07-19	MSN 1576 AND UP
WING STRUCTURE – RIBS - PARTS LIST – FIRST OVERSIZE – P/N 500.60.12.031	<u>12-B-57-20-05-00A-307A-A</u>	2017-07-19	KIT P/N 500.60.12.031
WING STRUCTURE – RIBS - PARTS LIST – SECOND OVERSIZE – P/N 500.60.12.043	<u>12-B-57-20-05-00A-307B-A</u>	2017-07-19	All
WING STRUCTURE – RIBS - EDDY CURRENT INSPECTION – RIB 6 STRAP	<u>12-B-57-20-05-00A-353A-A</u>	2017-07-19	ALL
WING STRUCTURE – SPARS AND AUXILIARY STRUCTURE - PARTS LIST – FIRST OVERSIZE – P/N 500.60.12.030	<u>12-B-57-20-10-00A-307A-A</u>	2017-07-19	ALL
WING STRUCTURE – SPARS AND AUXILIARY STRUCTURE - PARTS LIST – SECOND OVERSIZE – P/N 500.60.12.020	<u>12-B-57-20-10-00A-307B-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
WING STRUCTURE – SPARS AND AUXILIARY STRUCTURE – MAIN SPAR - EDDY CURRENT INSPECTION	<u>12-B-57-20-10-00A-353A-A</u>	2017-07-19	ALL
WING STRUCTURE – SPARS AND AUXILIARY STRUCTURE – REAR SPAR - EDDY CURRENT INSPECTION	<u>12-B-57-20-10-00A-353B-A</u>	2017-07-19	ALL
WING STRUCTURE – SPARS AND AUXILIARY STRUCTURE – REAR SPAR - EDDY CURRENT INSPECTION	<u>12-B-57-20-10-00A-353C-A</u>	2017-07-19	ALL
WING STRUCTURE – SPARS AND AUXILIARY STRUCTURE – MAIN SPAR – RIB 6 STRAP FASTENER - EDDY CURRENT INSPECTION	<u>12-B-57-20-10-00A-353D-A</u>	2017-07-19	ALL
WING TIP - EXAMINE	<u>12-B-57-33-00-00A-310A-A</u>	2017-07-19	ALL
WING TIP - REMOVAL/INSTALLATION	<u>12-B-57-33-00-00A-920A-A</u>	2017-07-19	ALL
WING TIP – LED EXTERNAL LIGHTS - REMOVAL/INSTALLATION	<u>12-B-57-33-00-00A-920B-A</u>	2017-07-19	LED EXTERNAL LIGHTS
FLAPS - REMOVAL/INSTALLATION	<u>12-B-57-50-01-00A-920A-A</u>	2017-07-19	ALL
FLAP SUPPORT ARM BUSHES AND BELLCRANK BEARINGS - REPAIR	<u>12-B-57-50-02-00A-904A-A</u>	2017-07-19	ALL
FLAP SUPPORT ARM - REMOVAL/INSTALLATION	<u>12-B-57-50-02-01A-920A-A</u>	C 2018-11-29	ALL
AILERONS - EXAMINE	<u>12-B-57-60-00-00A-310A-A</u>	2017-07-19	ALL
AILERON - REMOVAL/INSTALLATION	<u>12-B-57-60-02-00A-920A-A</u>	2017-07-19	ALL
AILERON TRIM LH - PARTS LIST – KIT P/N 500.60.12.039	<u>12-B-57-60-04-00A-307A-A</u>	2017-07-19	ALL
AILERON TRIM RH - PARTS LIST – KIT P/N 500.60.12.040	<u>12-B-57-60-04-00A-307B-A</u>	2017-07-19	ALL
AILERON TRIM TAB - EXAMINE	<u>12-B-57-60-04-00A-310A-A</u>	2017-07-19	ALL
AILERON TRIM TAB - REMOVAL/INSTALLATION	<u>12-B-57-60-04-00A-920A-A</u>	2017-07-19	ALL
AILERON DRIVE ARM - REMOVAL/INSTALLATION	<u>12-B-57-60-05-00A-920A-A</u>	2017-07-19	ALL
AILERON HINGE - EDDY CURRENT INSPECTION	<u>12-B-57-60-06-00A-353A-A</u>	2017-07-19	ALL
FOUR-BLADED PROPELLER - DESCRIPTION AND OPERATION	<u>12-B-61-00-00-00A-040A-A</u>	2017-07-19	FOUR-BLADED PROPELLER
FIVE-BLADED PROPELLER - DESCRIPTION AND OPERATION	<u>12-B-61-00-00-00A-040B-A</u>	2017-07-19	FIVE-BLADED PROPELLER
FIVE-BLADED PROPELLER - BLADE - DAMAGE ASSESSMENT	<u>12-B-61-00-00-00A-683A-A</u>	N 2018-11-29	FIVE-BLADED PROPELLER

Effectivity: ALL

12-B-00-00-00-00A-002A-A

Document title	Data module code	Issue date	Effectivity
FOUR-BLADED PROPELLER - ADJUSTMENT/TEST	<u>12-B-61-00-00-00A-903A-A</u>	2017-07-19	FOUR-BLADED PROPELLER
FIVE-BLADED PROPELLER - ADJUSTMENT/TEST	<u>12-B-61-00-00-00A-903B-A</u>	2017-07-19	FIVE-BLADED PROPELLER
FOUR-BLADED PROPELLER - BLADES - REPAIR	<u>12-B-61-00-00-00A-904A-A</u>	2017-07-19	FOUR-BLADED PROPELLER
FIVE-BLADED PROPELLER - BLADES - REPAIR	<u>12-B-61-00-00-00A-904B-A</u>	2017-07-19	FIVE-BLADED PROPELLER
FOUR-BLADED PROPELLER - REMOVAL/INSTALLATION	<u>12-B-61-10-01-00A-920A-A</u>	2018-05-24	FOUR-BLADED PROPELLER
FIVE-BLADED PROPELLER - REMOVAL/INSTALLATION	<u>12-B-61-10-01-00A-920B-A</u>	2018-05-24	FIVE-BLADED PROPELLER
GOVERNOR - REMOVAL/INSTALLATION	<u>12-B-61-20-01-00A-920A-A</u>	2017-07-19	ALL
LOW PITCH WARNING SWITCH - REMOVAL/INSTALLATION	<u>12-B-61-20-02-00A-920A-A</u>	2017-07-19	ALL
OVERSPEED GOVERNOR - REMOVAL/INSTALLATION	<u>12-B-61-20-03-00A-920A-A</u>	2017-07-19	ALL
POWERPLANT - DESCRIPTION AND OPERATION	<u>12-B-71-00-00-00A-040A-A</u>	2017-07-19	ALL
POWERPLANT - CLEAN	<u>12-B-71-00-00-00A-250A-A</u>	C 2018-11-29	ALL
POWERPLANT - MAINTENANCE PRACTICES	<u>12-B-71-00-00-00A-901A-A</u>	2018-02-13	ALL
POWER PLANT - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903A-A</u>	2018-05-24	ALL
POWER PLANT TEST 1 – ENGINE OIL PRESSURE - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903B-A</u>	2017-07-19	ALL
POWER PLANT TEST 2 – PROPELLER BLADE FEATHER - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903C-A</u>	2017-07-19	ALL
POWER PLANT TEST 3 – DC GENERATION SYSTEM - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903D-A</u>	C 2018-11-29	ALL
POWER PLANT TEST 4 – MAXIMUM PROPELLER SPEED - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903E-A</u>	2017-07-19	ALL
POWER PLANT TEST 5– BLEED VALVE CLOSING POINT - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903F-A</u>	2017-07-19	ALL
POWER PLANT TEST 6 – TORQUE LIMITER - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903G-A</u>	2017-07-19	ALL
POWER PLANT TEST 7 – ENGINE PERFORMANCE - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903H-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
POWER PLANT TEST 8 – TORQUE-METER FUNCTION - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903I-A</u>	2017-07-19	ALL
POWER PLANT TEST 9 – ACCELERATION - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903J-A</u>	2017-07-19	ALL
POWER PLANT TEST 10 – OVER-SPEED GOVERNOR - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903K-A</u>	2017-07-19	ALL
POWER PLANT TEST 11 – Nf GOVERNOR - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903L-A</u>	2017-07-19	ALL
POWER PLANT TEST 12 – FCU DEAD BAND - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903M-A</u>	2017-07-19	ALL
POWER PLANT TEST 13 – PROPELLER LOW PITCH WARNING - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903N-A</u>	2017-07-19	ALL
POWER PLANT TEST 14 – GROUND IDLE SPEED - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903O-A</u>	2017-07-19	ALL
POWER PLANT TEST 15 – FLIGHT IDLE SPEED - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903P-A</u>	2017-07-19	ALL
POWER PLANT TEST 16 – MANUAL OVERRIDE - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903Q-A</u>	2017-07-19	ALL
POWER PLANT TEST 17 – REVERSE POWER - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903R-A</u>	2018-05-24	ALL
POWER PLANT TEST 18 – ENVIRONMENTAL CONTROL SYSTEM - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903S-A</u>	2018-05-24	ALL
POWER PLANT TEST 19 – ENGINE STOP TIME - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903T-A</u>	2017-07-19	ALL
POWERPLANT TEST 20 – AFTER ENGINE STOP - ADJUSTMENT/TEST	<u>12-B-71-00-00-00A-903U-A</u>	2017-07-19	ALL
POWER PLANT - REMOVAL/INSTALLATION	<u>12-B-71-00-00-00A-920A-A</u>	2018-02-13	ALL
POWERPLANT - STRIP/BUILD	<u>12-B-71-00-00-00A-920A-B</u>	2017-07-19	ALL
ELECTRICAL CONNECTORS - CLEAN	<u>12-B-71-00-03-00A-250A-A</u>	2017-07-19	ALL
POWER PLANT - ENGINE MOUNTING-FRAME BOLTS - REMOVAL/INSTALLATION	<u>12-B-71-00-04-00A-920A-A</u>	2018-02-13	ALL
POWERPLANT MOUNTING FRAME - MAGNETIC PARTICLE INSPECTION	<u>12-B-71-00-05-00A-352A-A</u>	2017-07-19	ALL
POWERPLANT MOUNTING FRAME - REMOVAL/INSTALLATION	<u>12-B-71-00-05-00A-920A-A</u>	2018-05-24	ALL
ENGINE COWLINGS - ADJUSTMENT/TEST	<u>12-B-71-10-00-00A-903A-A</u>	2017-07-19	ALL
ENGINE COWLINGS - REMOVAL/INSTALLATION	<u>12-B-71-10-00-00A-920A-A</u>	2017-07-19	ALL
LOWER AFT COWLING ASSEMBLY - REMOVAL/INSTALLATION	<u>12-B-71-10-10-00A-920A-A</u>	2018-05-24	ALL
ENGINE - DESCRIPTION AND OPERATION	<u>12-B-72-00-00-00A-040A-A</u>	2017-07-19	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
POWER SECTION - DESCRIPTION AND OPERATION	<u>12-B-72-10-00-01A-040A-A</u>	2017-07-19	ALL
POWER SECTION - REMOVAL/INSTALLATION	<u>12-B-72-10-00-01A-920A-A</u>	2017-07-19	ALL
ENGINE FUEL AND CONTROL - DESCRIPTION AND OPERATION	<u>12-B-73-00-00-00A-040A-A</u>	2017-07-19	ALL
FUEL CONTROL UNIT - REMOVAL/INSTALLATION	<u>12-B-73-20-01-00A-920A-A</u>	2018-02-13	ALL
TORQUE LIMITER - REMOVAL/INSTALLATION	<u>12-B-73-20-02-00A-920A-A</u>	2017-07-19	ALL
FUEL FLOW TRANSMITTER - REMOVAL/INSTALLATION	<u>12-B-73-30-01-00A-920A-A</u>	2017-07-19	ALL
IGNITION SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-74-00-00-00A-040A-A</u>	2017-07-19	ALL
IGNITION SYSTEM - ADJUSTMENT/TEST	<u>12-B-74-00-00-00A-903A-A</u>	2017-07-19	ALL
IGNITION UNIT - REMOVAL/INSTALLATION	<u>12-B-74-10-01-00A-920A-A</u>	2017-07-19	ALL
SPARK IGNITORS - REMOVAL/INSTALLATION	<u>12-B-74-20-00-00A-920A-A</u>	C 2018-11-29	ALL
ENGINE CONTROLS - DESCRIPTION AND OPERATION	<u>12-B-76-00-00-00A-040A-A</u>	2017-07-19	ALL
POWER CONTROLS - ADJUSTMENT/TEST	<u>12-B-76-10-00-00A-903A-A</u>	2018-05-24	ALL
POWER CONTROLS MICROSWITCHES - ADJUSTMENT/TEST	<u>12-B-76-10-01-00A-903A-A</u>	2017-07-19	ALL
PROPELLER FEATHER MICROSWITCHES - ADJUSTMENT/TEST	<u>12-B-76-10-02-00A-903A-A</u>	2017-07-19	ALL
POWER CONTROL CABLES - REMOVAL/INSTALLATION	<u>12-B-76-10-04-00A-920A-A</u>	2017-07-19	ALL
MANUAL OVERRIDE - ADJUSTMENT/TEST	<u>12-B-76-20-00-00A-903A-A</u>	2017-07-19	ALL
MANUAL OVERRIDE CABLE - REMOVAL/INSTALLATION	<u>12-B-76-20-00-04A-920A-A</u>	2017-07-19	ALL
ENGINE INDICATING – GENERAL - DESCRIPTION AND OPERATION	<u>12-B-77-00-00-00A-040A-A</u>	2017-07-19	ALL
INTEGRATED ENGINE INSTRUMENT SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-77-40-00-00A-040A-A</u>	2017-07-19	ALL
TORQUE TRANSDUCER - ADJUSTMENT/TEST	<u>12-B-77-40-03-00A-903A-A</u>	2017-07-19	ALL
TORQUE TRANSDUCER - REMOVAL/INSTALLATION	<u>12-B-77-40-03-00A-920A-A</u>	2017-07-19	ALL
EXHAUST - DESCRIPTION AND OPERATION	<u>12-B-78-00-00-00A-040A-A</u>	2017-07-19	ALL
EXHAUST STUB - REPAIR	<u>12-B-78-10-01-00A-904A-A</u>	2017-07-19	ALL
LEFT EXHAUST ASSEMBLY DE-ICE BLEED AIR TUBE - REPAIR	<u>12-B-78-10-01-00A-904B-A</u>	2018-05-24	ALL

Effectivity: ALL

12-B-00-00-00-00A-002A-A

## UNCLASSIFIED

Document title	Data module code	Issue date	Effectivity
RIGHT EXHAUST ASSEMBLY DE-ICE BLEED AIR TUBE - REPAIR	<u>12-B-78-10-01-00A-904C-A</u>	2017-07-19	ALL
EXHAUST ASSEMBLY FLANGE - REPAIR	<u>12-B-78-10-01-00A-904D-A</u>	2017-07-19	ALL
EXHAUST STUB - REMOVAL/INSTALLATION	<u>12-B-78-10-01-00A-920A-A</u>	2017-07-19	ALL
OIL SYSTEM - DESCRIPTION AND OPERATION	<u>12-B-79-00-00-00A-040A-A</u>	2017-07-19	ALL
OIL SYSTEM – ELECTRO MECHANICAL LANDING GEAR - DESCRIPTION AND OPERATION	<u>12-B-79-00-00-00A-040B-A</u>	2017-07-19	ELECTRO MECHANICAL LANDING GEAR
OIL SYSTEM - SERVICING	<u>12-B-79-00-00-00A-902A-A</u>	2017-07-19	ALL
OIL FILTER ELEMENT - REMOVAL/INSTALLATION	<u>12-B-79-20-01-00A-920A-A</u>	2017-07-19	ALL
OIL COOLER - REMOVAL/INSTALLATION	<u>12-B-79-20-02-00A-920A-A</u>	2017-07-19	ALL
CHIP DETECTOR - ADJUSTMENT/TEST	<u>12-B-79-30-01-00A-903A-A</u>	2017-07-19	ALL
CHIP DETECTOR - REMOVAL/INSTALLATION	<u>12-B-79-30-01-00A-920A-A</u>	2017-07-19	ALL
OIL PRESSURE TRANSDUCER - ADJUSTMENT/TEST	<u>12-B-79-30-02-00A-903A-A</u>	2017-07-19	ALL
OIL PRESSURE TRANSDUCER - REMOVAL/INSTALLATION	<u>12-B-79-30-02-00A-920A-A</u>	2017-07-19	ALL
TEMPERATURE SENSOR - REMOVAL/INSTALLATION	<u>12-B-79-30-03-00A-920A-A</u>	2017-07-19	ALL
PRESSURE SWITCH - REMOVAL/INSTALLATION	<u>12-B-79-30-04-00A-920A-A</u>	2017-07-19	ALL
OIL DEBRIS MONITORING SYSTEM (PRE SB 79-007) - ADJUSTMENT/TEST	<u>12-B-79-30-05-00A-903A-A</u>	2017-07-19	PRE SB 79-006
OIL DEBRIS MONITORING SYSTEM (PRE SB 79-007) - REMOVAL/INSTALLATION	<u>12-B-79-30-05-00A-920A-A</u>	2017-07-19	PRE SB 79-006
OIL FILLER CAP / DIPSTICK - ADJUSTMENT/TEST	<u>12-B-79-30-06-00A-903A-A</u>	2018-05-24	ALL
STARTING - DESCRIPTION AND OPERATION	<u>12-B-80-00-00-00A-040A-A</u>	2017-07-19	ALL
AUTOMATIC STARTING (NG CONTROLLED) - DESCRIPTION AND OPERATION	<u>12-B-80-10-20-00A-040A-A</u>	2017-07-19	ALL

## PC-12/47E GENERAL - AIRCRAFT MAINTENANCE MANUAL

### *CHANGE HIGHLIGHTS - REVISION 20*

#### Table of Contents

Page

PC-12/47E GENERAL - AIRCRAFT MAINTENANCE MANUAL - CHANGE HIGHLIGHTS - REVISION 20.....	1
--	---

#### Index of Tables

Page

1	References.....	1
---	-----------------	---

### **References**

*Table 1 References*

Data module/Technical publication	Title
None	

### **Description**

DM Reference	Action	Change
<u>12-B-00-00-00-00A-002A-A</u>	Replaced	19039 - Revision Administration
<u>12-B-00-00-00-00A-003A-A</u>	Replaced	19039 - Revision Administration
<u>12-B-00-00-00-00A-004A-A</u>	Replaced	19039 - Revision Administration
<u>12-B-00-00-00-00A-006A-A</u>	Replaced	19039 - Revision Administration
<u>12-B-00-00-00-00A-005A-A</u>	Replaced	19039 - Revision Administration
<u>12-B-00-00-00-00A-018A-A</u>	Replaced	19039 - Revision Administration
<u>12-B-00-00-00-00A-106A-A</u>	Inserted	Incorporation of new data module
<u>12-B-05-10-20-00A-281A-A</u>	Replaced	18692 - Task 27-50/76 changed to 2400 FH or 3200 LDG or 24 Months.18661 - Added Task 25-60/483.18869 - Added new Task 34-26/484, updated description and reference for Task 34-21/84.18924 - Task 71-00/432 description updated. 19222 - Task 32-20/338 added, task 21-30/466 removed. Not relevant to this data module.
<u>12-B-05-10-30-00A-280A-A</u>	Replaced	19039 - Title, typo correction
<u>12-B-05-20-00-00A-913A-A</u>	Replaced	18802 - Tasks 06-00/218 and 219 access panel 11AL added

DM Reference	Action	Change
<u>12-B-05-40-00-00A-000B-A</u>	Replaced	18600 - Typo. Should be Task 32-10/162. 18629 - Task 27-20/140 changed to Inspection/check. 18661 - Task 25-60/231 changed to Operational test and 300 FH or 12 Months, task 25-63/434 updated name. 18669 - Task 32-10/436 changed to 12 Months. 18692 - Task 27-50/76 changed to 2400 FH or 3200 LDG or 24 Months, task 27-50/437 change to 600 FH or 12 Months. 18694 - Task 55-10/319 change DMC from 12-B-55-00-00-00A-361A-A to 12-B-55-00-00-00A-313A-A. 18792 - Task 24-30/482 deleted, Task 29-10/258 part number added, Task 29-10/471 part number corrected. 18802 - Task 06-00/218 and 219 access panel 11AL added. 18809 - Task 25-10/296 and 297, 25-20/298 and 299 description updated. 18780 - Task 27-20/376 repeat interval corrected. 18869 - Added new Task 34-26/484, updated description and reference for Task 34-21/84. 18896 - Task 27-50/475 added. 18924 - Task 71-00/432 description updated. 19222 - Task 06-00/218 and 06-00/219 access panels updated, task 21-20/317, 27-10/444, 27-10/445, 27-20/446, 27-20/447, 27-30/448, 27-30/449, 27-40/252, 27-50/475, 29-10/151, 29-10/418, 32-10/438, 32-20/166, 56-11/13, 71-00/432 description updated, task 25-60/483, 71-00/476 added, Asterisk removed from tasks 27-50/28, 32-50/404, 52-10/405, 52-10/406, 52-30/407, 52-30/408, 53-00/419, 55-30/420, 55-40/410, 57-00/412, 57-60/411
<u>12-B-05-40-01-02A-000B-A</u>	Replaced	18629 - Task 27-20/140 changed to Inspection/check. 18802 - Task 30-10/154 link corrected. 18794 - Task 29-10/316 added. 19222 - Task 10-10/428 description updated, task 25-60/231 added, task 71-10-207 removed. Not relevant to this data module.
<u>12-B-05-40-01-03A-000B-A</u>	Replaced	18792 - Task 24-30/482 removed. Not relevant to this data module.
<u>12-B-05-40-01-04A-000B-A</u>	Replaced	19222 - 32-10/167 changed to 32-20/167
<u>12-B-05-40-01-05A-000B-A</u>	Replaced	18694 - Task 55-10/319 change DMC from 12-B-55-00-00-00A-361A-A to 12-B-55-00-00-00A-313A-A. 18849 - Task 27-40/292 reference DM corrected. 19222 - Task 25-60/231 removed. Not relevant to this data module, task 27-10/234, 29-10/257, 29-10/258, 32-30/170 description updated, task 35-10/458 added
<u>12-B-05-40-01-06A-000B-A</u>	Replaced	Task - 19222 - 21-30/466 added
<u>12-B-05-50-01-00A-282A-A</u>	Replaced	18869 - Added references to test navigation equipment
<u>12-B-05-50-01-00A-282B-A</u>	Replaced	18869 - Added references to test navigation equipment
<u>12-B-05-50-03-00A-282A-A</u>	Replaced	18680 - Table reference corrected
<u>12-B-05-50-05-00A-282A-A</u>	Replaced	18869 - Added references to test navigation equipment
<u>12-B-09-10-00-00A-901A-A</u>	Replaced	17960 - Updated procedure for five-bladed towing and editorial changes
<u>12-B-20-20-01-00A-040A-A</u>	Replaced	18149 - Consumable material P04-039 added
<u>12-B-20-20-10-00A-040A-A</u>	Replaced	19100 - Table attributes updated
<u>12-B-20-31-00-00A-070A-A</u>	Replaced	19199 - CML replaced with revised CML
<u>12-B-20-50-04-00A-901A-A</u>	Replaced	18159 - Mechanical roughening of bushes/bearings added



<b>DM Reference</b>	<b>Action</b>	<b>Change</b>
<u>12-B-21-41-00-00A-904A-A</u>	Replaced	18655 - Updated duct part numbers and added reference to replace duct. Editorial changes
<u>12-B-21-50-01-00A-040A-A</u>	Replaced	18552 - Circuit breaker re-labelled as VCCS
<u>12-B-21-50-01-00A-902A-A</u>	Replaced	18552 - Circuit breaker re-labelled as VCCS
<u>12-B-21-50-01-00A-903A-A</u>	Replaced	18552 - Circuit breaker re-labelled as VCCS.18887 - Measured temperature corrected and access panels/carpet removal updated.
<u>12-B-21-50-01-00A-920A-A</u>	Replaced	18552 - Circuit breaker re-labelled as VCCS
<u>12-B-21-50-03-00A-313A-A</u>	Replaced	18552 - Circuit breaker re-labelled as VCCS
<u>12-B-24-30-07-00A-920A-A</u>	Replaced	19001 - Addition of DMC and correction of item number
<u>12-B-24-30-07-00A-920B-A</u>	Replaced	19001 - Addition of DMC
<u>12-B-24-52-51-00A-920A-A</u>	Replaced	19028 - Illustration updated and Note added
<u>12-B-25-21-00-00A-040A-A</u>	Replaced	17775 - Updated to include oxygen drop-down masks
<u>12-B-25-22-00-00A-040A-A</u>	Replaced	17775 - Updated to include oxygen drop-down masks
<u>12-B-25-63-00-00A-903A-A</u>	Replaced	18661 - Added operational test for Kannad ELT and editorial changes
<u>12-B-25-63-00-00A-903B-A</u>	Replaced	18661 - Added operational test for Kannad Integra ELT and editorial changes
<u>12-B-25-90-00-00A-920C-A</u>	Inserted	Incorporation of new data module
<u>12-B-27-00-01-00A-352A-A</u>	Replaced	18968 - Added note for fixed fork-ends and editorial changes
<u>12-B-27-50-00-00A-040A-A</u>	Replaced	18741 - DMC reference for flaps deleted
<u>12-B-30-60-00-00A-903A-A</u>	Replaced	18881 - Added steps to remove/install OAT sensor, corrected tool number and editorial changes. 19100 - Table attributes updated
<u>12-B-30-60-00-00A-903C-A</u>	Replaced	18881 - Deleted unnecessary panel removal, added correct tool number and editorial changes. 19100 - Table attributes updated
<u>12-B-30-60-00-00A-903B-A</u>	Replaced	18881 - Added access panel 12QZ and correct tool number
<u>12-B-30-60-00-00A-903D-A</u>	Replaced	18881 - Added closing of engine cowl, added correct tool number and editorial changes
<u>12-B-31-30-01-00A-090A-A</u>	Inserted	Incorporation of new data module
<u>12-B-31-30-01-00A-551A-A</u>	Replaced	18645 - Added new software disc and T-number, added Note for AGE and tools
<u>12-B-31-42-00-00A-920A-A</u>	Replaced	18919 - Update DMC reference
<u>12-B-31-50-00-00A-040A-A</u>	Replaced	19100 - Table attributes updated
<u>12-B-32-10-00-00A-313A-A</u>	Replaced	18015 - Hinge pin installation order corrected. 18973 - Removal of unused supply items
<u>12-B-32-10-00-00A-313B-A</u>	Replaced	18973 - Removal of unused supply items
<u>12-B-32-40-02-00A-920A-A</u>	Replaced	18175 - Updated nosewheel illustrations and added tool numbers
<u>12-B-34-21-00-00A-903A-A</u>	Inserted	Incorporation of new data module
<u>12-B-34-21-00-00A-920A-A</u>	Replaced	18869 - Changed reference to standby compass swing, revised tool number and added AGE note
<u>12-B-34-25-00-00A-903A-A</u>	Replaced	18919 - Update DMC reference18869 - Added ADAHRS check swing, corrected tool numbers, added AGE note and editorial changes
<u>12-B-34-25-02-00A-920A-A</u>	Replaced	18869 - Changed reference to ADAHRS compass swing, revised tool number and added AGE note

## UNCLASSIFIED

<b>DM Reference</b>	<b>Action</b>	<b>Change</b>
<u>12-B-34-25-02-00A-920B-A</u>	Replaced	18869 - Changed reference to ADAHRS compass swing, revised tool number and added AGE note
<u>12-B-34-26-40-00A-903B-A</u>	Replaced	18869 - Revised procedure
<u>12-B-34-26-45-00A-920B-A</u>	Replaced	18869 - Changed references to check swings, revised tool number and added AGE note
<u>12-B-34-41-00-00A-903A-A</u>	Replaced	17819 - procedural update
<u>12-B-34-51-00-00A-040A-A</u>	Replaced	17992 - updated to include new MMDR
<u>12-B-34-54-01-00A-920A-A</u>	Replaced	18223 - CB designation corrected
<u>12-B-35-10-00-00A-040A-A</u>	Replaced	18761 - Additional reference added
<u>12-B-45-45-00-00A-330A-A</u>	Replaced	18919 - Update DMC reference
<u>12-B-45-45-00-00A-331A-A</u>	Replaced	18919 - DMC reference updated. Tool numbers added
<u>12-B-45-45-00-00A-550A-A</u>	Replaced	18919 - Update DMC reference, 19207 - Pilot's Guide 02313 updated to Rev. 11
<u>12-B-45-45-00-00A-551A-A</u>	Replaced	18645 - Added new software disc and T-number, added Note for AGE and tools
<u>12-B-45-45-00-00A-553A-A</u>	Replaced	18919 - Update DMC reference
<u>12-B-46-30-04-00A-551A-A</u>	Replaced	18645 - Added new software disc and T-number, added Note for AGE and tools
<u>12-B-52-10-00-00A-313A-A</u>	Replaced	19100 - Table attributes updated
<u>12-B-52-10-00-00A-903A-A</u>	Replaced	19100 - Table attributes updated
<u>12-B-52-10-00-00A-903B-A</u>	Replaced	18791 - Pressurization control (MSN 545, 1720 and up) cross reference added
<u>12-B-52-10-01-00A-920A-A</u>	Replaced	18024 - Data deleted to create new data module for PAX/crew door with stair lights
<u>12-B-52-30-00-00A-313A-A</u>	Replaced	19100 - Table attributes updated
<u>12-B-55-00-00-00A-361A-A</u>	Deleted	Data module no longer required
<u>12-B-55-00-00-00A-313A-A</u>	Inserted	Incorporation of new data module
<u>12-B-55-30-00-00A-310A-A</u>	Replaced	18533 - Added data for corrosion and note for AGE, changed part number for T-number
<u>12-B-55-40-00-00A-313A-A</u>	Inserted	Incorporation of new data module
<u>12-B-57-00-00-00A-313A-A</u>	Replaced	18159 - Inspection procedure updated. 19100 - Table attributes updated
<u>12-B-57-00-00-00A-720A-A</u>	Replaced	18757 - Changed Preparation to General and revised step and editorial changes
<u>12-B-57-00-00-00A-720B-A</u>	Replaced	18757 - Changed Preparation to General and revised step and editorial changes
<u>12-B-57-00-00-00B-720A-A</u>	Replaced	18757 - Changed Preparation to General and revised step and editorial changes
<u>12-B-57-00-00-00B-720B-A</u>	Replaced	18757 - Changed Preparation to General and revised step and editorial changes
<u>12-B-57-00-03-00A-353A-A</u>	Replaced	18159 - References and procedure updated
<u>12-B-57-50-02-01A-920A-A</u>	Replaced	17788 - Revised procedure
<u>12-B-61-00-00-00A-683A-A</u>	Inserted	Incorporation of new data module
<u>12-B-71-00-00-00A-250A-A</u>	Replaced	18930 - Revised illustration to show correct orientation, added tool numbers and editorial changes
<u>12-B-71-00-00-00A-903D-A</u>	Replaced	17846 - Functional test of the start circuit updated
<u>12-B-74-20-00-00A-920A-A</u>	Replaced	18527 - Deletion of unnecessary step

---

**AMM LIST OF REVISIONS****1 List of Revisions**

Rev No.	Date of Issue	Date Inserted	Signature

UNCLASSIFIED

---

Rev No.	Date of Issue	Date Inserted	Signature

## AMM LIST OF TEMPORARY REVISIONS

### 1 List of Temporary Revisions

Temp Rev No.	Date of Issue	Date Inserted	Signature	Date or Revision Removed	Signature
05-01	Dec 09/08	Dec 16/08	Pilatus	1	Pilatus
27-01	Dec 09/08	Dec 16/08	Pilatus	1	Pilatus
00-01	Jan 05/09	Jan 23/09	Pilatus	1	Pilatus
34-01	Dec 12/08	Jan 23/09	Pilatus	1	Pilatus
34-02	Dec 15/08	Jan 23/09	Pilatus	1	Pilatus
34-03	Dec 15/08	Jan 23/09	Pilatus	1	Pilatus
34-04	Dec 15/08	Jan 23/09	Pilatus	1	Pilatus
34-05	Dec 12/08	Jan 23/09	Pilatus	1	Pilatus
34-06	Dec 01/08	Jan 23/09	Pilatus	1	Pilatus
45-01	Jan 16/09	Jan 23/09	Pilatus	1	Pilatus
46-01	Jan 16/09	Jan 23/09	Pilatus	1	Pilatus
71-01	Mar 02/09	Mar 03/09	Pilatus	2	Pilatus
46-02	Mar 06/09	Mar 09/09	Pilatus	2	Pilatus
00-02	Mar 06/09	Mar 09/09	Pilatus	TR 00-03	Pilatus
00-03	Mar 25/09	Mar 31/09	Pilatus	2	Pilatus
34-07	Apr 22/09	May 01/09	Pilatus	2	Pilatus
21-01	May 05/09	May 14/09	Pilatus	2	Pilatus
25-01	Jun 30/09	Jul 02/09	Pilatus	3	Pilatus
00-04	Nov 10/09	Nov 10/09	Pilatus	4	Pilatus
05-02	Nov 11/09	Nov 11/09	Pilatus	4	Pilatus
34-08	Jun 23/10	Jun 23/10	Pilatus	5	Pilatus
22-01	Jul 07/10	Jul 07/10	Pilatus	5	Pilatus
56-01	Jul 05/10	Jul 05/10	Pilatus	5	Pilatus
27-02	Oct 05/10	Oct 05/10	Pilatus	5	Pilatus
28-01	Feb 10/12	Feb 10/12	Pilatus	9	Pilatus
22-02	May 11/12	May 11/12	Pilatus	9	Pilatus
31-01	Jun 18/12	Jun 18/12	Pilatus	9	Pilatus
00-05	Jul 17/12	Jul 17/12	Pilatus	9	Pilatus
57-01	Aug 07/12	Aug 07/12	Pilatus	9	Pilatus
04-01	Oct 15/12	Oct 15/12	Pilatus	9	Pilatus
30-01	Mar 08/13	Mar 08/13	Pilatus	10	Pilatus
30-02	Mar 08/13	Mar 08/13	Pilatus	10	Pilatus
04-02	Mar 13/14	Mar 13/14	Pilatus	11	Pilatus
31-02	Apr 28/14	Apr 13/14	Pilatus	11	Pilatus
34-09	Jul 10/14	Jul 10/14	Pilatus	12	Pilatus

Temp Rev No.	Date of Issue	Date Inserted	Signature	Date or Revision Re- moved	Signature
00-06	Jul 25/14	Jul 25/14	Pilatus	12	Pilatus
05-03	Jul 31/14	Jul 31/14	Pilatus	12	Pilatus
00-07	Mar 09/15	Mar 09/15	Pilatus	13	Pilatus
76-01	Jun 01/15	Jun 01/15	Pilatus	13	Pilatus
33-01	Jun 05/15	Jun 05/15	Pilatus	13	Pilatus
71-02	Dec 23/15	Dec 23/15	Pilatus	15	Pilatus
32-01	Mar 11/16	Mar 11/16	Pilatus	15	Pilatus
00-08	Apr 18/16	Apr 18/16	Pilatus	15	Pilatus
30-03	Mar 18/16	Mar 18/16	Pilatus	15	Pilatus
30-04	Mar 18/16	Mar 18/16	Pilatus	15	Pilatus
32-02	Mar 31/16	Mar 31/16	Pilatus	15	Pilatus
10-01	Jan 24/17	Jan 24/17	Pilatus	17	Pilatus
45-02	Feb 10/17	Feb 10/17	Pilatus	17	Pilatus
00-09	Aug 18/17	Aug 18/17	Pilatus	18	Pilatus
32-03	Sep 11/17	Sep 11/17	Pilatus	18	Pilatus
05-04	Sep 28/17	Sep 28/17	Pilatus	18	Pilatus
27-03	Oct 20/17	Oct 20/17	Pilatus	18	Pilatus
05-05	Sep 17/18	Sep 17/18	Pilatus	20	Pilatus
55-01	Sep 08/18	Sep 08/18	Pilatus	20	Pilatus

## GENERAL

### *LIST OF ABBREVIATIONS*

**Table of Contents** Page

GENERAL - LIST OF ABBREVIATIONS..... 1

**Index of Tables** Page

1 References..... 1  
 2 Abbreviations..... 1

### *References*

*Table 1 References*

Data module/Technical publication	Title
None	

### *Description*

Table 2 shows the abbreviations and acronyms used for the PC-12/47E Series aircraft.

*Table 2 Abbreviations*

ABBREVIATION	DESCRIPTION
A	Ampere
A/C	Aircraft
AC	Alternating Current
ACL	Anti-Collision Light
ACMS	Aircraft Condition and Monitoring System
ACP	Audio Control Panel
ACS	Air Cycle System
ADAHRS	Air Data, Attitude & Heading Reference System
ADC	Air Data Computer
ADF	Automatic Direction Finder
ADS-B	Automatic Dependent Surveillance-Broadcast
AECMA	Association Européenne des Constructeurs de Matériel Aérospatial
AFM	Airplane Flight Manual
AGE	Aerospace Ground Equipment
AGL	Above Ground Level
AGM	Advanced Graphics Module
Ah	Ampere hour
AHRS	Attitude and Reference Heading System

Table 2 Abbreviations (Continued from previous page)

ABBREVIATION	DESCRIPTION
AIOP	Actuator Input/Output Processor
AMM	Aircraft Maintenance Manual
AOA	Angle of Attack
A/P	Autopilot
APM	Aircraft Personality Module (configuration module)
AR	As required
ARINC	Aeronautical Radio Incorporated
ASCB	Avionics Standard Communications Bus
ATC	Air Traffic Control
ATCRBS	Air Traffic Control Radar Beacon System
ATT	Attitude
AWG	American Wire Gage
BARO	Barometric Pressure (altimeter setting)
BATT	Battery
BIC	Backplane Interface Controller
BIT	Built-in Test
BUS	Busbar
CAS	Crew Alerting System
CAT	Computer Aided Testing
CB	Circuit Breaker
CMC	Central Maintenance Computer
CMCF	Central Maintenance Computer Function
CMM	Component Maintenance Manual
CMS	Configuration Management System
COMM	Communication
CPCS	Cabin Pressurization Control System
CPCU	Cabin Pressure Control Unit
CRT	Cathode Ray Tube
CSIO	Custom Input/Output (module)
CSK	Countersunk
CSMU	Crash Survivable Memory Unit
CSN	Catalog Sequence Number
CSU	Constant Speed Unit
CTR	Center
DC	Direct Current
DDM	Difference in Depth Modulation or Deviation from Desired Marker
DEOS	Digital Engine Operating System
DH	Decision Height
DLS	Data Loading Software
DM	Data Module
DMC	Data Module Code



Table 2 Abbreviations (Continued from previous page)

ABBREVIATION	DESCRIPTION
DME	Distance Measuring Equipment
ECMU	Electronic Control and Monitoring Unit
ECS	Environmental Control System
ECTM	Engine Condition Trend Monitoring
EDP	Engine Driven Pump
EEPROM	Electrically Erasable Programmable Read Only Memory
EFIS	Electronic Flight Instrument System
EGPWS	Enhanced Ground Proximity Warning System
EHSI	Electronic Horizontal Situation Indicator
EIS	Engine Indicating System
ELT	Emergency Locator Transmitter
EMI	Electromagnetic Interference
EPM	External Power Management
EPMP	Electrical Power Management Panel
EPS	Emergency Power Supply
EPU	External Power Unit
EPU	Estimated Position Uncertainty
ESCM	External Satcom Configuration Module
ESD	Electrostatic Discharge
ESDS	Electrostatic Discharge Sensitive
ESIS	Electronic Standby Instrument System
ESS	Essential (busbar)
FAS	Flight Alerting System
FCMC	Fuel Control Monitoring Computer
FCP	Flight Control Panel
FCU	Fuel Control Unit
FCWU	Flap Control and Warning Unit
FD	Flight Director
FH	Flying Hours
FHDB	Fault History Database
FMS	Flight Management System
FMW	Flight Management Window
FR	Frame
GA	Go-around
GCU	Generator Control Unit
GIO	Generic Input/Output (module)
GLC	Generator Line Contactor
GMT	Greenwich Mean Time
GNSSU	Global Navigation Sensor System Unit
GPS	Global Positioning System
GPWS	Ground Proximity Warning System

Table 2 Abbreviations (Continued from previous page)

ABBREVIATION	DESCRIPTION
GS	Glideslope
HDG	Heading
HDU	High-Speed Data Unit
HF	High Frequency
Hpa	Hecto-pascal
Hr	Hour
HSI	Horizontal Situation Indicator
Hz	Hertz
ICAO	International Civil Aviation Organisation
ICN	Illustration Control Number
ICS	Intercom System
IETP	Interactive Electronic Technical Publications
ILS	Instrument Landing System
I/O	Input/Output
IPD	Illustrated Parts Data
ITT	Inter Turbine Temperature
KCAS	Knots Calculated Air Speed
KIAS	Knots Indicated Air Speed
KTS	Knots
LAN	Local Area Network
lb	Pound (weight)
lbf in	Pounds-force inches (torque load unit)
LCD	Liquid Crystal Display
LDG	Landing
LDI	Loadable Diagnostic Interface
LDR	Lightweight Data Recorder
LED	Light Emitting Diode
LH	Left
LRU	Line Replacement Unit
LTR	Liter
MAU	Modular Avionics Unit
MAX	Maximum
MB	Megabyte
MEK	Methyl Ethyl Ketone
MF	Multi Function
MFC	Multi Function Controller
MFD	Multi Function Display
MHAS	Multi Hazard Awareness System
MIN	Minimum

UNCLASSIFIED

*Table 2 Abbreviations (Continued from previous page)*

<b>ABBREVIATION</b>	<b>DESCRIPTION</b>
MKR	Marker
MLG	Main Landing Gear
MLW	Maximum Landing Weight
MMDR	Multi Mode Digital Radio
Mmo	Maximum Operating Speed (Mach)
MON	Monitoring
MOR	Manual Override
MS	Military Standard
MSN	Manufacturer's Serial Number
MTOW	Maximum Takeoff Weight
MWS	Monitor Warning System
N/A	Not Applicable
NDT	Non Destructive Testing
Nf	Free Turbine Speed
Ng	Gas Generator Speed
NIC	Network Interface Controller
NLG	Nose Landing Gear
Nm	Newton Meters
NM	Nautical Miles
No.	Number
Np	Propeller Speed
NRV	Non-return Valve
NVM	Non-volatile Memory
NWS	Nose Wheel Steering
O2/OXY	Oxygen
OAT	Outside Air Temperature
OCP	Overhead Control Panel
ODM	Oil Debris Monitoring

Table 2 Abbreviations (Continued from previous page)

ABBREVIATION	DESCRIPTION
OHP	Overhead Panel
OSCM	Operating, Servicing and Component Maintenance Manual
PBIT	Power-up Built-in Test
PCL	Power Control Lever
PDU	Power Drive Unit
PF	Primary Flight Display
P/N	Part Number
PS	Power Supply
PSI	Pounds per Square Inch
psid	Pounds per Square inch Differential
PTT	Press to Transmit
P&WC	Pratt and Whitney Canada
PWR	Power
QTY	Quantity
RAD ALT	Radio Altimeter
RAIM	Receiver Autonomous Integrity Monitoring
RAM	Random Access Memory
RCCB	Remote Control Circuit Breaker
Ref	Refer or Reference
RF	Radio Frequency
RGB	Reduction Gearbox
RH	Right
ROM	Read Only Memory
RPM	Revolutions Per Minute
RT	Remote Terminal
RTD	Resistive Temperature Device
RVSM	Reduced Vertical Separation Minima
SATCOM	Satellite Communication
SB	Service Bulletin
SCFM	Standard Cubic Feet per Minute
SD	Secure Digital
SHP	Shaft Horse Power
S/N	Serial Number
SNS	Standard Numbering System
sq	Square
SRM	Structural Repair Manual
SSEC	Static Source Error Correction
STBY	Standby
S/W	Software

*Table 2 Abbreviations (Continued from previous page)*

<b>ABBREVIATION</b>	<b>DESCRIPTION</b>
TAS	Traffic Advisory System
TAWS	Terrain Awareness & Warning System
TCAS	Traffic Alert & Collision Avoidance System
TCS	Touch Control Steering
TCV	Temperature Control Valve
UTC	Coordinated Universal Time
ULB	Underwater Locator Beacon
V	Volt
Vfe	Maximum Flaps-extended Speed (knots)
VFR	Visual Flight Rules
VHF	Very High Frequency
Vle	Maximum Landing Gear Extended Speed (knots)
Vlo	Maximum Landing Gear Operation Speed (knots)
VOR	VHF Omni-directional Range
WOW	Weight on Wheels
Wx	Weather Radar
XFER	Transfer
XPDR	Transponder

Intentionally left blank

## GENERAL

### INTRODUCTION

#### Table of Contents

Page

GENERAL - INTRODUCTION.....		1
1	General.....	1
2	Copyright and Legal Statements.....	2
3	Occurrence Reporting Requirement.....	2
4	IETP Revisions.....	3
5	Warnings, Cautions and Notes.....	3
6	Data Module Code.....	3
6.1	Model Identification.....	3
6.2	System Difference Code.....	3
6.3	Standard Numbering System.....	4
6.4	Disassembly Code.....	4
6.5	Disassembly Code Variant.....	4
6.6	Information Code.....	4
6.7	Information Code Variant.....	5
6.8	Item Location Code.....	5
7	Standard Numbering System.....	6
8	Punctuation in Units of Weight and Measurement.....	13
9	Consumable Materials.....	13
10	List of Abbreviations.....	13
11	Publication Revision Request.....	13

#### Index of Tables

Page

1	References.....	1
---	-----------------	---

### **References**

*Table 1 References*

<b>Data module/Technical publication</b>	<b>Title</b>
<u>12-B-00-00-00-00A-005A-A</u>	<u>LIST OF ABBREVIATIONS</u>
<u>12-B-20-31-00-00A-070A-A</u>	<u>STANDARD PRACTICES - CONSUMABLE MATERIALS LIST</u>
	<u>12-B-00-00-00-00A-030A-A.PDF</u>

### **Description**

#### **1 General**

This manual has been prepared using the Aerospace Specification S1000D and is assembled from Data Modules (DM), which are written in ASD-STE100 Simplified English (SE).

The maintenance manual gives instructions for maintenance personnel to service and maintain the PC-12/47E Series aircraft. The aircraft Series can be identified by referring to the Aircraft Identification Plate installed aft of the cargo door. The maintenance manual provides sufficient information to inspect, fault isolate and to complete the removal/installation and test/adjustment of equipment as well as the repair of certain systems. To provide as complete as coverage as possible, optional equipment has been included in the manual.

Information which is beyond the scope of this manual may be found in the following manuals:

- Structural Repair Manual Document No. 02305
- Illustrated Parts Catalog Document No. 02308
- Wiring Diagram Manual
- Vendor Publications.

It is the responsibility of the owner to ensure that the latest revision of the manual is used for servicing and maintenance of the aircraft.

If it is necessary to contact Pilatus Aircraft Ltd. about your aircraft, it is important to include the aircraft serial number in any correspondence. The serial number can be found on the manufacturers data placard.

Use only parts that have been approved and certified by Pilatus and obtained from Pilatus approved sources for maintenance on the aircraft. Salvaged or reworked parts obtained from non Pilatus approved sources are unsuitable and unsafe for use on the aircraft.

In the event that the aircraft should be maintained and/or operated with parts and/or components which are not approved by the seller and/or its supplier and vendor, all warranties will be rendered null and void upon installation of such parts and/or components. Pilatus expressly disclaims any and all liability including but not limited to liability for any loss or damage to property, injury or death, in association with any and all malfunctions and/or incidents and/or accidents involving such non approved parts and/or components.

## **2 Copyright and Legal Statements**

© Pilatus Aircraft Ltd. This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be copied, reproduced or translated to other languages without the prior written consent of Pilatus Aircraft Ltd.

In connection with the use of this document, Pilatus does not provide any express or implied warranties and expressly disclaims any warranty of merchantability or fitness for a particular purpose. This document contains trade secrets, confidential and/or proprietary information of Pilatus and technical data subject to export control laws and regulations, including the U.S. Export Administration Regulations (EAR). Disclosure or distribution of this document contrary to the EAR, and other laws and regulations, is strictly forbidden. The above restrictions may apply to data on all pages of this document.

## **3 Occurrence Reporting Requirement**

EASA Implementing Rule Part 21A.3 "Failures, malfunctions and defects" requires Pilatus Aircraft to maintain a system for collection, investigation and analysis of aircraft malfunction data that fulfils the EASA Reporting Criteria (AMC 20-8) for any occurrence which is reported to the agency. To fulfil this requirement, Pilatus Aircraft requests that Operators and Service Centers report aircraft malfunctions using the "MyPilatus" internet portal, which will help Pilatus Aircraft to comply with this regulation.



## 4 IETP Revisions

This Aircraft Maintenance Manual (AMM) Document No. 02300 is part of the Interactive Electronic Technical Publication (IETP) set on the DVD, Document No. 02307. Regular revisions to the IETP set will be done to correct, change and add new information from Service Bulletins etc. The IETP revised information will be issued as a new replacement DVD. The DVD label will be identified with the latest Revision No. IETP. DVDs from the previous revision must then be destroyed. The opening statement on the DVD will show the IETP Revision No. The Revision Highlights will give a brief summary of the changes to the chapter topics and temporary revisions that have been included. Revised information is shown on a colored background by the IETP viewing software.

The Record of Service Bulletins will be updated at each revision to show all Service Bulletins that have been issued and their IETP inclusion date if applicable.

Temporary revisions are issued when the IETP must be revised between normal regular revisions. They are issued on yellow paper and must be kept in a folder which is to be made available to the maintenance personnel when working with the IETP DVD.

## 5 Warnings, Cautions and Notes

These are used to stress important items in the text. Warnings and Cautions come immediately before the text to which they refer. Notes are put after the text to which they refer. The uses are given below:

**WARNING:** Gives details of materials, processes, procedures or limits which must be followed to avoid injury to personnel.

**CAUTION:** Gives details of methods or procedures which must be followed to avoid damage to equipment.

**NOTE:** Used to give details of hints or tips which make the task easier for maintenance personnel.

## 6 Data Module Code

The Data Module Code (DMC) has 17 alpha numeric characters.

YY	Y	YY-YY-YY	YY	Y	YYY	Y	Y
MI	SDC	SNS	DC	DCV	IC	ICV	ILC
refer to Para 6.1	refer to Para 6.2	refer to Para 6.3	refer to Para 6.4	refer to Para 6.5	refer to Para 6.6	refer to Para 6.7	refer to Para 6.8

### 6.1 Model Identification

YY-Y-YY-YY-YY-YYY-YYYY-Y

The Model Identification (MI) is identified in the DMC by the highlighted characters.

The MI identifies the aircraft to which the data applies.

### 6.2 System Difference Code

YY-Y-YY-YY-YY-YYY-YYYY-Y

The System Difference Code (SDC) can change to show a model or system difference.

---

**6.3 Standard Numbering System**

YY-Y-YY-YY-YY-YYY-YYYY-Y

The Standard Numbering System (SNS) is used to codify the functional and/or physical breakdown of the aircraft. Refer to [Para 7](#) for more details.

**6.4 Disassembly Code**

YY-Y-YY-YY-YY-YYY-YYYY-Y

The Disassembly Code (DC) identifies the breakdown condition of an assembly to which maintenance information applies. Or in the IPC, it is the IPC figure number.

**6.5 Disassembly Code Variant**

YY-Y-YY-YY-YY-YYY-YYYY-Y

The Disassembly Code Variant (DCV) shows an alternative or a different design. The difference is not sufficient to change the SDC.

**6.6 Information Code**

YY-Y-YY-YY-YY-YYY-YYYY-Y

The Information Code (IC) displays the type of information in the DM. The information codes used in the manual are:

- 000 - Airworthiness Limitations
- 000 - Function, Data for Plans and Description
- 002 - List of Applicable Data Modules
- 003 - Change Highlights
- 004 - List of Revisions
- 005 - List of Abbreviations
- 006 - List of Temporary Revisions
- 009 - List of Effective Chapters
- 010 - General
- 012 - General Warnings and Cautions and Related Safety Data
- 017 - Record of Service Bulletins
- 018 - Introduction
- 030 - Technical Data
- 040 - Description and Operation
- 070 - Consumable Materials List
- 071 - Consumables
- 090 - Software Documentation
- 106 - List of Software
- 250 - Clean

- 256 - Polish and Apply Protection
- 259 - Apply Surface Protection
- 280 - Inspections
- 281 - Scheduled Inspections
- 282 - Unscheduled Inspections
- 307 - Parts List
- 310 - Examine
- 313 - Inspection/Check
- 330 - Prepare Test Equipment
- 331 - Connect the Computer
- 350 - Structure Test
- 352 - Magnetic Particle Inspection
- 353 - Eddy Current Inspection
- 361 - Allowable Wear/Dimension Check
- 420 - General Fault Isolation Procedures
- 520 - Removal
- 550 - Load Software
- 551 - Data Downloading
- 552 - Data Erasing
- 553 - Change the Settings
- 720 - Installation
- 901 - Maintenance Practices
- 902 - Servicing
- 903 - Adjustment/Test
- 904 - Repair
- 920 - Removal/Installation.

## **6.7 Information Code Variant**

YY-Y-YY-YY-YY-YYY-YYYY-Y

The Information Code Variant (ICV) gives different data that is applicable to the same subject.

## **6.8 Item Location Code**

YY-Y-YY-YY-YY-YYY-YYYY-Y

The Item Location Code (ILC) indicates where the maintenance task is usually carried out or applicable. These are identified as follows:

- A - On the aircraft
- B - On a primary assembly removed from the aircraft

- C - On the bench
- D - Applicable for codes A, B and C.

## 7 Standard Numbering System

YY-Y-YY-YY-YY-YYY-YYYY-Y

The Standard Numbering System (SNS) contains three groups of characters. The SNS allocates and provides definitions for the system, subsystem, sub-subsystem and the unit or assembly.

### System

YY-Y-YY-YY-YY-YYY-YYYY-Y

The system is identified by two numeric characters.

### Subsystem / Sub-subsystem

YY-Y-YY-YY-YY-YYY-YYYY-Y

The first element is the subsystem.

The second element is the sub-subsystem.

### Note

When the sub-subsystem is zero, for example YY-20-YY, the two digits “20” represent the subsystem as a whole.

### Unit or Assembly

YY-Y-YY-YY-YY-YYY-YYYY-Y

The unit or assembly is identified in the DMC by the highlighted characters.

The AMM has the following SNS breakdown to show the systems, subsystems and sub-subsystems:

Chapter System	Section Subsystem/Sub-subsystem	Title
00	Air Vehicle General 00	General
04	Airworthiness Limitations 00	Structural and Component Limitations
05	Scheduled/Unscheduled Maintenance 00 10 20 50	General Time Limits Scheduled Maintenance Check Lists Unscheduled Maintenance Checks
06	Dimensions and Areas 00 10 20	General Dimensions and Zones Access Provisions

---

<b>Chapter System</b>	<b>Section Subsystem/Sub-subsystem</b>	<b>Title</b>
07	Lifting and Shoring	
	00	General
	10	Jacking
	20	Shoring
08	Leveling and Weighing	
	00	General
	10	Weighing
	20	Leveling
09	Handling and Taxiing	
	00	General
	10	Handling
	20	Taxiing
10	Parking, Mooring and Storing	
	00	General
	10	Parking
	20	Mooring
	30	Return to Service
11	Placards and Markings	
	00	General
	20	Exterior Placards and Markings
	30	Interior Placards and Markings
12	Servicing	
	00	General
	10	Replenishing and Depleting
	20	Scheduled Servicing
20	Standard Practices	
	00	General
	20	Locking and Retaining Devices
	31	Consumable Materials List
	40	Corrosion
	50	Standard Practices
21	Air Conditioning	
	00	General
	20	Distribution
	30	Pressurization Control
	40	Heating

---

Chapter System	Section Subsystem/Sub-subsystem	Title
	41	Engine Bay Ducts
	43	Footwarmer
	50	Cooling
	60	Temperature Control
22	Auto Flight	
	00	General
	10	Autopilot
	20	Speed - Attitude Correction
23	Communications	
	00	General
	10	Speech Communication
	11	HF Communication
	12	VHF Communication
	16	Satcom System
	40	Passenger Advisory System
	50	Audio Integrating System
	51	Noise Cancelling Headsets
	60	Static Discharging
24	Electrical Power	
	00	General
	30	DC Generation
	40	External Power
	50	Load Distribution
	52	DC Load Distribution
	60	110 VAC Auxiliary Power
25	Equipment and Furnishings	
	00	General
	10	Flight Compartment
	20	Passenger Compartment
	21	Executive Interior
	22	Standard Interior
	23	Baggage Compartment
	50	Cargo Compartment
	60	Emergency Equipment
	63	ELT
	80	Insulation
	90	Cold Weather Preheater System
26	Fire Protection	
	00	General

Chapter System	Section Subsystem/Sub-subsystem	Title
	10	Detection
	20	Extinguishing
27	Flight Controls	
	00	General
	10	Aileron Control System
	15	Aileron Trim
	20	Rudder Control System
	25	Rudder Trim
	30	Elevator Control System
	40	Horizontal Stabilizer Trim
	50	Flaps
	51	Flap Drive System - Wing
	70	Gust Lock
28	Fuel	
	00	General
	10	Storage
	20	Distribution
	21	Balancing System
	40	Indicating
29	Hydraulic Power	
	00	General
	10	Main
	20	Emergency
30	Ice and Rain Protection	
	00	General
	10	Airfoil
	14	Wing De-icing Boots
	16	Horizontal Stabilizer De-icing Boots
	20	Air Intake
	30	Pitot and Static
	40	Windshield
	60	Propeller
31	Indicating and Recording Systems	
	00	Indicating and Recording Systems
	10	Overhead Control Panel
	20	Independent Instruments
	30	Recorders
	40	Central Computers
	41	Modular Avionics Unit

Chapter System	Section Subsystem/Sub-subsystem	Title
	42	MAU Modules
	43	MAU Cooling Fans
	50	Central Advisory and Warning System
	51	Aural Warning System
	52	Crew Alerting System
	53	Flight Alerting System
	60	Central Display System
32	Landing Gear	
	00	General
	10	Main Gear and Doors
	20	Nose Gear and Doors
	30	Extension and Retraction
	40	Wheels and Brakes
	50	Steering
	60	Position and Warning
33	Lights	
	00	General
	10	Flight Compartment
	20	Passenger Compartment
	30	Service Compartment
	40	Exterior
	41	Landing Lights
	42	Taxi Lights
	43	Navigation and Strobe Lights
	44	Recognition Lights
	45	Logo Lights
	46	Red Flashing Beacons
34	Navigation	
	00	General
	10	Flight Environment Data
	11	Pitot Static System
	12	OAT
	14	Altitude and Vertical Speed Indication
	15	Angle of Attack
	16	Airspeed Indication
	20	Attitude and Direction
	21	Standby Magnetic Compass
	25	ADAHRS
	26	Electronic Standby Instrument System
	30	Landing and Taxiing Aids
	32	Marker System



Chapter System	Section Subsystem/Sub-subsystem	Title
	40	Independent Position Determining
	41	Weather Radar
	42	Radar Altimeter System
	44	TCAS
	45	Enhanced Ground Proximity Warning System
	50	Dependent Position Determining
	51	VHF Navigation
	52	DME
	53	ADF
	54	ATC Transponder
	57	Global Navigation
35	Oxygen	
	00	General
	10	Crew
	20	Passenger
45	Central Maintenance System	
	00	General
	45	Central Maintenance System Interface
46	Systems Integration and Display	
	00	General
	21	Wireless Data Loading System (Connected Flight Deck)
	30	Display
52	Doors	
	00	General
	10	Passenger/Crew
	20	Emergency Exit
	30	Cargo
	40	Service
	70	Door Warning
53	Fuselage	
	00	General
	10	Forward Fuselage
	20	Center Fuselage
	30	Rear Fuselage
55	Stabilizers	
	00	General
	10	Horizontal Stabilizer

Chapter System	Section Subsystem/Sub-subsystem	Title
	20	Elevators
	30	Vertical Stabilizer
	40	Rudder
56	Windows	
	00	General
	11	Windshield
	14	Direct Vision
	20	Fuselage Compartment
57	Wings	
	00	General
	20	Wing Structure
	33	Wing Tip
	50	Flaps
	60	Ailerons
61	Propellers	
	00	General
	10	Propeller Assembly
	20	Controlling
71	Power Plant	
	00	General
	10	Cowling
72	Engine	
	00	General
	10	Power Section
73	Engine Fuel and Control	
	00	General
	20	Controlling
	30	Indicating
74	Ignition	
	00	General
	10	Electrical Power Supply
	20	Distribution
76	Engine Controls	
	00	General
	10	Power Control
	20	Manual Override

Chapter System	Section Subsystem/Sub-subsystem	Title
77	Engine Indicating 00 40	General Integrated Engine Instrument System
78	Exhaust 00 10	General Exhaust Stubs
79	Oil 00 20 30	General Distribution Indicating
80	Starting 00 10	General Cranking

## 8 Punctuation in Units of Weight and Measurement

In this manual the decimal fraction is shown by a point in the Imperial/US units of weight and measurement, and by a comma in metric units.

## 9 Consumable Materials

Consumable materials used on the aircraft during maintenance procedures are listed in AMM [12-B-20-31-00-00A-070A-A](#), Consumable Materials List. The list gives details of the material and gives a material number which is used throughout the manual.

## 10 List of Abbreviations

Refer to AMM [12-B-00-00-00-00A-005A-A](#) for the list of abbreviations.

## 11 Publication Revision Request

If operators have suggestions for improvements to the content of the manual or errors are found, please submit the proposed changes (use this form, AMM 12-B-00-00-00-00A-030A-A.PDF) by email to [publications@pilatus-aircraft.com](mailto:publications@pilatus-aircraft.com)

Intentionally left blank

<b>PUBLICATION REVISION REQUEST</b>			
Manual			
DM		Pages	
Title			
<b>REASON FOR CHANGE</b>			
<b>PROPOSED CHANGES</b>			
Company		Name/Date	
<b>TECHNICAL PUBLICATIONS REMARKS</b>			
Name		Signature/Date	

Please send an Email with your comments/changes directly to:

[Publications@pilatus-aircraft.com](mailto:Publications@pilatus-aircraft.com)

**INTENTIONALLY BLANK**

---

**GENERAL**

***LIST OF SOFTWARE***

**Table of Contents**

Page

GENERAL - LIST OF SOFTWARE..... 1

**Index of Tables**

Page

1 References..... 1

***References***

*Table 1 References*

---

<b>Data module/Technical publication</b>	<b>Title</b>
	<u>12-B-00-00-00-10A-030A-A.PDF</u>

---

***Description***

This DM gives the Primus APEX® software part numbers and associated hardware compatibility tables, refer to AMM 12-B-00-00-00-10A-030A-A.PDF.

Intentionally left blank







Component LRU	Description	Part Number	Supplier Media Part Number	Compatibility											Config. Validation Required
				7	8	8.5	8.6	8.7	8.8	10	10.9	11	11.1		
<b>Primus Apex Databases</b>															
	Purple Disk <sup>4</sup>	888-309.7555 or 303.328.6948	WORLD-xxx or EURAME-xxx or AUSASP-xxx or AMRATL-xxx (depending on subscription); includes Inev-LEM FMS Database, Transportation & Cities 12-2008 (AGM, CHH Database)												
	Green Disk	888-309.7555 or 303.328.6948	996-0146-xxx												
	Blue Disk	888-309.7555 or 303.328.6948	CHART DISC xxx												
	Checklist Database	N/A	ApexPC12 or as applicable												
	Apex FMS Performance Database	MM60000461.002 (or -001)	APEX-PDB60000461.002.06 (or -001.06)												
<b>ADAHRS</b>															
KSG 7200	Dual Channel ADAHRS & ADAHRS Certification File SW 0.301	065-00188-5103 (SW/MOD_03/01) & 222-30197-0006 (Certification File ID: 577, Version 4)	N/A & 731-30197-0006												
KSG 7200	Dual Channel ADAHRS & ADAHRS Certification File SW 0.301	065-00188-5103 (SW/MOD_03/01 HW/MOD_03) & 222-30197-0006 (Certification File ID: 577, Version 4)	N/A & 731-30197-0006												
KSG 7200	Dual Channel ADAHRS & ADAHRS Certification File SW 0.301	065-00188-5103 (SW/MOD_03/01 HW/MOD_04_05) & 222-30197-0006 (Certification File ID: 577, Version 4)	N/A & 731-30197-0006												
KSG 7200	Dual Channel ADAHRS & ADAHRS Certification File SW 0.401	065-00188-5104 (SW/MOD_04/01 HW/MOD_05) & 222-30197-0010 (Certification File ID: 581, Version 5)	N/A & 731-30197-0010												
<b>GNSS Receiver</b>															
KGS 200 SRAS	GPS Receiver (SRAS)	066-01201-0104 (SW/MOD_04/01)	N/A												
KGS 200 SRAS	GPS Receiver (SRAS)	066-01201-0105 (SW/MOD_05/01 HW/MOD_01)	N/A												
<b>Flight Guidance Panel</b>															
KMC 9200	Flight Guidance Panel	074-01597-0201 (SW/MOD_01/01)	N/A												
KMC 9200	Flight Guidance Panel with VNAV button	074-01597-0401 (SW/MOD_01/02 HW/MOD_04/01)	N/A												
<b>Mode S Transponder</b>															
KXP 2290A	Mode S Transponder	066-01198-0101 (SW/MOD_01/01)	N/A												
KXP 2290A	Mode S Transponder with ADS-B Out	066-01198-0102 (SW/MOD_02/01)	N/A												
KXP 2290A	Mode S Transponder with ADS-B Out	066-01198-0102 (SW/MOD_02/02)	N/A												
<b>Power Supply Module</b>															
PWR 200	Power Supply Module	70244404.1901	N/A												
PWR 200	Power Supply Module	70244404.1901 (HW/MOD_6)	N/A												
PWR 210	Power Supply Module	7038248-1901	N/A												
PWR 210	Power Supply Module	7038248-1901 (HW/MOD A or HW/MOD B)	N/A												
PWR 210	Power Supply Module	7038248-1901 (HW/MOD A, B, C)	N/A												
<b>NIC Module<sup>7</sup></b>															
NIC-110	NIC Module	7028542-1901 (HW/MOD A, B, J)	N/A												
NIC-110	NIC Module	7038231-1801 (HW/MOD B, D, E)	N/A												
<b>AGM Module<sup>7</sup></b>															
AGM200	AGM Module	7036410-1902 (HW/MOD B, C)	N/A												
AGM200	AGM Module	7036410-1902 (HW/MOD B, C, D)	N/A												
AGM200	AGM Module	7036410-1902 (HW/MOD B, C, D, E)	N/A												
AGM200	AGM Module	7036410-1904 (HW/MOD B, C, D, E, F)	N/A												
AGM200	AGM Module	7036410-1904 (HW/MOD B, C, D, E)	N/A												
AGM200	AGM Module	7036410-1904 (HW/MOD B, C, D, E, F)	N/A												
<b>CSIO Module<sup>7</sup></b>															
CIO-AP2	CSIO Module	7036333-1902	N/A												
CIO-AP2	CSIO Module	7036333-1906	N/A												
<b>GIO Module<sup>7</sup></b>															
GIO-200	GIO Module	7026365-1901	N/A												
GIO-200	GIO Module	7038622-1901	N/A												
<b>AOP Module<sup>7</sup></b>															
AOP-H01	AOP Module	7028452-1902 (HW/MOD A, B, C)	N/A												
<b>Cursor Control Device</b>															
CCD Assembly	CCD Assembly with Display Select	N/A	N/A												
<b>Video Input Box</b>															
VIB2412	RIB Switch and Interface Module	VHB2412-200	N/A												
<b>Lightweight Data Recorder (LDR)</b>															
LDR-FRED File	Lightweight Data Recorder Definition File for Apex Build 7	N/A	N/A												
LDR-FRED File	Lightweight Data Recorder Definition File for Apex Build 8 to Build 8.8	N/A	N/A												
LDR-FRED File	Lightweight Data Recorder Definition File for Apex Build 10 and Up	N/A	N/A												
LDR Data Analysis Tool	Data Analysis Software for Apex Build 7 and Up	N/A	N/A												
Data Analysis Disc	Data Analysis Software for Apex Build 7 and Up	N/A	N/A												

<sup>1</sup> Note: PC12\_LDI\_6\_2\_0 is superseded by PC12\_LDI\_6\_2\_3 / 545.45.12.042 is superseded by 645.45.12.043  
<sup>2</sup> Note: The 11x part numbers are also fully compatible with Windows 7 (32- and 64-bit)  
<sup>3</sup> Note: Only compatible if Coupled VNAV Option is not installed.  
<sup>4</sup> Note: Operators are requested to contact INDS after their aircraft is updated with a new Build to change their subscription to the appropriate database.  
<sup>5</sup> Note: Only compatible if ADS-B Out Option is not installed.  
<sup>7</sup> Note: Table below shows the valid MAU Hardware/System combinations.

Valid MAU Hardware/System combinations LRU	Description	Part Number		Supplier Media-Partnumber	Compatibility				
		Supplier Partnumber	Pilatus		Valid MAU config.				
		1	2		3				
<b>Power Supply Module</b>									
PWR200	Power Supply Module	70244401901		N/A	985.99.12.143	X	X	X	X
PWR200	Power Supply Module	70244401901 (HW/MOD_G)		N/A	985.99.12.233	X	X	X	X
PWR210	Power Supply Module	70382481901		N/A	985.99.12.250	X	X	X	X
PWR210	Power Supply Module	70382481901 (HW/MOD_A or HW/MOD_B)		N/A	985.99.12.285	X	X	X	X
PWR210	Power Supply Module	70382481901 (HW/MOD_A, B, C)		N/A	985.99.12.346	X	X	X	X
<b>NIC Module</b>									
NIC100	NIC Module	70265421801 (HW/MOD_A, B, J)		N/A	985.99.12.148	X	X	X	X
NIC110	NIC Module	70382231801 (HW/MOD_B, D, E)		N/A	985.99.12.231	X	X	X	X
<b>AGM Module</b>									
AGM200	AGM Module	70384101902 (HW/MOD_B, C)		N/A	985.99.12.157	X	X	X	X
AGM200	AGM Module	70384101902 (HW/MOD_E, C, D)		N/A	985.99.12.280	X	X	X	X
AGM200	AGM Module	70384101902 (HW/MOD_B, C, D, E)		N/A	985.99.12.281	X	X	X	X
AGM200	AGM Module	70384101902 (HW/MOD_B, C, D, E, F)		N/A	985.99.12.052	X	X	X	X
AGM200	AGM Module	70384101904 (HW/MOD_B, C)		N/A	985.99.12.292	X	X	X	X
AGM200	AGM Module	70384101904 (HW/MOD_E, C, D)		N/A	985.99.12.281	X	X	X	X
AGM200	AGM Module	70384101904 (HW/MOD_B, C, D, E)		N/A	985.99.12.282	X	X	X	X
AGM200	AGM Module	70384101904 (HW/MOD_B, C, D, E, F)		N/A	985.99.12.051	X	X	X	X
<b>CSIO Module</b>									
CIOAF2	CSIO Module	70363331902		N/A	985.99.12.151	X	X	X	X
CIOAF2	CSIO Module	70363331906		N/A	985.99.12.251	X	X	X	X
<b>GIO Module</b>									
GIO200	GIO Module	70253851901		N/A	985.99.12.146	X	X	X	X
GIO200	GIO Module	70386221901		N/A	985.99.12.252	X	X	X	X
<b>AIOF Module</b>									
AIOFD1	AIOF Module	70284321902 (HW/MOD_A, B, C)		N/A	985.99.12.190	X	X	X	X

Comment: There are three valid predefined MAU configurations. For example MAU configuration 3 is allowed to be installed with a Power Supply Module 985.99.12.250, NIC Module 985.99.12.281, CSIO Module 985.99.12.281, AGM Module 985.99.12.231, GIO Module 985.99.12.252 and AIOF Module 985.99.12.190.

Intentionally Left Blank

## SAFETY AND PROTECTIVE DEVICES

### GENERAL WARNINGS AND CAUTIONS AND RELATED SAFETY DATA

<b>Table of Contents</b>	Page
SAFETY AND PROTECTIVE DEVICES - GENERAL WARNINGS AND CAUTIONS AND RELATED SAFETY DATA.....	1

<b>Index of Tables</b>	Page
1      References.....	1
2      Required Conditions.....	1
3      Support Equipment.....	2
4      Supplies.....	2
5      Spares.....	2
6      Safety Data - RF Radiation Minimum Safe Distance.....	2
7      Required Conditions.....	5

<b>Index of Figures</b>	Page
1      Typical Antenna Locations (MSN 1001 - 1575).....	3
2      Typical Antenna Locations (MSN 1576 and up).....	4

### **References**

*Table 1 References*

Data module/Technical publication	Title
<u>12-B-23-00-00-00A-012A-A</u>	<u>GENERAL WARNINGS AND CAUTIONS AND RELATED SAFETY DATA</u>
<u>12-B-25-00-00-00A-012A-A</u>	<u>EQUIPMENT AND FURNISHINGS - GENERAL WARNINGS AND CAUTIONS AND RELATED SAFETY DATA</u>
<u>12-B-34-00-00-00A-012A-A</u>	<u>NAVIGATION - GENERAL WARNINGS AND CAUTIONS AND RELATED SAFETY DATA</u>

### **Required Conditions**

*Table 2 Required Conditions*

Action / Condition	Data module/Technical publication
None	

## Support Equipment

*Table 3 Support Equipment*

Name	Identifications/References	Qty	Reference	Remark
None				

## Supplies

*Table 4 Supplies*

Name	Identifications/References	Qty	Reference	Remark
None				

## Spares

*Table 5 Spares*

Name	Identifications/References	Qty	Reference	Remark
None				

## Safety Conditions

None

### Procedure

1 **WARNING**

**OBEY THE INSTRUCTIONS FOR THE MINIMUM SAFE DISTANCE FROM AN ANTENNA WHEN YOU DO WORK ON THE AIRCRAFT. RF RADIATION IS DANGEROUS. IT CAN CAUSE:**

- **RF BURNS AND PERMANENT DAMAGE TO PERSONNEL.**
- **ACCIDENTAL OPERATION OF ELECTRO-EXPLOSIVE DEVICES.**
- **IGNITION OF FLAMMABLE FUMES FROM FUEL, GASES OR LIQUIDS.**


Refer to the safety related data in the applicable chapter for the "minimum safe distance" from an antenna.

#### Note

The minimum safe distance from antenna data is valid for personnel outside the aircraft. Personnel inside the aircraft are protected from RF radiation by the Faraday characteristics of the airframe.


*Table 6 Safety Data - RF Radiation Minimum Safe Distance*

Chapter	Refer to Data Module
23 - Communications	<a href="#">12-B-23-00-00-00A-012A-A</a>
25 - Equipment and Furnishings	<a href="#">12-B-25-00-00-00A-012A-A</a>
34 - Navigation	<a href="#">12-B-34-00-00-00A-012A-A</a>

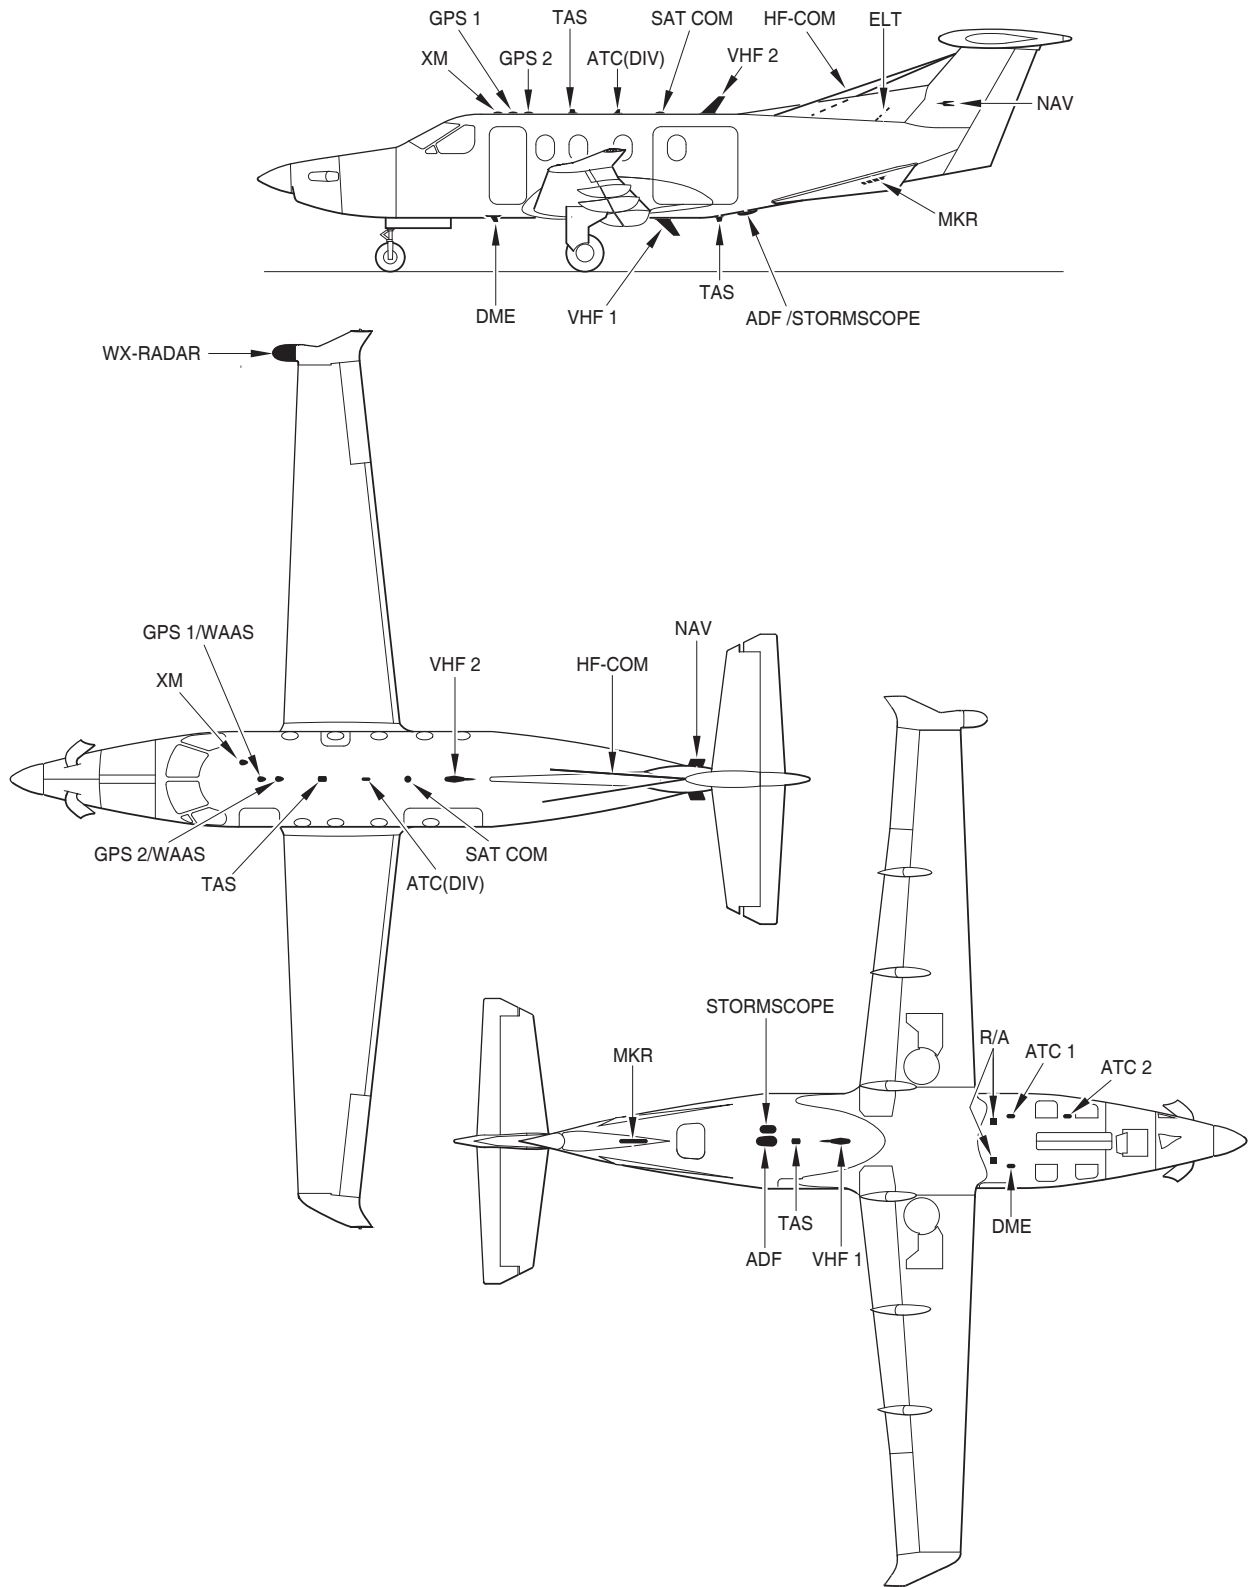

12-B-000030-A-S4080-79238-A-01-1

Figure 1 Typical Antenna Locations (MSN 1001 - 1575)

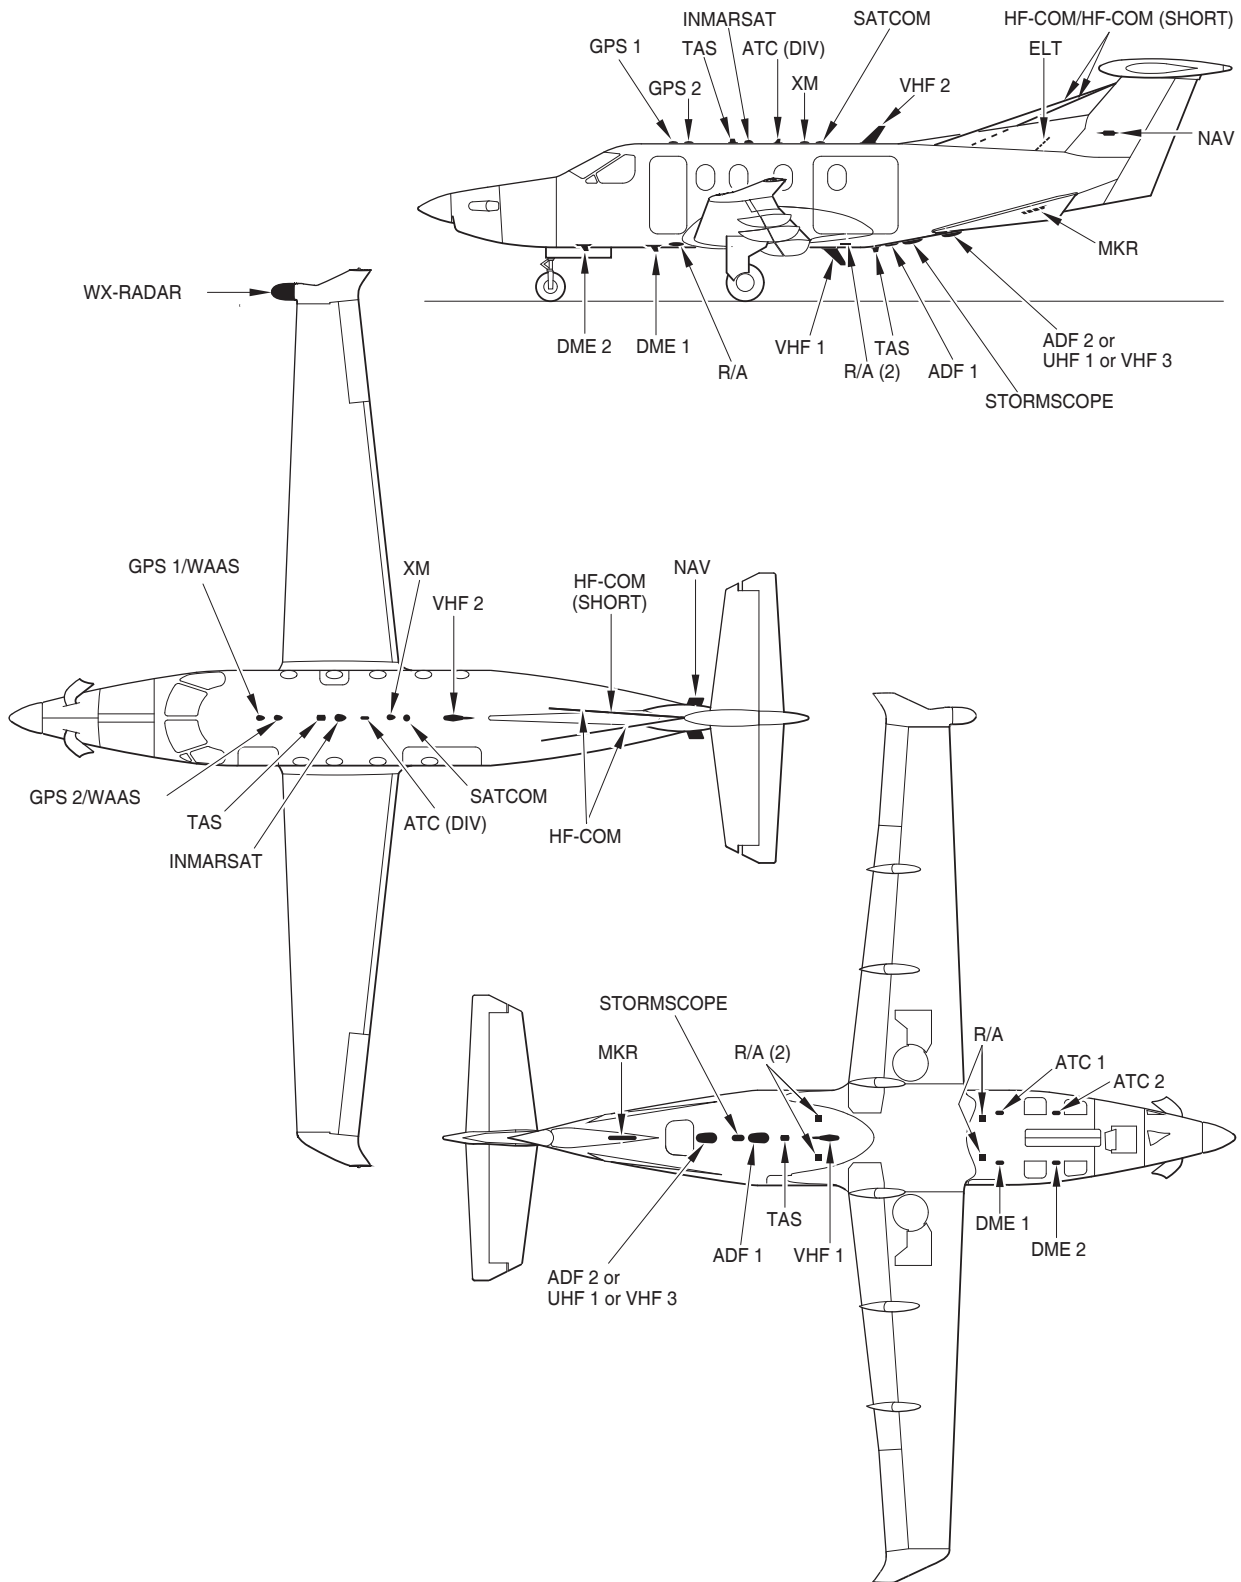

12-B-000030-A-S4080-79283-A-01-1

Figure 2 Typical Antenna Locations (MSN 1576 and up)



---

***Requirements after job completion***

**Required Conditions**

*Table 7 Required Conditions*

---

<b>Action / Condition</b>	<b>Data module/Technical publication</b>
None	

---

Intentionally left blank